

**TN64IA0FXB**

**EN** User Manual | **Hob**



**Welcome to AEG! Thank you for choosing our appliance.**



Get usage advice, brochures, troubleshooting, service and repair information:  
[www.aeg.com/support](http://www.aeg.com/support)

Subject to change without notice.

**CONTENTS**

|                                 |    |
|---------------------------------|----|
| 1. SAFETY INFORMATION.....      | 2  |
| 2. SAFETY INSTRUCTIONS.....     | 4  |
| 3. INSTALLATION.....            | 6  |
| 4. PRODUCT DESCRIPTION.....     | 9  |
| 5. BEFORE FIRST USE.....        | 10 |
| 6. DAILY USE.....               | 11 |
| 7. HINTS AND TIPS.....          | 15 |
| 8. CARE AND CLEANING.....       | 17 |
| 9. TROUBLESHOOTING.....         | 18 |
| 10. TECHNICAL DATA.....         | 20 |
| 11. ENERGY EFFICIENCY.....      | 20 |
| 12. ENVIRONMENTAL CONCERNS..... | 21 |

**1. ⚠ SAFETY INFORMATION**

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

**1.1 Children and vulnerable people safety**

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2 General Safety**

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Smoke is an indication of overheating. Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.

- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.
- Do not use water spray and steam to clean the appliance.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized Service or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation



#### **WARNING!**

Only a qualified person must install this appliance.



#### **WARNING!**

Risk of injury or damage to the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Seal the cut surfaces of the cabinet with a sealant to prevent moisture from causing swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance next to a door or under a window. This prevents hot cookware from falling from the appliance when the door or the window is opened.
- Each appliance has cooling fans on the bottom.
- If the appliance is installed above a drawer:

- Do not store any small pieces or sheets of paper that could be pulled in, as they can damage the cooling fans or impair the cooling system.
- Keep a distance of minimum 2 cm between the bottom of the appliance and parts stored in the drawer.
- Remove any separator panels installed in the cabinet below the appliance.

## 2.2 Electrical Connection

### **WARNING!**

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure that a shock protection is installed.
- Use the strain relief clamp on the cable.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to a socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service Centre or an electrician to change a damaged mains cable.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.

- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.

## 2.3 Use

### **WARNING!**

Risk of injury, burns and electric shock.

- Do not change the specification of this appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Set the cooking zone to “off” after each use.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- If the surface of the appliance is cracked, disconnect immediately the appliance from the power supply. This to prevent an electrical shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.
- When you place food into hot oil, it may splash.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.

**⚠ WARNING!**

Risk of fire and explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

**⚠ WARNING!**

Risk of damage to the appliance.

- Do not keep hot cookware on the control panel.
- Do not put a hot pan cover on the glass surface of the hob.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Cookware made of cast iron or with a damaged bottom can cause scratches on the glass / glass ceramic. Always lift these objects up when you have to move them on the cooking surface.

## 2.4 Care and cleaning

- Clean the appliance regularly to prevent the deterioration of the surface material.

- Switch off the appliance and let it cool down before cleaning.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects, unless otherwise specified.

## 2.5 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

## 2.6 Disposal

**⚠ WARNING!**

Risk of injury or suffocation.

- Contact your local authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

# 3. INSTALLATION

**⚠ WARNING!**

Refer to Safety chapters.

## 3.1 Before the installation

Before you install the hob, write down the information below from the rating plate. The rating plate is on the bottom of the hob.

Serial number .....

## 3.2 Built-in hobs

Only use the built-in hobs after you assemble the hob into correct built-in units and work surfaces that align to the standards.

## 3.3 Connection cable

- The hob is supplied with a connection cable.

- To replace the damaged mains cable, use the cable type: H05V2V2-F which withstands a temperature of 90 °C or higher. A single wire must have a minimal cross section in accordance with the table below. Speak to your local Service Centre. The connection cable may only be replaced by a qualified electrician.

**⚠ WARNING!**

All electrical connections must be made by a qualified electrician.

**⚠ CAUTION!**

Connections via contact plugs are forbidden.

**⚠ CAUTION!**

Do not drill or solder the wire ends. It is forbidden.

**⚠ CAUTION!**


Do not connect the cable without cable end sleeve.

**One-phase connection**

1. Remove the cable end sleeve from black, brown and blue wires.
2. Remove a part of the insulation of the brown, black and blue cable ends.
3. Connect the ends of black and brown cables.
4. Apply a new wire end sleeve on the shared wire's end (special tool required).
5. Connect the ends of two blue cables.
6. Apply a new wire end sleeve on the shared wire's end (special tool required).

**Two-phase connection**

1. Remove the cable end sleeve from blue wires.
2. Remove a part of the insulation of the blue cable ends.
3. Connect the ends of two blue cables.
4. Apply a new end wire sleeve on the shared wire's end (special tool required).

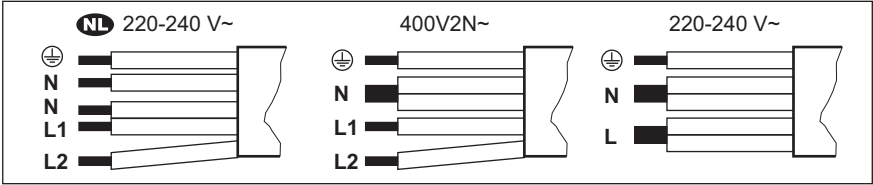


| NL 220 - 240 V~ |                | Two-phase connection: 400 V2N~ |                | One-phase connection: 220 - 240 V~ |                 |
|-----------------|----------------|--------------------------------|----------------|------------------------------------|-----------------|
| 5x1,5 mm²       |                | 5x1,5 mm² or 4x2,5 mm²         |                | 5x1,5 mm² or 3x4 mm²               |                 |
|                 | Green - yellow |                                | Green - yellow |                                    | Green - yellow  |
| N               | Blue and blue  | N                              | Blue and blue  | N                                  | Blue and blue   |
| L1              | Black          | L1                             | Black          | L                                  | Black and brown |
| L2              | Brown          | L2                             | Brown          |                                    |                 |


**3.4 Assembly**

Handle the appliance carefully during installation to avoid bending or damaging the frame.

If you install the hob under a hood, please see the installation instructions of the hood for the minimum distance between the appliances.

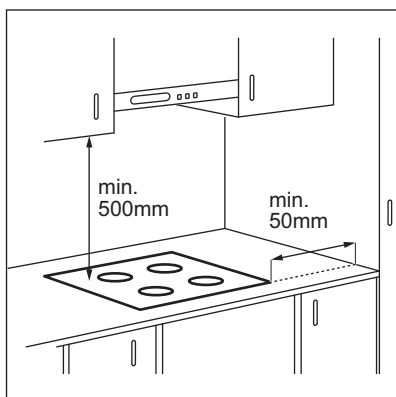

If the appliance is installed above a drawer, the hob ventilation can warm up the items stored in the drawer during the cooking process.

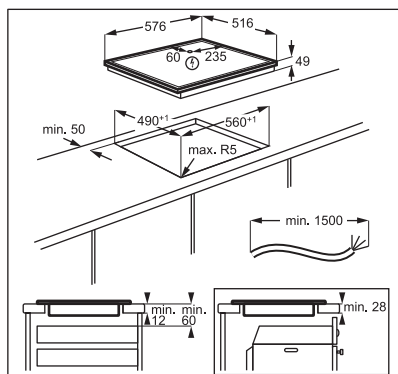

Find the video tutorial "How to install your AEG Induction Hob - Worktop installation" by typing out the full name indicated in the graphic below.



[www.youtube.com/electrolux](http://www.youtube.com/electrolux)  
[www.youtube.com/aeg](http://www.youtube.com/aeg)


How to install your AEG  
 Induction Hob - Worktop installation






## 4. PRODUCT DESCRIPTION

### 4.1 Cooking surface layout

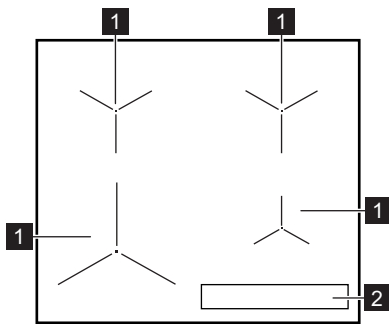

- 1 Induction cooking zone
- 2 Control panel

### 4.2 Control panel layout

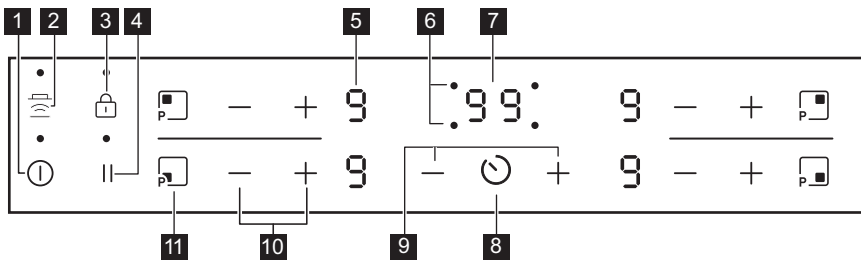

Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

| Sensor field | Function                          | Comment                                                     |
|--------------|-----------------------------------|-------------------------------------------------------------|
| 1 ①          | On / Off                          | To activate and deactivate the hob.                         |
| 2            | Hob²Hood                          | To activate and deactivate the manual mode of the function. |
| 3            | Lock / Child Safety Device        | To lock / unlock the control panel.                         |
| 4            | Pause                             | To activate and deactivate the function.                    |
| 5 -          | Heat setting display              | To show the heat setting.                                   |
| 6 -          | Timer indicators of cooking zones | To show for which zone you set the time.                    |
| 7 -          | Timer display                     | To show the time in minutes.                                |

| Sensor field                                                                         | Function   | Comment                           |
|--------------------------------------------------------------------------------------|------------|-----------------------------------|
| 8   | -          | To select the cooking zone.       |
| 9   | -          | To increase or decrease the time. |
| 10  | -          | To set a heat setting.            |
| 11  | PowerBoost | To activate the function.         |

## 4.3 Heat setting displays

| Display                                                                           | Description                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|   | The cooking zone is deactivated.                                                                 |
|   | The cooking zone operates.<br>The dot means a change by half of a heating level.                 |
|   | Pause operates.                                                                                  |
|   | Automatic Heat Up operates.                                                                      |
|   | PowerBoost operates.                                                                             |
|   | There is a malfunction.                                                                          |
|   | OptiHeat Control (3 step Residual heat indicator): continue cooking / keep warm / residual heat. |
|   | Lock / Child Safety Device operates.                                                             |
|   | Incorrect or too small cookware or no cookware on the cooking zone.                              |
|  | Automatic Switch Off operates.                                                                   |

## 5. BEFORE FIRST USE



### WARNING!

Refer to Safety chapters.

### 5.1 Power limitation

Power limitation defines how much power is used by the hob in total, within the limits of the house installation fuses.

The hob is set to its highest possible power level by default.

**To decrease or increase the power level:**

1. Deactivate the hob.
2. Press and hold  for 3 seconds. The display comes on and goes off.
3. Press and hold  for 3 seconds.  or  appears.
4. Press . P72 appears.
5. Press  of the timer to set the power level.

### Power levels

Refer to "Technical data" chapter.

### CAUTION!

Make sure that the selected power fits the house installation fuses.

- P72 — 7200 W
- P15 — 1500 W
- P20 — 2000 W

- P25 — 2500 W
- P30 — 3000 W
- P35 — 3500 W
- P40 — 4000 W
- P45 — 4500 W
- P50 — 5000 W
- P60 — 6000 W

## 6. DAILY USE

### WARNING!

Refer to Safety chapters.

### 6.1 Activating and deactivating

Touch  for 1 second to activate or deactivate the hob.

### 6.2 Automatic Switch Off

**The function deactivates the hob automatically if:**

- all cooking zones are deactivated,
- you do not set the heat setting after you activate the hob,
- you spill something or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). An acoustic signal sounds and the hob deactivates. Remove the object or clean the control panel.
- the hob gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you use incorrect cookware. The symbol  comes on and the cooking zone deactivates automatically after 2 minutes.
- you do not deactivate a cooking zone or change the heat setting. After some time  comes on and the hob deactivates.

**The relation between the heat setting and the time after which the hob deactivates:**

| Heat setting                                                                               | The hob deactivates after |
|--------------------------------------------------------------------------------------------|---------------------------|
|  , 1 - 2 | 6 hours                   |
| 3 - 4                                                                                      | 5 hours                   |

| Heat setting | The hob deactivates after |
|--------------|---------------------------|
| 5            | 4 hours                   |
| 6 - 9        | 1.5 hour                  |

### 6.3 Using the cooking zones

Place the cookware in the centre of the selected zone. Induction cooking zones adapt to the dimension of the bottom of the cookware automatically.



For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification"). Make sure that the cookware is suitable for induction hobs. For more information on cookware types refer to "Hints and tips".

### 6.4 The heat setting

Touch  to increase the heat setting. Touch  to decrease the heat setting. Touch  and  at the same time to deactivate the cooking zone.

### 6.5 OptiHeat Control (3 step Residual heat indicator)



#### WARNING!

 /  /  As long as the indicator is visible, there is a risk of burns from residual heat.

The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.

The indicators appear when a cooking zone is hot. They show the level of the residual heat for the cooking zones you are currently using:

-  - continue cooking,
-  - keep warm,
-  - residual heat.

The indicator may also appear:

- for the neighbouring cooking zones even if you are not using them,
- when hot cookware is placed on cold cooking zone,
- when the hob is deactivated but the cooking zone is still hot.

The indicator disappears when the cooking zone has cooled down.

## 6.6 Automatic Heat Up

If you activate this function you can get a necessary heat setting in a shorter time. The function sets the highest heat setting for some time and then decreases to the correct heat setting.



To activate the function the cooking zone must be cold.

### To activate the function for a cooking

**zone:** touch  ( comes on). Immediately touch  ( comes on). Immediately touch  until the correct heat setting comes on. After 3 seconds  comes on.

**To deactivate the function:** touch .

## 6.7 PowerBoost

This function makes more power available to the induction cooking zones. The function can be activated for the induction cooking zone only for a limited period of time. After this time

the induction cooking zone automatically sets back to the highest heat setting.



Refer to "Technical data" chapter.

### To activate the function for a cooking

**zone:** touch .  comes on.

**To deactivate the function:** touch  or .

## 6.8 Timer

### • Count Down Timer

You can use this function to set the length of a single cooking session.

First set the heat setting for the cooking zone, then set the function.

**To set the cooking zone:** touch  repeatedly until the indicator of a cooking zone appears.

### To activate the function or change the

**time:** touch  or  of the timer to set the time (00 - 99 minutes). When the indicator of the cooking zone starts to flash, the time counts down.

**To see the remaining time:** touch  to set the cooking zone. The indicator of the cooking zone starts to flash. The display shows the remaining time.

**To deactivate the function:** touch  to set the cooking zone and then touch . The remaining time counts down to **00**. The indicator of the cooking zone disappears.



When the countdown ends, an acoustic signal sounds and **00** flashes. The cooking zone deactivates.

**To stop the sound:** touch .

### • Minute Minder

You can use this function when the hob is activated and the cooking zones do not operate. The heat setting display shows .

**To activate the function:** touch  and then touch  or  of the timer to set the time.

When the time finishes, an acoustic signal sounds and **00** flashes.

**To stop the sound:** touch .

**To deactivate the function:** touch  and then touch . The remaining time counts down to **00**.



The function has no effect on the operation of the cooking zones.

## 6.9 Pause

This function sets all operating cooking zones to the lowest heat setting.

When the function operates, all other symbols on the control panels are locked.

The function does not stop the timer functions.

**1. To activate the function:** press .

 comes on. The heat setting is lowered to 1.

**2. To deactivate the function:** press .

The previous heat setting appears.

## 6.10 Lock

You can lock the control panel while cooking zones operate. It prevents an accidental change of the heat setting.

**Set the heat setting first.**

**To activate the function:** touch .  comes on for 4 seconds. The Timer stays on.

**To deactivate the function:** touch . The previous heat setting comes on.



When you deactivate the hob, you also deactivate this function.

## 6.11 Child Safety Device

This function prevents an accidental operation of the hob.

**To activate the function:** activate the hob with . Do not set any heat setting. Touch

 for 4 seconds.  comes on. Deactivate the hob with .

**To deactivate the function:** activate the hob with . Do not set any heat setting. Touch  for 4 seconds.  comes on. Deactivate the hob with .

**To override the function for only one**

**cooking time:** activate the hob with .  comes on. Touch  for 4 seconds. **Set the heat setting in 10 seconds.** You can operate the hob. When you deactivate the hob with  the function operates again.

## 6.12 OffSound Control (Deactivation and activation of the sounds)

Deactivate the hob. Touch  for 3 seconds. The display comes on and goes out. Touch  for 3 seconds.  or  comes on. Touch  of the Timer to choose one of the following:

-  - the sounds are off
-  - the sounds are on

To confirm your selection wait until the hob deactivates automatically.

When the function is set to  you can hear the sounds only when:

- you touch 
- Minute Minder comes down
- Count Down Timer comes down
- you put something on the control panel.

## 6.13 Power management


If multiple zones are active and the consumed power exceeds the limitation of the power supply, this function divides the available power between all cooking zones (connected to the same phase). The hob controls heat settings to protect the fuses of the house installation.

- Cooking zones are grouped according to the location and number of the phases in the hob. Each phase has a maximum electricity loading (3700 W). If the hob reaches the limit of maximum available power within one phase, the power of the

cooking zones will be automatically reduced.

- The heat setting of the cooking zone selected last is always prioritised. The remaining power will be divided between the previously activated cooking zones in reverse order of selection.
- The heat setting display of the reduced zones changes between the initially selected heat setting and the reduced heat setting.
- Wait until the display stops flashing or reduce the heat setting of the cooking zone selected last. The cooking zones will continue operating with the reduced heat setting. Change the heat settings of the cooking zones manually, if necessary.

Refer to the illustration for possible combinations in which power can be distributed among the cooking zones.

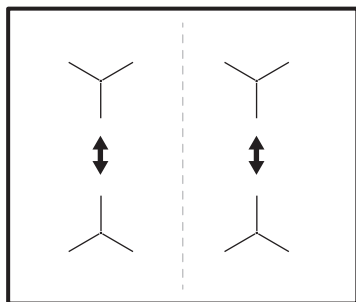

## 6.14 Hob<sup>2</sup>Hood

It is an advanced automatic function which connects the hob to a special hood. Both the hob and the hood have an infrared signal communicator. Speed of the fan is defined automatically on basis of mode setting and temperature of the hottest cookware on the hob. You can also operate the fan from the hob manually.



For most of the hoods the remote system is originally deactivated. Activate it before you use the function. For more information refer to hood user manual.

### Operating the function automatically

To operate the function automatically set the automatic mode to H1 – H6. The hob is

originally set to H5. The hood reacts whenever you operate the hob. The hob recognizes temperature of the cookware automatically and adjusts the speed of the fan.

### Automatic modes

|                  | Automat-<br>ic light | Boiling <sup>1)</sup> | Frying <sup>2)</sup> |
|------------------|----------------------|-----------------------|----------------------|
| H0               | Off                  | Off                   | Off                  |
| H1               | On                   | Off                   | Off                  |
| H2 <sup>3)</sup> | On                   | Fan speed<br>1        | Fan speed<br>1       |
| H3               | On                   | Off                   | Fan speed<br>1       |
| H4               | On                   | Fan speed<br>1        | Fan speed<br>1       |
| H5               | On                   | Fan speed<br>1        | Fan speed<br>2       |
| H6               | On                   | Fan speed<br>2        | Fan speed<br>3       |

<sup>1)</sup> The hob detects the boiling process and activates fan speed in accordance with automatic mode.

<sup>2)</sup> The hob detects the frying process and activates fan speed in accordance with automatic mode.

<sup>3)</sup> This mode activates the fan and the light and does not rely on the temperature.

### Changing the automatic mode

1. Deactivate the hob.
2. Press  for 3 seconds. The display comes on and goes off.
3. Press  for 3 seconds.
4. Press  a few times until  comes on.
5. Press  of the timer to select an automatic mode.



To operate the hood directly on the hood panel deactivate the automatic mode of the function.



When you finish cooking and deactivate the hob, the hood fan may still operate for a certain period of time. After that time the system deactivates the fan automatically and prevents you from accidental activation of the fan for the next 30 seconds.

### Operating the fan speed manually

You can also operate the function manually.

To do that press when the hob is active. This deactivates automatic operation of the function and allows you to change the fan speed manually. When you press you raise the fan speed by one. When you reach an intensive level and press again you will

set fan speed to 0 which deactivates the hood fan. To start the fan again with fan speed 1 press .



To activate automatic operation of the function, deactivate the hob and activate it again.

### Activating the light

You can set the hob to activate the light automatically whenever you activate the hob. To do so set the automatic mode to H1 – H6.



The light on the hood deactivates 2 minutes after deactivating the hob.

## 7. HINTS AND TIPS



### WARNING!

Refer to Safety chapters.

### 7.1 Cookware



For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Use the induction cooking zones with suitable cookware.

- To prevent overheating and improve the performance of the zones, the cookware must be as thick and flat as possible.
- Ensure cookware bases are clean and dry before placing on the hob surface.
- Always be careful not to slide or rub the cookware on the edges and corners of the glass as it may chip or damage the glass surface.

#### Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from a manufacturer).
- **not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

**Cookware is suitable for an induction hob if:**

- water boils very quickly on a zone set to the highest heat setting.
- a magnet pulls on to the bottom of the cookware.

#### Cookware dimensions

- Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. Refer to "Technical data" > "Cooking zones specification" for correct cookware dimensions. Place the cookware in the centre of the selected cooking zone.
- The efficiency of a cooking zone is related to the diameter of the cookware. For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").
  - Cookware with a diameter smaller than the size of a given cooking zone receives only part of the power generated by the cooking zone which results in slower heating.
  - For both safety reasons and optimal cooking results, do not use cookware larger than indicated in "Cooking zones specification". Avoid keeping cookware close to the control panel

during the cooking session. This might impact the functioning of the control panel or accidentally activate hob functions.



Refer to "Technical data".

## 7.2 Noises during operation



The noises are normal and do not indicate any malfunction. Cookware noises may vary depending on the cookware material and the power level.

### Cookware-related noises:

- cracking noise: cookware is made of different materials (a sandwich construction).
- whistling sound: you use a cooking zone with a high power level and the cookware

is made of different materials (a sandwich construction).

- humming: you use a high power level.

### Hob-related noises:

- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.
- rhythmic sound: cookware is detected.

## 7.3 Simplified cooking guide

The correlation between the heat setting of a zone and its consumption of power is not linear. When you increase the heat setting, it is not proportional to the increase of the consumption of power. It means that a cooking zone with the medium heat setting uses less than a half of its power.



The data in the table is for guidance only.

| Heat setting | Use to:                                                                                                      | Time (min)   | Hints                                                                                                                |
|--------------|--------------------------------------------------------------------------------------------------------------|--------------|----------------------------------------------------------------------------------------------------------------------|
| - 1          | Keep cooked food warm.                                                                                       | as necessary | Put a lid on the cookware.                                                                                           |
| 1 - 2.       | Hollandaise sauce; melt: butter, chocolate, gelatine.                                                        | 5 - 25       | Mix from time to time.                                                                                               |
| 2.           | Solidify: fluffy omelettes, baked eggs.                                                                      | 10 - 40      | Cook with a lid on.                                                                                                  |
| 2. - 3.      | Simmer rice and milk-based dishes, heat up ready-cooked meals.                                               | 25 - 50      | Add at least twice as much liquid as rice, mix milk dishes halfway through the procedure.                            |
| 3. - 4.      | Stew vegetables, fish, meat.                                                                                 | 20 - 45      | Add a few tablespoons of water. Check the water amount during the process.                                           |
| 4. - 5.      | Steam potatoes and other vegetables.                                                                         | 20 - 60      | Cover the bottom of the pot with 1-2 cm of water. Check the water level during the process. Keep the lid on the pot. |
| 4. - 5.      | Cook larger quantities of food, stews and soups.                                                             | 60 - 150     | Up to 3 l of liquid plus ingredients.                                                                                |
| 5. - 7       | Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts. | as necessary | Turn over when needed.                                                                                               |
| 7 - 8        | Heavy fry, hash browns, loin steaks, steaks.                                                                 | 5 - 15       | Turn over when needed.                                                                                               |




| Heat setting                                                                     | Use to:                                                                 | Time (min) | Hints |
|----------------------------------------------------------------------------------|-------------------------------------------------------------------------|------------|-------|
| 9                                                                                | Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips. |            |       |
|  | Boil large quantities of water. PowerBoost is activated.                |            |       |

## 7.4 Hints and tips for Hob<sup>2</sup>Hood

When you operate the hob with the function:

- Protect the hood panel from direct sunlight.
- Do not spot halogen light on the hood panel.
- Do not cover the hob control panel.
- Do not interrupt the signal between the hob and the hood (e.g. with the hand, a cookware handle or a tall pot). See the picture.

The hood pictured below is for illustration purpose only.

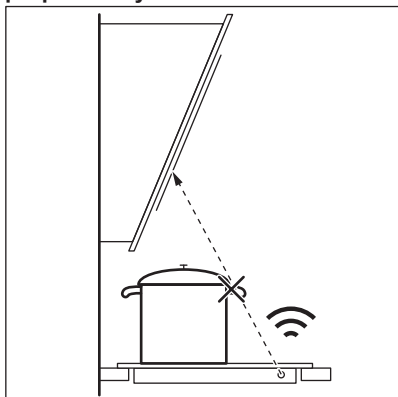

Other remotely controlled appliances may block the signal. Do not use any such appliances near to the hob while Hob<sup>2</sup>Hood is on.

### Cooker hoods with the Hob<sup>2</sup>Hood function

To find the full range of cooker hoods which work with this function refer to our consumer website. The AEG cooker hoods that work with this function must have the symbol .

## 8. CARE AND CLEANING



### WARNING!

Refer to Safety chapters.

### 8.1 General information

- Clean the hob after each use.
- Always use cookware with a clean base.
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaning agent suitable for the surface of the hob.

- Always use a scraper recommended for hobs with a glass surface. Use the scraper only as an additional tool for cleaning the glass after the standard cleaning procedure.



### WARNING!

Do not use knives or any other sharp, metal tools to clean the glass surface.

## 8.2 Cleaning the hob

- **Remove immediately:** melted plastic, plastic foil, salt, sugar and food with sugar, otherwise, the dirt can cause damage to the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.
- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat

stains, shiny metallic discoloration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.

- **Remove shiny metallic discoloration:** use a solution of water with vinegar and clean the glass surface with a cloth.

## 9. TROUBLESHOOTING



### WARNING!

Refer to Safety chapters.

### 9.1 What to do if...

| Problem                                                                                                      | Possible cause                                                                          | Remedy                                                                                                                          |
|--------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| You cannot activate or operate the hob.                                                                      | The hob is not connected to an electrical supply or it is connected incorrectly.        | Check if the hob is correctly connected to the electrical supply.                                                               |
|                                                                                                              | The fuse is blown.                                                                      | Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician. |
|                                                                                                              | You did not set the heat setting for 10 seconds.                                        | Activate the hob again and set the heat setting in less than 10 seconds.                                                        |
|                                                                                                              | You touched 2 or more sensor fields at the same time.                                   | Touch only one sensor field.                                                                                                    |
| You can hear a constant beep noise.                                                                          | Pause operates.                                                                         | Refer to "Pause".                                                                                                               |
|                                                                                                              | There is water or fat stains on the control panel.                                      | Clean the control panel.                                                                                                        |
|                                                                                                              | The electrical connection is incorrect.                                                 | Disconnect the hob from the electrical supply. Ask a qualified electrician to check the installation.                           |
|                                                                                                              | You put something on one or more sensor fields.                                         | Remove the object from the sensor fields.                                                                                       |
| An acoustic signal sounds and the hob deactivates.<br>An acoustic signal sounds when the hob is deactivated. | You put something on the sensor field ①.                                                | Remove the object from the sensor field.                                                                                        |
| The hob deactivates.                                                                                         |                                                                                         |                                                                                                                                 |
| Residual heat indicator does not come on.                                                                    | The zone is not hot because it operated only for a short time or the sensor is damaged. | If the zone operated sufficiently long to be hot, speak to an Authorised Service Centre.                                        |

| Problem                                                                                                | Possible cause                                                                             | Remedy                                                                                                                                                                                                                                                                                                                   |
|--------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hob <sup>2</sup> Hood does not work.                                                                   | You covered the control panel.                                                             | Remove the object from the control panel.                                                                                                                                                                                                                                                                                |
|                                                                                                        | You use a very tall pot which blocks the signal.                                           | Use a smaller pot, change the cooking zone or operate the hood manually.                                                                                                                                                                                                                                                 |
| Automatic Heat Up does not operate.                                                                    | The highest heat setting is set.                                                           | The highest heat setting has the same power as the function.                                                                                                                                                                                                                                                             |
|                                                                                                        | The zone is hot.                                                                           | Let the zone become sufficiently cool.                                                                                                                                                                                                                                                                                   |
| The heat setting changes between two levels.                                                           | Power management operates.                                                                 | Refer to "Daily use".                                                                                                                                                                                                                                                                                                    |
| The control panel becomes hot to the touch.                                                            | The cookware is too large or you put it too close to the control panel.                    | Put large cookware on the rear zones, if possible.                                                                                                                                                                                                                                                                       |
| There is no sound when you touch the panel sensor fields.                                              | The sounds are deactivated.                                                                | Activate the sounds. Refer to "Daily use".                                                                                                                                                                                                                                                                               |
|  comes on.             | Child Safety Device or Lock operates.                                                      | Refer to "Daily use".                                                                                                                                                                                                                                                                                                    |
|  comes on.             | There is no cookware on the zone.                                                          | Put cookware on the zone.                                                                                                                                                                                                                                                                                                |
|                                                                                                        | The cookware is unsuitable.                                                                | Use cookware suitable for induction hobs. Refer to "Hints and tips".                                                                                                                                                                                                                                                     |
|                                                                                                        | The diameter of the bottom of the cookware is too small for the zone.                      | Use cookware with correct dimensions. Refer to "Technical data".                                                                                                                                                                                                                                                         |
| Heating up takes a long time.                                                                          | Cookware is too small and receives only a part of the power generated by the cooking zone. | For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").                                                                                                                      |
|  and a number come on. | There is an error in the hob.                                                              | Deactivate the hob and activate it again after 30 seconds. If  comes on again, disconnect the hob from the electrical supply. After 30 seconds, connect the hob again. If the problem continues, speak to an Authorised Service Centre. |

## 9.2 If you cannot find a solution...

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Give the data from the rating plate. Give also three digit letter code for the glass ceramic (it is in the corner of the glass surface) and an error message that comes

on. Make sure, you operated the hob correctly. If not the servicing by a service technician or dealer will not be free of charge, also during the warranty period. The information about guarantee period and Authorised Service Centres are in the guarantee booklet.

# 10. TECHNICAL DATA

## 10.1 Rating plate

|                  |                                                                                   |
|------------------|-----------------------------------------------------------------------------------|
| Model TN64IA0FXB | PNC 949 493 032 00                                                                |
| Typ 61 B4A 00 AA | 220 - 240 V / 400 V 2N, 50 - 60 Hz                                                |
| Induction 7.2 kW | Made in: Romania                                                                  |
| Ser.Nr. ....     | 7.2 kW                                                                            |
| AEG              |  |

## 10.2 Cooking zones specification

| Cooking zone | Nominal power<br>(maximum heat<br>setting) [W] | PowerBoost [W] | PowerBoost<br>maximum dura-<br>tion [min] | Cookware diame-<br>ter [mm] |
|--------------|------------------------------------------------|----------------|-------------------------------------------|-----------------------------|
| Left front   | 2300                                           | 3700           | 10                                        | 180 - 210                   |
| Left rear    | 1800                                           | 2800           | 10                                        | 145 - 180                   |
| Right front  | 1400                                           | 2500           | 4                                         | 125 - 145                   |
| Right rear   | 1800                                           | 2800           | 10                                        | 145 - 180                   |

The power of the cooking zones can be different in some small range from the data in the table. It changes with the material and dimensions of the cookware.

For optimal heat transfer and cooking results use cookware with bottom diameter similar to

the size of the cooking zone (i.e. the maximum cookware diameter value in the table). Do not use cookware larger than the diameter of the cooking zone.

# 11. ENERGY EFFICIENCY

## 11.1 Product Information according to EU Ecodesign Regulation

|                                                           |              |             |
|-----------------------------------------------------------|--------------|-------------|
| Model identification                                      | TN64IA0FXB   |             |
| Type of hob                                               | Built-In Hob |             |
| Number of cooking zones                                   | 4            |             |
| Heating technology                                        | Induction    |             |
| Diameter of circular cooking zones (Ø)                    | Left front   | 21.0 cm     |
|                                                           | Left rear    | 18.0 cm     |
|                                                           | Right front  | 14.5 cm     |
|                                                           | Right rear   | 18.0 cm     |
| Energy consumption per cooking zone (EC electric cooking) | Left front   | 178.4 Wh/kg |
|                                                           | Left rear    | 174.4 Wh/kg |
|                                                           | Right front  | 183.2 Wh/kg |
|                                                           | Right rear   | 184.9 Wh/kg |

|                                                 |             |
|-------------------------------------------------|-------------|
| Energy consumption of the hob (EC electric hob) | 180.2 Wh/kg |
|-------------------------------------------------|-------------|

IEC / EN 60350-2 - Household electric cooking appliances - Part 2: Hobs - Methods for measuring performance.

## 11.2 Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you heat up water, use only the amount you need.

- If it is possible, always put the lids on the cookware.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

## 11.3 Product Information for power consumption and maximum time to reach applicable low power mode

|                                                                                            |       |
|--------------------------------------------------------------------------------------------|-------|
| Power consumption in off mode                                                              | 0.3 W |
| Maximum time needed for the equipment to automatically reach the applicable low power mode | 2 min |

## 12. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.





