



EN User Manual | **Hob**

**NCH84C23AB**



Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:  
[www.aeg.com/support](http://www.aeg.com/support)

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION..... 2

2. SAFETY INSTRUCTIONS..... 5

3. INSTALLATION..... 7

4. PRODUCT DESCRIPTION..... 9

5. BEFORE FIRST USE..... 11

6. DAILY USE..... 12

7. ADDITIONAL FUNCTIONS..... 17

8. HINTS AND TIPS..... 18

9. CARE AND CLEANING..... 20

10. TROUBLESHOOTING..... 23

11. TECHNICAL DATA..... 26

12. ENERGY EFFICIENCY..... 26

13. ENVIRONMENTAL CONCERNS..... 28

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

## **1.2 General Safety**

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Smoke is an indication of overheating. Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- **CAUTION:** The cooking process has to be supervised (even the automatic cooking functions). A short term cooking process has to be supervised continuously.
- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.

- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.
- Do not use water spray and steam to clean the appliance.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of gases into the room from appliances burning gas or other fuels, including open fires.
- Make sure that the ventilation openings are not blocked and the air collected by the appliance is not conveyed into a duct used to exhaust smoke and steam from other appliances (central heating systems, thermosiphons, water-heaters, etc.).
- When the appliance operates with other appliances the maximum vacuum generated in the room should not exceed 0.04 mbar.
- Clean the hood filter regularly and remove grease deposits from the appliance to prevent the risk of fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized Service or similarly qualified persons in order to avoid a hazard.
- If the appliance is connected directly to the power supply, the electrical installation must be equipped with an isolating device that allows to disconnect the appliance from the mains at all poles. Complete disconnection must comply with conditions specified in the overvoltage category III. The

means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

## 2. SAFETY INSTRUCTIONS

### 2.1 Installation

#### **WARNING!**

Only a qualified person must install this appliance.

#### **WARNING!**

Risk of injury or damage to the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Seal the cut surfaces of the cabinet with a sealant to prevent moisture from causing swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance next to a door or under a window. This prevents hot cookware from falling from the appliance when the door or the window is opened.
- Do not install in a manner that exhausts air into a wall cavity, unless the cavity is designed for that purpose.
- For ductless installation, the fan outlet must be positioned directly against the wall or must be separated by an additional cabinet wall, in order to prevent access to the fan blades.
- Each appliance has cooling fans on the bottom.

- If the appliance is installed above a drawer:
  - Do not store any small pieces or sheets of paper that could be pulled in, as they can damage the cooling fans or impair the cooling system.
  - Keep a distance of minimum 2 cm between the bottom of the appliance and parts stored in the drawer.
- Remove any separator panels installed in the cabinet below the appliance.

### 2.2 Electrical Connection

#### **WARNING!**

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician according to the connection diagram or installation booklet.
- In case of exhaust installation, and where the accessories are present or mandatory (wall valve, window switch and/or window opener) electrical connections should be made by a qualified electrician, according to the connection diagram or installation booklet.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.

- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure that a shock protection is installed.
- Use the strain relief clamp on the cable.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to a socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service Centre or an electrician to change a damaged mains cable.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- If the E3 code appears on the screen, immediately disconnect the hob and check if the electrical connection and the mains voltage are correct.

## 2.3 Use

### **WARNING!**

Risk of injury, burns and electric shock.

- Do not change the specification of this appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.

- Make sure that the ventilation openings are not blocked. The ventilation must be checked periodically by a qualified person.
- Do not let the appliance stay unattended during operation.
- Set the cooking zone to “off” after each use.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- If the surface of the appliance is cracked, disconnect immediately the appliance from the power supply. This to prevent an electrical shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.
- When you place food into hot oil, it may splash.
- Never use an open flame when the integrated hood operates.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.

### **WARNING!**

Risk of fire and explosion.

- Fats and oil when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.
- The vapours that very hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.

### **WARNING!**

Risk of damage to the appliance.

- Do not keep hot cookware on the control panel to avoid the risk of burns.

- Do not put a hot pan cover on the glass surface of the hob.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Never remove the grid or the hood filter when the integrated hood or the appliance operates.
- Never use the integrated hood without the hood filter.
- Do not cover the inlet of the integrated hood with cookware.
- Do not open the bottom lid when the integrated hood or the appliance operates.
- Do not place small or light objects near the integrated hood to avoid the risk of being trapped.
- Cookware made of cast iron or with a damaged bottom can cause scratches on the glass / glass ceramic. Always lift these objects up when you have to move them on the cooking surface.

## 2.4 Care and cleaning

- Clean the appliance regularly to prevent the deterioration of the surface material.
- Switch off the appliance and let it cool down before cleaning.
- Clean the appliance with warm water and a moist soft cloth. Use only neutral

detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects, unless otherwise specified.

## 2.5 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

## 2.6 Disposal



### WARNING!

Risk of injury or suffocation.

- Contact your local authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

# 3. INSTALLATION



### WARNING!

Refer to Safety chapters.

## 3.1 Before the installation

Before you install the hob, write down the information below from the rating plate. The rating plate is on the bottom of the hob.

Serial number .....

## 3.2 Built-in hobs

Only use the built-in hobs after you assemble the hob into correct built-in units and work surfaces that align to the standards.

## 3.3 Assembly

Refer to the installation booklet for detailed information on how to assemble your hob.


Handle the appliance carefully during installation to avoid bending or damaging the frame.

Follow the hob connection diagram and the window switch connection diagram (if applicable) presented in the installation booklet and / or the labels under the hob.





### Only for selected countries

In case of exhaust installation a window switch might be required (consult an authorised technician). You need to buy it separately as it is not supplied with the hob. The window switch has to be installed by an authorised technician. Refer to the installation booklet.

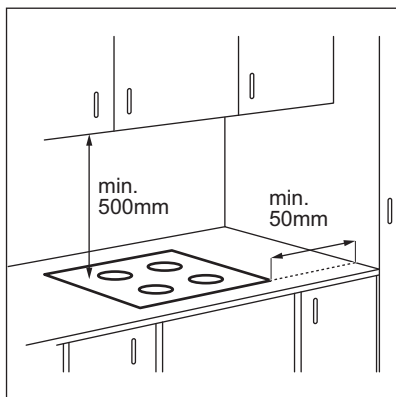

If the appliance is installed above a drawer, the hob ventilation can warm up the items stored in the drawer during the cooking process.

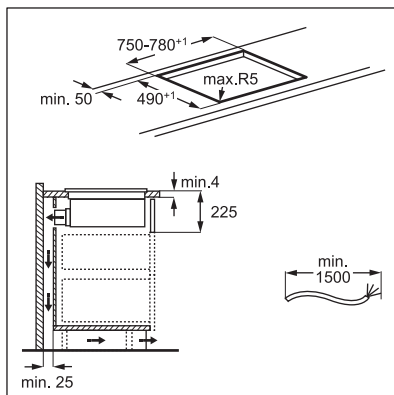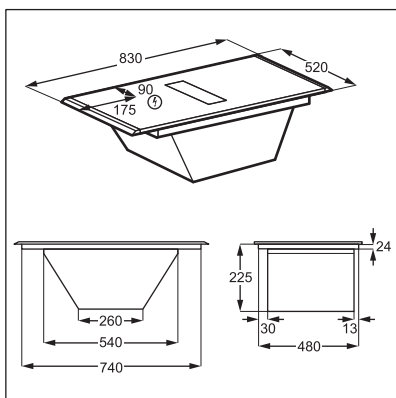

Find the video tutorial "How to install your AEG induction extractor hob" by typing out the full name indicated in the graphic below.



[www.youtube.com/electrolux](http://www.youtube.com/electrolux)  
[www.youtube.com/aeg](http://www.youtube.com/aeg)

How to install your AEG  
induction extractor hob



### Filter housing assembly

The appliance must be used at all times with all the filters included in the scope of delivery.

Before the first use make sure to insert the long life carbon filters inside the housing with the handles facing inwards. Refer to "Cleaning the hood filters". Once the filter housing is assembled, put it inside the hood system and place the grid on the hood.

### 3.4 Connection cable

- The hob is supplied with a connection cable.
- To replace the damaged mains cable, use the cable type which withstands a temperature of 125 °C or higher.
- The single wire must have a diameter of minimum 1,5 mm<sup>2</sup>.
- Speak to your local Service Centre. The connection cable may only be replaced by a qualified electrician.



### WARNING!

All electrical connections must be made by a qualified electrician.

**⚠ CAUTION!**


Connections via contact plugs are forbidden.

**⚠ CAUTION!**

Do not drill or solder the wire ends. It is forbidden.

**⚠ CAUTION!**

Do not connect the cable without cable end sleeve.

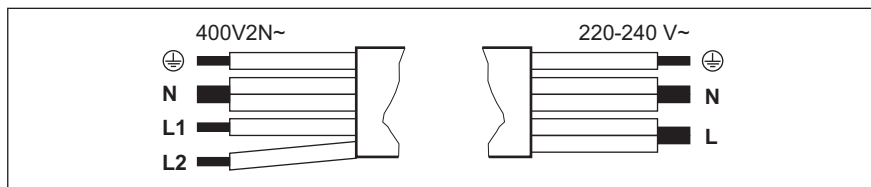

**Two-phase connection: 400 V2N~**

**5x1,5 mm<sup>2</sup> or 4x2,5 mm<sup>2</sup>**



Green - yellow

N

Blue and blue

L1

Black

L2

Brown

**One-phase connection: 220 - 240 V~**

**5x1,5 mm<sup>2</sup> or 3x4 mm<sup>2</sup>**

Green - yellow



Blue and blue



N

Black and brown

L

## 4. PRODUCT DESCRIPTION


### 4.1 Product overview

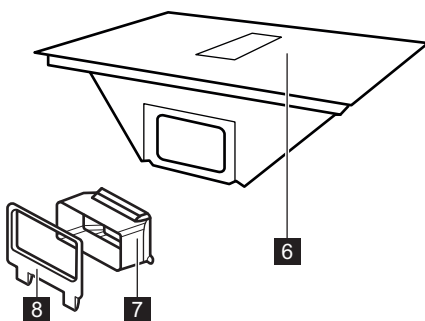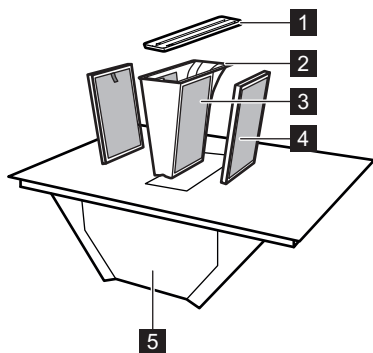

- 1** Grid
- 2** Grease filter housing
- 3** Grease filter (non-removable)
- 4** Long life carbon filter
- 5** Drip tray (under the hood system)


- 6** Hob
- 7** Air duct adapter
- 8** Air duct fitting for the back wall

## 4.2 Cooking surface layout

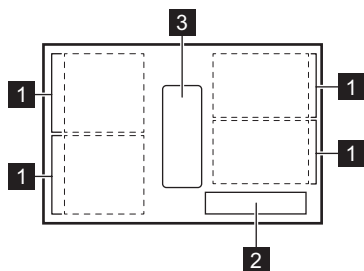

- 1** Induction cooking zone
- 2** Control panel
- 3** Hood

## 4.3 Control panel layout

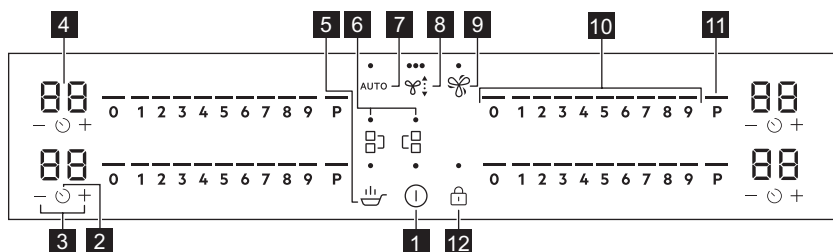

Use the sensor fields to operate the appliance. The displays, indicators and sounds tell which functions operate.

| Sensor field   | Function      | Description                                                                                     |
|----------------|---------------|-------------------------------------------------------------------------------------------------|
| <b>1</b> ①     | On / Off      | To activate and deactivate the appliance.                                                       |
| <b>2</b> ⌚     | Timer         | To set the function.                                                                            |
| <b>3</b> + / - | -             | To increase or decrease the time.                                                               |
| <b>4</b> -     | Timer display | To show the time in minutes.                                                                    |
| <b>5</b> 🍳     | SenseFry      | SenseFry. To fry with automatically controlled heat levels, dedicated to various types of food. |
| <b>6</b> 🌉     | Bridge        | To activate and deactivate the function.                                                        |

| Sensor field                                                                                | Function                   | Description                                                                     |
|---------------------------------------------------------------------------------------------|----------------------------|---------------------------------------------------------------------------------|
| <b>7</b> AUTO                                                                               | Automatic mode of the hood | To activate and deactivate the function.                                        |
| <b>8</b>   | Manual mode of the hood    | To activate / deactivate the function and to switch between 3 fan speed levels. |
| <b>9</b>   | Boost                      | To activate and deactivate the function.                                        |
| <b>10</b> -                                                                                 | Control bar                | To set a heat setting.                                                          |
| <b>11</b> P                                                                                 | PowerBoost                 | To activate the function.                                                       |
| <b>12</b>  | Lock / Child Safety Device | To lock / unlock the control panel.                                             |

## 4.4 Display indicators

| Indicator                                                                                | Description                                                                                      |
|------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  + digit | There is a malfunction.                                                                          |
|          | The long life carbon filter needs regenerating.                                                  |
|          | OptiHeat Control (3 step Residual heat indicator): continue cooking / keep warm / residual heat. |

## 5. BEFORE FIRST USE

### **WARNING!**

Refer to Safety chapters.

### 5.1 Power limitation

Power limitation defines how much power is used by the hob in total, within the limits of the house installation fuses. The hob is set to its highest possible power level by default.

**To decrease or increase the power level:**

1. Enter the menu: press and hold  for 3 seconds. Then, press and hold .
2. Press  on the front timer until P appears.
3. Press  /  on the front timer to set the power level.
4. Press  to exit.

**Power levels**

Refer to “Technical data” chapter.

### **CAUTION!**

Make sure that the selected power fits the house installation fuses.

- P73 — 7350 W
- P15 — 1500 W
- P20 — 2000 W
- P25 — 2500 W
- P30 — 3000 W
- P35 — 3500 W
- P40 — 4000 W
- P45 — 4500 W
- P50 — 5000 W
- P60 — 6000 W

### **CAUTION!**

If the power level is lower than or equal to 2000 W you cannot activate SenseFry.

## 6. DAILY USE

### **WARNING!**

Refer to Safety chapters.

### 6.1 Activating and deactivating

Press and hold  to activate or deactivate the hob.

### 6.2 Pot detection

This feature indicates the presence of cookware on the hob and deactivates the cooking zones if no cookware is detected during a cooking session.

If you put cookware on a cooking zone before you select a heat setting, the indicator above 0 on the control bar appears.

If you remove cookware from an activated cooking zone and set it aside temporarily, the indicators above the corresponding control bar will start blinking. If you do not place the cookware back on the activated cooking zone within 120 seconds, the cooking zone will automatically deactivate.

To resume cooking, make sure to put the cookware back on the cooking zones within the indicated timeout.

### 6.3 Using the cooking zones



Place the cookware in the centre of the selected zone. Induction cooking zones adapt to the dimension of the bottom of the cookware automatically.




For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification"). Make sure that the cookware is suitable for induction hobs. For more information on cookware types refer to "Hints and tips".

You can cook with large cookware placed on two cooking zones at the same time using

Bridge function. The cookware must cover the centres of both zones but not go beyond the area marking. If the cookware is located between the two centres, Bridge function will not be activated.

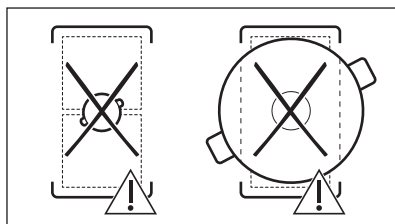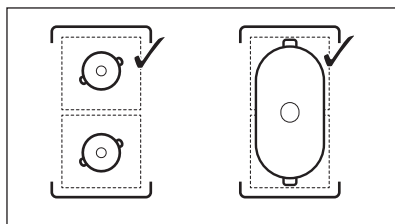

### 6.4 Heat setting

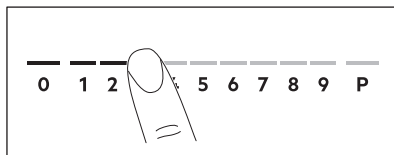

1. Press the desired heat setting on the control bar.

The indicators above the control bar appear up to the selected heat setting level.

2. To deactivate a cooking zone, press 0.

### 6.5 PowerBoost

This function makes more power available to the induction cooking zones. The function can be activated for the induction cooking zone only for a limited period of time. After this time the induction cooking zone automatically sets back to the highest heat setting.



Refer to "Technical data" chapter.

**To activate the function for a cooking zone:** touch **P**.

**To deactivate the function:** change the heat setting.

## 6.6 OptiHeat Control (3 step Residual heat indicator)



### WARNING!

/ / As long as the indicator is visible, there is a risk of burns from residual heat.

The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.

The indicators appear when a cooking zone is hot. They show the level of the residual heat for the cooking zones you are currently using:

- continue cooking,

- keep warm,

- residual heat.

The indicator may also appear:

- for the neighbouring cooking zones even if you are not using them,
- when hot cookware is placed on cold cooking zone,
- when the hob is deactivated but the cooking zone is still hot.

The indicator disappears when the cooking zone has cooled down.

## 6.7 Timer options

### Count Down Timer

Use this function to specify how long a cooking zone should operate during a single cooking session.

Set the heat setting for the selected cooking zone and then set the function.

1. Press . 00 appears on the timer display.
2. Press **+** or **-** to set the time (00-99 minutes).
3. Press to start the timer or wait 3 seconds. The timer begins to count down.

**To change the time:** select the cooking zone with and press **+** or **-**.

**To deactivate the function:** select the cooking zone with and press **-**. The remaining time counts back to 00.

The timer finishes counting down, a signal sounds and 00 blinks. The cooking zone deactivates. Press any symbol to stop the signal and blinking.

### Minute Minder

You can use this function when the hob is activated but the cooking zones do not operate. The heat setting shows 00.

1. Press .
2. Press **+** or **-** to set the time. The timer finishes counting down, a signal sounds and 00 blinks. Press any symbol to stop the signal and blinking.

**To deactivate the function:** press and **-**. The remaining time counts back to 00.

## 6.8 Power management

If multiple zones are active and the consumed power exceeds the limitation of the power supply, this function divides the available power between all cooking zones. The hob controls heat settings to protect the fuses of the house installation.

- If the hob reaches the limit of maximum available power (refer to the rating plate), the power of the cooking zones will be automatically reduced.
- The heat setting of the cooking zone selected first is always prioritised. The remaining power will be divided between the other cooking zones according to the order of selection.

- For cooking zones that have a reduced power, the control bar blinks and shows the maximum possible heat settings.
- Wait until the display stops flashing or reduce the heat setting of the cooking zone selected last. The cooking zones will continue operating with the reduced heat setting. Change the heat settings of the cooking zones manually, if necessary.
- The hood extractor is always available as an electrical load.

## 6.9 Hood functions



### WARNING!

Refer to Safety chapters.

### Manual mode

The hood can operate alongside the hob during the cooking session, as well as while the hob is switched off.

1. Press to activate the hood.  
A signal sounds and indicators above the symbol appear.
2. Adjust the fan speed setting as needed by pressing the symbol. The indicators change to reflect the current fan speed.
3. To deactivate the hood, press repeatedly until the indicators above the symbol disappear.

### AUTO

The function automatically adjusts the fan speed level based on the temperature of the cooking zone. The function is usually activated by default.

AUTO mode offers four fan speed options: H1-H4 (low to intense). H4 is set by default. You can change the mode in the settings. Refer to "Menu structure".

You can activate the function while the hob is on and none of the cooking zones are active, or at any point during the cooking session.



If you activate the function while the hob is off, none of the cooking zones operate and there is no residual heat visible on the control panel, the function will switch off by itself after a few seconds.

1. Press and hold to activate the hob.
2. If the function is not on by default, press AUTO to activate it.

A signal sounds and an indicator above the symbol appears.

3. Place cookware on the hob and select a heat setting level. Increase or decrease the heat setting level as needed.

The hood will react to the temperature of the cooking zone, increasing or decreasing the fan speed level accordingly. The indicators above the hood symbol appear.

4. Press 0 on the hob control bar to deactivate a cooking zone or to deactivate the hob.

AUTO will run for some time depending on the set mode (H1-H4).



The fan speed can be adjusted manually during cooking by pressing .

To deactivate the function, press AUTO. A signal sounds and the indicator above the symbol disappears.

If you deactivate the hob while AUTO is running, the function will be remembered for the next cooking session.

### Boost

The function activates the hood fan at its maximum speed level.

1. Press to activate the function.  
A signal sounds and an indicator above the symbol appears.
2. Press again to deactivate the function, if needed.

The function can operate uninterrupted for a maximum of 8 minutes. After that time the fan speed setting automatically changes to 3. You can activate the function again, if needed.

## Auto Breeze

The function automatically sets the hood fan to continue running after you finish cooking and switch off the hob. The fan runs at a minimum speed level for maximum 20 minutes. The function removes any lingering smells after cooking.

When you use the hob for the first time, the function is activated by default.

When the function operates, the indicator above AUTO appears. Once the cycle is over, the fan switches off automatically.

### To deactivate the function while it is running:

Press AUTO or .  
The hood fan deactivates.

### To disable the function completely:

1. Enter the menu: press and hold ① for 3 seconds. Then, press and hold .
2. Press ② on the front timer until **dF** appears on the display.
3. Press  or  on the front timer until **Off** (--) appears.
4. Press ① to exit.



It is recommended not to disable the function and to let it run uninterrupted for the full duration of the cycle.

## 6.10 SenseFry

This function lets you set an appropriate heat setting level to fry your food. The hob maintains the temperature throughout cooking. You can choose one of three SenseFry levels: low (2), medium (5), high (8). Once the heat setting level is set, no manual temperature adjustment is necessary.



### CAUTION!

Use only cold cookware.  
Do not leave the hob unattended while the function is operating.

1. Place a pan without oil / fat on one of the cold cooking zones on the left side. You

can use a single cooking zone or connect both zones using Bridge.

If you place one pot on only one cooking zone the function starts automatically.

2. Touch ① to activate the hob.
3. Touch  to activate the function. The indicator above the symbol comes on. The heat setting is set to 2 by default.
4. Select a frying level by pressing  repeatedly.

A blinking indicator above the selected level appears for each cooking zone on which you can presently use the function.

5. Touch anywhere on the slider of the chosen cooking zone.

You can adjust the SenseFry level by pressing one of the corresponding heat setting levels as seen in the table below.

| SenseFry power level | Heat setting levels |
|----------------------|---------------------|
| Low                  | 2                   |
| Medium               | 5                   |
| High                 | 8                   |

The function starts.

Once the function starts the indicators above the slider appear and the animation starts running.



If you do not place a pot on any of the cooking zones within 5 seconds, the function deactivates automatically.

6. Set a timer function, if needed.

Once the pan reaches the intended temperature an acoustic signal sounds. You can put oil and food inside the pan now.

To stop the function press 0 on the control bar or press .

If you set a Count Down Timer on one of the cooking zones and the set time runs out before the intended temperature is reached the function deactivates automatically.

Hints and tips:


- You can change the default heat level, if needed.

- For thick pieces of food or raw potatoes use a lid during the first 10 min of frying.
- Heavy and / or large pans may take longer to heat up.
- Use laminated pans with low heat level to prevent overheating and damage of the cookware.
- Do not use thin enamelled cookware. It can be overheated and damaged.


### Correct pans for SenseFry function

Use only pans with flat bottoms. To check if the pan is correct:


1. Put your pan upside down.
2. Put a ruler on the bottom of the pan.
3. Try to put a coin of 1, 2, or 5 Euro Cent (or any coin with similar thickness, approx. 1.7 mm) between the ruler and the bottom of the pan.

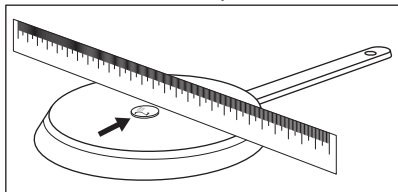

- a. The pan is incorrect if you can put the coin between the ruler and the pan.

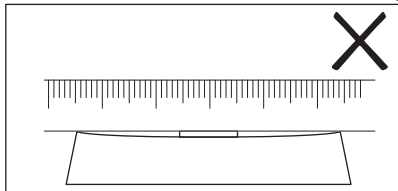

- b. The pan is correct if you cannot put the coin between the ruler and the pan.

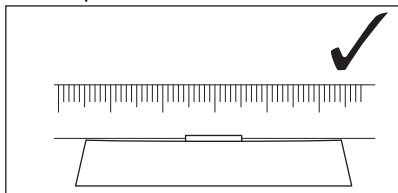

## 6.11 Menu structure

The table shows the basic menu structure.

### User settings

| Symbol    | Setting               | Possible options                    |
|-----------|-----------------------|-------------------------------------|
| <b>b</b>  | Sound                 | On / Off (--)                       |
| <b>P</b>  | Power limitation      | 15 - 73                             |
| <b>H</b>  | AUTO mode             | 1 - 4                               |
| <b>dF</b> | Auto Breeze           | On / Off (--)                       |
| <b>E</b>  | Alarm / error history | The list of recent alarms / errors. |

**To enter user settings:** press and hold for 3 seconds. Then, press and hold . The settings appear on the timer of the left cooking zones.

**Navigating the menu:** the menu consists of the setting symbol and a value. The symbol appears on the rear timer and the value appears on the front timer. To navigate between the settings press on the front timer. To change the setting value press or on the front timer.

**To exit the menu:** press .

### OffSound Control

You can activate / deactivate the sounds in the Menu > User settings.



Refer to "Menu structure".

When the sounds are off you can still hear the sound when:

- you touch ,
- the timer comes down,
- you press an inactive symbol.

## 7. ADDITIONAL FUNCTIONS

### 7.1 Automatic Switch Off

**The function deactivates the hob automatically if:**

- all of the cooking zones, as well as the hood, are deactivated,
- you do not set any heat setting or fan speed setting after the activation of the hob,
- you spill something or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). A signal sounds and the hob deactivates. Remove the object or clean the control panel.
- the appliance gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you do not deactivate a cooking zone or change the heat setting. After some time, the hob deactivates.

**The relation between the heat setting / fan speed setting and the time after which the appliance deactivates:**

| Heat setting | The hob deactivates after |
|--------------|---------------------------|
| 1 - 2        | 6 hours                   |
| 3 - 4        | 5 hours                   |
| 5            | 4 hours                   |
| 6 - 9        | 1.5 hours                 |



When you use SenseFry the hob deactivates after 1.5 hours.

#### Fan speed setting

#### The hood deactivates after



10 hours

### 7.2 Lock

You can lock the control panel while the hob operates. It prevents an accidental change of the heat setting / fan speed setting.

Set the heat setting / fan speed setting first.

**To activate the function:** press

**To deactivate the function:** press again.



The function deactivates as you deactivate the hob.

### 7.3 Child Safety Device

This function prevents an accidental operation of the hob and the hood.

**To activate the function:** press . Do not set any heat setting / hood setting. Press and hold for 3 seconds, until the indicator above the symbol appears. Deactivate the hob with .



The function stays active when you deactivate the hob. The indicator above is on.

**To deactivate the function:** press . Do not set any heat setting / hood setting. Press and hold for 3 seconds, until the indicator above the symbol disappears. Deactivate the hob with .

**Cooking with the function activated:** press , then press for 3 seconds, until the indicator above the symbol disappears. You can operate the hob. When you deactivate the hob with the function operates again.

### 7.4 Bridge



The function operates when the pot covers the centres of the two zones. For more information on the correct placement of cookware refer to "Using the cooking zones".

This function connects two cooking zones and they operate as one.

First set the heat setting for one of the cooking zones.

### To activate the function for left / right

**cooking zones:** touch  / . To set or change the heat setting touch one of the left / right control sensors.

**To deactivate the function:** touch  / .  
The cooking zones operate independently.

## 8. HINTS AND TIPS

### **WARNING!**

Refer to Safety chapters.

### 8.1 Cookware



For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Use the induction cooking zones with suitable cookware.

- To prevent overheating and improve the performance of the zones, the cookware must be as thick and flat as possible.
- For SenseFry function only use pans with flat bottom.
- Ensure cookware bases are clean and dry before placing on the hob surface.
- Always be careful not to slide or rub the cookware on the edges and corners of the glass as it may chip or damage the glass surface.

#### Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from a manufacturer).
- **not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

**Cookware is suitable for an induction hob if:**

- water boils very quickly on a zone set to the highest heat setting.
- a magnet pulls on to the bottom of the cookware.

#### Cookware dimensions

- Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. Refer to "Technical data" >

"Cooking zones specification" for correct cookware dimensions. Place the cookware in the centre of the selected cooking zone.


- The efficiency of a cooking zone is related to the diameter of the cookware. For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").
  - Cookware with a diameter smaller than the size of a given cooking zone receives only part of the power generated by the cooking zone which results in slower heating.
  - For both safety reasons and optimal cooking results, do not use cookware larger than indicated in "Cooking zones specification". Avoid keeping cookware close to the control panel during the cooking session. This might impact the functioning of the control panel or accidentally activate hob functions.



Refer to "Technical data".

#### Steam Vented Lids

To further optimize the cooking sessions alongside the hood you can use the special Steam Vented Lids with your cookware. The lids are designed to direct the steam produced inside the pot towards the hood, minimizing unwanted cooking smells and excessive humidity in the kitchen. The lids are available to buy separately in several sizes to fit most common cookware types. For more information visit our website.

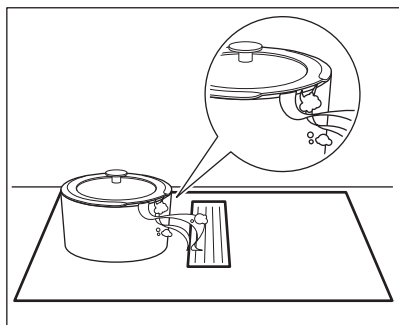

## 8.2 Noises during operation



The noises are normal and do not indicate any malfunction. Cookware noises may vary depending on the cookware material and the power level.

### Cookware-related noises:

- cracking noise: cookware is made of different materials (a sandwich construction).
- whistling sound: you use a cooking zone with a high power level and the cookware

is made of different materials (a sandwich construction).

- humming: you use a high power level.

### Hob-related noises:

- clicking: electric switching occurs.
- hissing, buzzing: the fan operates.
- rhythmic sound: cookware is detected.

## 8.3 Öko Timer (Eco Timer)

To save energy, the heater of the cooking zone deactivates before the count down timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

## 8.4 Simplified cooking guide

The correlation between the heat setting of a zone and its consumption of power is not linear. When you increase the heat setting, it is not proportional to the increase of the consumption of power. It means that a cooking zone with the medium heat setting uses less than a half of its power.



The data in the table is for guidance only.

| Heat setting | Use to:                                                        | Time (min)   | Hints                                                                                                                |
|--------------|----------------------------------------------------------------|--------------|----------------------------------------------------------------------------------------------------------------------|
| 1            | Keep cooked food warm.                                         | as necessary | Put a lid on the cookware.                                                                                           |
| 1 - 2        | Hollandaise sauce; melt: butter, chocolate, gelatine.          | 5 - 25       | Mix from time to time.                                                                                               |
| 2            | Solidify: fluffy omelettes, baked eggs.                        | 10 - 40      | Cook with a lid on.                                                                                                  |
| 2 - 3        | Simmer rice and milk-based dishes, heat up ready-cooked meals. | 25 - 50      | Add at least twice as much liquid as rice, mix milk dishes halfway through the procedure.                            |
| 3 - 4        | Stew vegetables, fish, meat.                                   | 20 - 45      | Add a few tablespoons of water. Check the water amount during the process.                                           |
| 4 - 5        | Steam potatoes and other vegetables.                           | 20 - 60      | Cover the bottom of the pot with 1-2 cm of water. Check the water level during the process. Keep the lid on the pot. |
| 4 - 5        | Cook larger quantities of food, stews and soups.               | 60 - 150     | Up to 3 l of liquid plus ingredients.                                                                                |

| Heat setting | Use to:                                                                                                      | Time (min)   | Hints                  |
|--------------|--------------------------------------------------------------------------------------------------------------|--------------|------------------------|
| 6 - 7        | Gentle fry: escalope, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts. | as necessary | Turn over when needed. |
| 7 - 8        | Heavy fry, hash browns, loin steaks, steaks.                                                                 | 5 - 15       | Turn over when needed. |
| 9            | Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips.                                      |              |                        |
| <b>P</b>     | Boil large quantities of water. PowerBoost is activated.                                                     |              |                        |

## 8.5 Hints and Tips for SenseFry function

The data in the table shows examples of food for each SenseFry level. The amount, thickness, quality, and temperature (e.g. frozen) of the food to be pan fried influence the set SenseFry level. Choose the heat

setting level based on the food type, your cooking preferences, and the cookware you use.



The data in the table is for guidance only.

| Food       | SenseFry level                                                                                                                      |
|------------|-------------------------------------------------------------------------------------------------------------------------------------|
| Eggs       | Omelette, fried eggs<br>Low                                                                                                         |
|            | Scrambled eggs<br>Medium                                                                                                            |
| Fish       | Fish fillet, fish fingers, seafood<br>Medium                                                                                        |
| Meat       | Hamburger, meatballs, cutlet, chicken breast, turkey breast, escalope, fillet, steak (medium / well done), fried sausages<br>Medium |
|            | Steak (rare), minced meat<br>High                                                                                                   |
| Vegetables | Fried potatoes (raw)<br>Low                                                                                                         |
|            | Fried potato patties, vegetables<br>Medium                                                                                          |

## 8.6 Hints and Tips for the hood

- You can put pots on the grid while the hood is not operating. It will not cause any damage.
- When AUTO mode operates, the fan starts at a low speed at the beginning of

each cooking session. The speed increases gradually. You can also adjust the speed manually, if needed.

# 9. CARE AND CLEANING



### WARNING!

Refer to Safety chapters.

## 9.1 General information

- Clean the hob after each use.
- Always use cookware with a clean base.
- Scratches or dark stains on the surface have no effect on how the hob operates.

- Use a special cleaning agent suitable for the surface of the hob.
- Always use a scraper recommended for hobs with a glass surface. Use the scraper only as an additional tool for cleaning the glass after the standard cleaning procedure.

#### **WARNING!**

Do not use knives or any other sharp, metal tools to clean the glass surface.

## 9.2 Cleaning the hob

- **Remove immediately:** melted plastic, plastic foil, salt, sugar and food with sugar, otherwise, the dirt can cause damage to the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.
- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discoloration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- **Remove shiny metallic discoloration:** use a solution of water with vinegar and clean the glass surface with a cloth.

## 9.3 Cleaning the hood

### Grid


The grid guides the air into the hood. Additionally, it protects the hood system and prevents foreign objects from falling inside by accident. The grid is made of aluminium. You can wash the grid manually or in a dishwasher. Wipe the grid with a soft cloth.

### Drip tray


There is a drip tray located under the hood. It collects the condensation created during each cooking process. At any time water might be dripping from the hood system into the drip tray. Remember to empty the tray regularly. The drip tray is visible from above once you remove the grid and the filter housing along with the filters.

Before you access the drip tray, make sure to protect the contents of the drawer or cabinet under the hob from accidental spillage.

1. To access the drip tray, first unlock the center latch located at the back. Slide the latch in the opposite direction. Take hold of the drip tray with both hands and slide it carefully to the right.

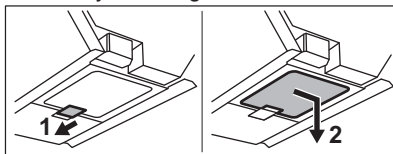

2. Move the drip tray vertically downwards. Be careful not to spill the water.

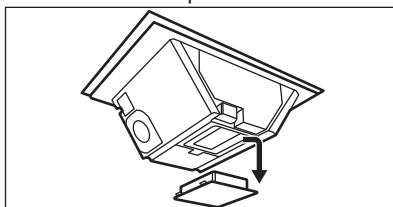

3. Dispose of the water and rinse the drip tray out. You can wash the tray manually (using warm water, soap, and a soft cloth / sponge) or in a dishwasher (standard cycle).

#### **WARNING!**

Make sure no liquid gets inside the hood.

### If water or other liquids spill inside the hood system:

1. Switch off the hood.
2. Lift the grid and clean the hood area carefully with warm water, a moist cloth or sponge and a mild cleaning agent.
3. Wipe away the excess liquid gathered on the bottom of the hood cavity using a sponge or a dry cloth.
4. Clean the filter, if needed (refer to "Cleaning the hood filter").
5. Empty the drip tray, if needed.
6. Switch on the hood, set the fan speed level to 2 or higher and let it run for some time to get rid of the remaining moisture.


## 9.4 Cleaning and regenerating the hood filters

The filtering unit consists of the following elements: grease filters combined with the

grease filter housing **A** and the removable long life carbon filters **B**.



The appliance must be used at all times with all the filters included in the scope of delivery.

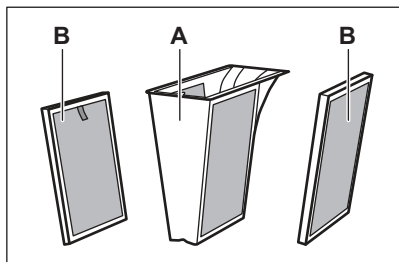

The grease filters **A** collect grease, oil, and food remains and prevent them from getting into the hood system. The long life carbon filters **B**, containing active carbon foam, neutralise smoke and cooking smells.

Clean the filters regularly and regenerate them periodically:

- Clean the grease filters **A** as soon as the built-up grease is visible. The cleaning frequency depends on the amount of fat and oil used in cooking. It is recommended to clean the filters once a month, or more frequently, if needed.
- Clean the long life carbon filters **B** only when the built-up grease is visible.
- Regenerate the long life carbon filters **B** only when the notification  is on. The maximum number of regeneration cycles is 8 (approximately 3 years). After that time, the filters need to be replaced with new ones.
- Additionally, the hob has a built-in counter with a notification that reminds you about cleaning the grease filters and regenerating the long life carbon filters. The counter for the notification starts automatically when you turn on the hood for the first time. After 140 hours of use the indicator  starts blinking to signal

that it is time to clean the grease filters **A** and regenerate the long life carbon filters

**B**. The notification stays on for 30 seconds after you deactivate the hood and the hob. The notification does not block the use of the hob.




#### **WARNING!**

Oversaturated filters can pose a risk of fire.


### Disassembling / reassembling the filters

The filters and the grease filter housing are located right under the grid in the centre of the hob. Remove them carefully as they might be slippery due to accumulated grease.


#### 1. Remove the grid.

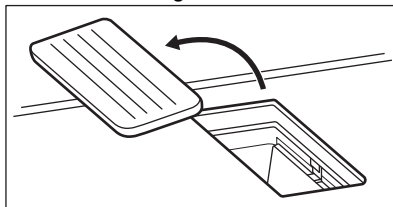

#### 2. Take out the grease filter housing by grabbing the protruding handle.

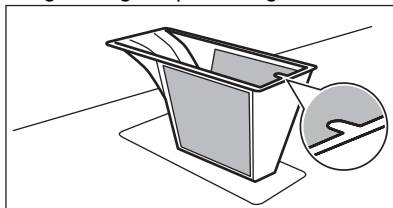

#### 3. Take out the long life carbon filters by grabbing the handle.

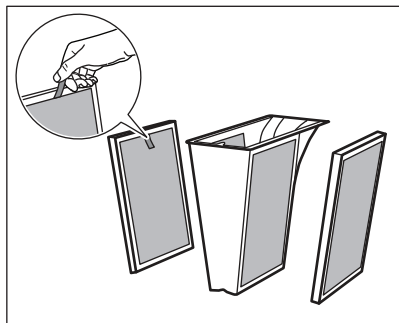

4. Reassemble the filtering unit after cleaning:
  - a. Slide the long life carbon filters into the hood system along the built-in runners.
  - b. Place the grease filter housing back inside.
  - c. Place the grid back on.

### Cleaning the grease filters and the grease filter housing

1. Wash the grease filter housing with the grease filters carefully in warm water using a mild cleaning agent, then rinse it with warm water. You can use a soft sponge, a soft cloth, or a non-abrasive cleaning brush to remove food remains, if necessary.  
You can wash the grease filters and the grease filter housing in the dishwasher on a standard cycle with other dishes in the same load.



Depending on the detergent type and the number of dishwasher cycles, some mild discolouration on the mesh may naturally occur. This does not affect the performance of the grease filter.

It is not recommended to use paper towels while cleaning / drying the filtering components.

2. Leave it for some time to dry at room temperature.
3. Put the grease filter housing with the grease filters back inside.
4. If the notification  is on, press  briefly to reset the counter.  
The counter restarts.

### Cleaning the long life carbon filters

1. Wash the filters carefully in warm water without any cleaning agents. Detergents can damage the carbon filtration. You can use a soft sponge, a soft cloth, or a non-abrasive cleaning brush to remove food remains, if necessary. Alternatively, after removing heavier dirt from the filters, you can also wash the filters in a dishwasher at 65-70 °C (using a program longer than 90 min), without detergents and without dishes in the same load.
2. Leave the filters to dry for at least 24h at room temperature. The filters need to be fully dried before reassembly.
3. Reassemble the filtering unit and put it back inside.

### Regenerating the long life carbon filters

1. Clean the filters first, as described above.
2. Put the filters in the oven set to 100 °C for 120 min. Place the filters on the middle wire shelf. Use a non-fan oven function.
3. Reassemble the filtering unit and put it back inside.
4. Press  briefly to reset the counter.  
The counter restarts.

## 10. TROUBLESHOOTING



### WARNING!

Refer to Safety chapters.

## 10.1 What to do if...

| Problem                                                                                                                     | Possible cause                                                                          | Remedy                                                                                                                          |
|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| You cannot activate or operate the hob.                                                                                     | The hob is not connected to an electrical supply or it is connected incorrectly.        | Check if the hob is correctly connected to the electrical supply.                                                               |
|                                                                                                                             | The fuse is blown.                                                                      | Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician. |
|                                                                                                                             | You did not set the heat setting for 60 seconds.                                        | Activate the hob again and set the heat setting in less than 60 seconds.                                                        |
|                                                                                                                             | You touched 2 or more sensor fields at the same time.                                   | Touch only one sensor field.                                                                                                    |
|                                                                                                                             | There is water or fat stains on the control panel.                                      | Clean the control panel.                                                                                                        |
| You can hear a constant beep noise.                                                                                         | The electrical connection is incorrect.                                                 | Disconnect the hob from the electrical supply. Ask a qualified electrician to check the installation.                           |
| You cannot select the maximum heat setting for one of the cooking zones.                                                    | The other zones consume the maximum available power.<br>Your hob works properly.        | Reduce the heat setting of the other cooking zones connected to the same phase. Refer to "Power management".                    |
| An acoustic signal sounds and the hob deactivates.<br>An acoustic signal sounds when the hob is deactivated.                | You put something on one or more sensor fields.                                         | Remove the object from the sensor fields.                                                                                       |
| The hob deactivates.                                                                                                        | You put something on the sensor field ①.                                                | Remove the object from the sensor field.                                                                                        |
| Residual heat indicator does not come on.                                                                                   | The zone is not hot because it operated only for a short time or the sensor is damaged. | If the zone operated sufficiently long to be hot, speak to an Authorised Service Centre.                                        |
| The control panel becomes hot to the touch.                                                                                 | The cookware is too large or you put it too close to the control panel.                 | Put large cookware on the rear zones, if possible.                                                                              |
| There is no sound when you touch the panel sensor fields.                                                                   | The sounds are deactivated.                                                             | Activate the sounds. Refer to "Daily use".                                                                                      |
| The indicator above the symbol  comes on. | Child Safety Device or Lock operates.                                                   | Refer to "Child Safety Device" and "Lock".                                                                                      |
| The control bar blinks.                                                                                                     | There is no cookware on the zone or the zone is not fully covered.                      | Put cookware on the zone so that it fully covers the cooking zone.                                                              |
|                                                                                                                             | The cookware is unsuitable.                                                             | Use cookware suitable for induction hobs. Refer to "Hints and tips".                                                            |
|                                                                                                                             | The diameter of the bottom of the cookware is too small for the zone.                   | Use cookware with correct dimensions. Refer to "Technical data".                                                                |

| Problem                                                                                                  | Possible cause                                                                                                                 | Remedy                                                                                                                                                                                                                                                                                                                                                                                        |
|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Heating up takes a long time.                                                                            | Cookware is too small and receives only a part of the power generated by the cooking zone.                                     | For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").                                                                                                                                                                                           |
| SenseFry does not work.                                                                                  | The power level of the hob is too low.                                                                                         | Set the power level to a higher value. Make sure that the selected power fits the house installation fuses. Refer to "Before first use" > "Power limitation".                                                                                                                                                                                                                                 |
| The hood does not start or turns off. The indicators above the hood control symbols might also blink.    | The fan may turn off by itself in certain conditions, e.g. when the room is not properly ventilated.                           | Open the window. You may need to install the window switch. Refer to "Assembly". If the window switch is already present, make sure it was correctly installed. Refer to the installation booklet.<br>Press any symbol. The hood operates again.                                                                                                                                              |
| The hood fan does not work properly when the hood functions are activated.                               | The ambient temperature surrounding the hood is too high.<br>There is insufficient air circulation inside and around the hood. | Deactivate the hob and unplug it from the main power supply. Wait at least 10 seconds, then plug it in again.<br>Other suggestions:<br>Try to cool down the temperature of the surrounding area. Take out the hood filter and remove the residual moisture from the inside of the hood. Refer to "Care and cleaning". Leave the hood system to dry for one day, then activate the hood again. |
| The steam produced during cooking is not sufficiently absorbed by the hood.                              | The lids on the cookware are not properly placed.                                                                              | If your cookware does not have vented lids, make sure to tilt the lids so that the released steam is directed towards the hood.<br>Refer to "Hints and Tips" for information on the special Steam Vented Lids recommended to be used with the integrated hood.                                                                                                                                |
|                        | The hood filter is oversaturated.                                                                                              | Clean and regenerate the hood filter and reset the notification. Refer to "Care and cleaning".                                                                                                                                                                                                                                                                                                |
|  and a number come on. | There is an error in the hob.                                                                                                  | Deactivate the hob and activate it again after 30 seconds. If  comes on again, disconnect the hob from the electrical supply. After 30 seconds, connect the hob again. If the problem continues, speak to an Authorised Service Centre.                                                                    |

## 10.2 If you cannot find a solution...

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Give the data from the rating

plate. Make sure, you operated the hob correctly. If not the servicing by a service technician or dealer will not be free of charge, also during the warranty period. The information about guarantee period and

Authorised Service Centres are in the guarantee booklet.

## 11. TECHNICAL DATA

### 11.1 Rating plate

Model NCH84C23AB  
Typ 67 D4A 04 AD  
Induction 7.35 kW  
Ser.Nr. ....  
AEG

PNC 949 598 230 00  
220 - 240 V / 400 V 2N, 50 Hz  
Made in: Germany  
7.35 kW  
  

### 11.2 Cooking zones specification

| Cooking zone | Nominal power (maximum heat setting) [W] | PowerBoost [W] | PowerBoost maximum duration [min] | Cookware diameter [mm] |
|--------------|------------------------------------------|----------------|-----------------------------------|------------------------|
| Left front   | 2300                                     | 3200           | 10                                | 125 - 210              |
| Left rear    | 2300                                     | 3200           | 10                                | 125 - 210              |
| Right front  | 2300                                     | 3200           | 10                                | 125 - 210              |
| Right rear   | 2300                                     | 3200           | 10                                | 125 - 210              |

The power of the cooking zones can be different in some small range from the data in the table. It changes with the material and dimensions of the cookware.

For optimal heat transfer and cooking results use cookware with bottom diameter similar to

the size of the cooking zone (i.e. the maximum cookware diameter value in the table). Do not use cookware larger than the diameter of the cooking zone.

## 12. ENERGY EFFICIENCY

### 12.1 Product Information according to EU and UK Ecodesign Regulations for Hob

|                         |              |
|-------------------------|--------------|
| Model identification    | NCH84C23AB   |
| Type of hob             | Built-In Hob |
| Number of cooking zones | 2            |
| Number of cooking areas | 1            |
| Heating technology      | Induction    |

|                                                              |            |                        |
|--------------------------------------------------------------|------------|------------------------|
| Diameter of circular cooking zones (Ø)                       | Left front | 21.0 cm                |
|                                                              | Left rear  | 21.0 cm                |
| Length (L) and width (W) of the cooking area                 | Right      | L 36.5 cm<br>W 26.5 cm |
|                                                              |            |                        |
| Energy consumption per cooking zone (EC electric cooking)    | Left front | 180.8 Wh/kg            |
|                                                              | Left rear  | 184.4 Wh/kg            |
| Energy consumption of the cooking area (EC electric cooking) | Right      | 183.7 Wh/kg            |
|                                                              |            |                        |
| Energy consumption of the hob (EC electric hob)              |            | 183.2 Wh/kg            |

IEC / EN 60350-2, BS EN 60350-2 - Household electric cooking appliances - Part 2: Hobs - Methods for measuring performance.

The energy measurements referring to the cooking area are identified by the markings of the respective cooking zones.

## 12.2 Hob - Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

## 12.3 Product Information for power consumption and maximum time to reach applicable low power mode

|                                                                                            |       |
|--------------------------------------------------------------------------------------------|-------|
| Power consumption in off mode                                                              | 0.3 W |
| Maximum time needed for the equipment to automatically reach the applicable low power mode | 2 min |

## 12.4 Product Information Sheet and Product Information according to EU and UK Energy Labelling and Ecodesign Regulations for Hood

| Product Information Sheet             |            |       |
|---------------------------------------|------------|-------|
| Supplier's name or trade mark         | AEG        |       |
| Model identifier                      | NCH84C23AB |       |
| Annual Energy Consumption - AEGhood   | 32.7       | kWh/a |
| Energy Efficiency Class               | A+         |       |
| Fluid Dynamic Efficiency - FDEhood    | 32.0       |       |
| Fluid Dynamic Efficiency class        | A          |       |
| Lighting Efficiency - LEhood          | -          | lux/W |
| Lighting Efficiency Class             | -          |       |
| Grease Filtering Efficiency - GFEhood | 85.1       | %     |

|                                                                              |       |               |
|------------------------------------------------------------------------------|-------|---------------|
| Grease Filtering Efficiency class                                            | B     |               |
| Minimum Air Flow in normal use                                               | 270.0 | m³/h          |
| Maximum Air Flow in normal use                                               | 550.0 | m³/h          |
| Air Flow at intensive/boost setting                                          | 650.0 | m³/h          |
| A-weighted Sound Power Emissions at minimum speed                            | 50    | db(A) re 1 pW |
| A-weighted Sound Power Emissions at maximum speed                            | 66    | db(A) re 1 pW |
| A-weighted Sound Power Emissions at intensive or boost speed                 | 69    | db(A) re 1 pW |
| Measured power consumption off mode - Po                                     | 0.49  | W             |
| Measured power consumption in standby mode - Ps                              | -     | W             |
| <b>Additional Information</b>                                                |       |               |
| Time increase factor - f                                                     | 0.8   |               |
| Energy Efficiency Index - EEIhood                                            | 42.6  |               |
| Measured air flow rate at best efficiency point - QBEP                       | 286.7 | m³/h          |
| Measured air pressure at best efficiency point - PBEP                        | 449   | Pa            |
| Maximum air flow - Qmax                                                      | 650.0 | m³/h          |
| Measured electric power input at best efficiency point - WBEP                | 111.9 | W             |
| Nominal power of the lighting system - WL                                    | -     | W             |
| Average illumination of the lighting system on the cooking surface - Emiddle | -     | lux           |

Appliance tested according to: IEC / EN 61591, BS EN 61591, IEC / EN 60704-1, BS EN 60704-1, IEC / EN 60704-2-13, BS EN 60704-2-13, IEC / EN 50564, BS EN 50564.

### 12.5 Hood - Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you start cooking, set the hood fan at a low speed level. Once the cooking is finished, keep the hood running for a few minutes.

- Increase the fan speed only to get rid of large amounts of steam or smoke. It is recommended to use the Boost function only in extreme situations.
- Clean the hood filter regularly and replace it when necessary to maintain its efficiency.
- Use the maximum diameter of the ducting system to optimize efficiency and minimize noise.

## 13. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.







