


AEG

 
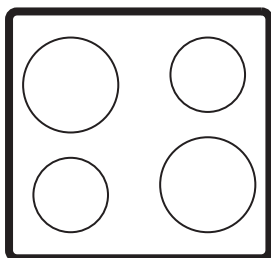 


aeg.com/register




NRN84A06XB

INSTALLATION

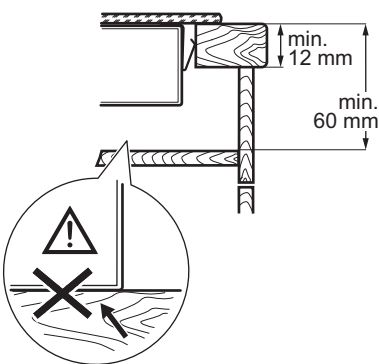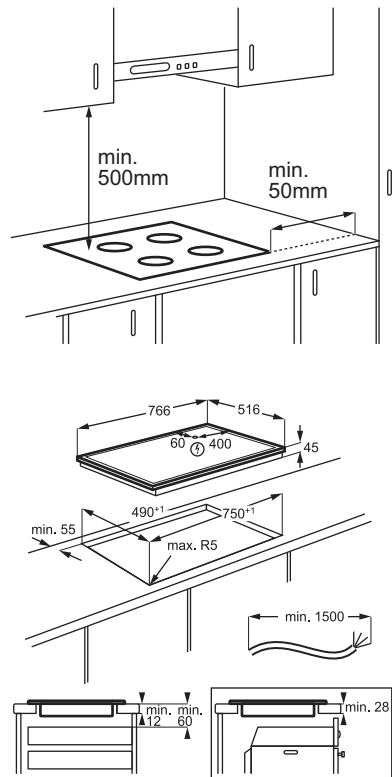

www.youtube.com/electrolux
www.youtube.com/aeg

 How to install your AEG
Radiant Hob - Worktop installation

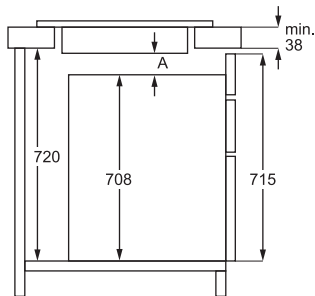

Combination with double oven		
Brand	AEG/Electrolux/Zanussi	Other
A	min. 6 mm	min. 12 mm

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. ASSEMBLY.....	6
4. PRODUCT DESCRIPTION.....	7
5. DAILY USE.....	8
6. COOKING GUIDE.....	9

7. CARE AND CLEANING.....	9
8. TROUBLESHOOTING.....	10
9. TECHNICAL DATA.....	10
10. ENERGY EFFICIENCY.....	10
11. ENVIRONMENTAL CONCERNS.....	11

1. SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away

from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep packaging away from children and dispose of it properly.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away during use and cooling.
- Activate the child safety device, if available.
- Children must not clean or maintain the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest

houses, and other similar accommodation where such use does not exceed average domestic usage levels.

- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching the heating elements.
- Smoke indicates overheating. Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or a lid.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Metallic objects such as knives, forks, spoons and

lids should not be placed on the hob surface since they can get hot.

- Do not use the appliance before installing it in the built-in structure.
- Do not use water spray and steam to clean the appliance.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance, or those indicated by the manufacturer of the appliance in the instructions for use as suitable, or hob guards that are incorporated in the appliance. The use of inappro-

prate guards can cause accidents.

2. SAFETY INSTRUCTIONS

2.1 Installation

WARNING!

Only a qualified technician must install this appliance.

WARNING!

Risk of injury or damage to the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Refer to the installation booklet for detailed assembly instructions.
- Keep the minimum distance from other appliances and units.
- Be careful when moving the appliance, as it is heavy. Use safety gloves and enclosed footwear.
- Seal the cut surfaces of the cabinet with a sealant to prevent moisture swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance next to a door or under a window to prevent hot cookware from falling from the appliance when the door or the window is opened.
- Ensure sufficient air circulation if the appliance is installed above drawers.
- The bottom of the appliance can get hot. Install a separation panel made from plywood, kitchen carcass material, or other non-flammable materials to prevent access.
- The separation panel must fully cover the area under the appliance.

2.2 Electrical Connection

WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Disconnect the appliance from the power supply before any operation.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains.

- Loose or incorrect mains cables or plugs may lead to overheating of the terminal.
- Use the correct mains cable.
- Do not let the mains cable tangle.
- Ensure shock protection is installed.
- Use the strain relief clamp on the mains cable.
- Ensure the mains cable or plug (if applicable) do not touch hot surfaces.
- Do not use multi-plug adapters and extension cables.
- Avoid damaging the mains plug and cable. If replacement is needed, it must be done by our Authorised Service Centre or a qualified electrician.
- Shock protection of live and insulated parts must be fastened securely and should not be removable without tools.
- Connect the mains plug to the socket only at the end of installation. Ensure access to the mains plug after installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not disconnect the appliance by pulling on the mains cable. Always pull on the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device that disconnects the appliance from the mains at all poles, with a contact opening width of at least 3 mm.

2.3 Use

WARNING!

Risk of injury, burns and electric shock.

- Do not change the specification of the appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.
- Ensure ventilation openings are not blocked.
- Do not leave the appliance unattended during operation.
- Turn off the cooking zone after each use.
- Do not place cutlery or saucepan lids on cooking zones, as they can become hot.

- Do not operate the appliance with wet hands or when it comes in contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- If the surface of the appliance is cracked, immediately disconnect the appliance from the power supply to prevent the electric shock.
- Place food into hot oil carefully as it may splash.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.

 WARNING!

Risk of fire and explosion.

- Heated fats and oils can release flammable vapors. Keep flames and heated objects away.
- Hot oil vapors can cause spontaneous combustion.
- Used oil with food remnants can ignite at lower temperatures.
- Do not place flammable products near the appliance.

 WARNING!

Risk of damage to the appliance.

- Do not place hot cookware on the control panel to avoid the risk of burns.
- Do not put a hot pan cover on the glass surface of the appliance.
- Do not let cookware boil dry.
- Prevent objects or cookware from falling onto the appliance to avoid the surface damage.
- Do not activate the cooking zones with empty cookware or without cookware.
- Cookware made of cast iron, aluminium or with a damaged bottom can cause

- scratches on the glass / glass ceramic. Always lift cookware up when you have to move it on the cooking surface.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.

2.4 Care and cleaning

- Clean the appliance regularly to prevent surface deterioration.
- Switch off the appliance and let it cool down before cleaning.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects, unless otherwise specified.
- Check the product regularly for signs of deterioration that may make it unsuitable for food contact, such as cracks, blisters, delamination, shrinkage, stickiness, corrosion, or other visible changes in texture or appearance. Follow cleaning and care instructions to prevent deterioration.

2.5 Disposal

 WARNING!

Risk of injury or suffocation.

- Contact your local authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply, then cut off and dispose of the electrical cable.

3. ASSEMBLY

3.1 Before the installation

For future reference, find the rating plate located on the bottom of the hob and write down the serial number

 
3.2 Assembling the hob

- ① For installation dimensions and visual guidance, refer to the installation diagrams located on the first pages of the user manual.

Handle the appliance carefully during installation to avoid bending or damaging the frame.

If you install the hob under a hood, see the installation instructions of the hood for the minimum distance between the appliances.

3.3 Protection box

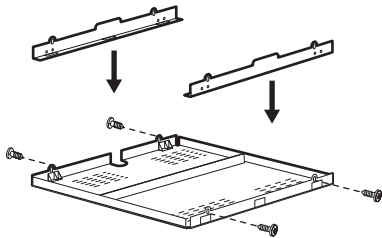

If you use a protection box (an additional accessory), the protective floor directly below the hob is not necessary. The protection box accessory may not be available in some countries. Contact Customer Support Service.

 
i You cannot use the protection box if you install the hob above an oven.

3.4 Connection cable

- For a single phase or two phase connection, use the cable type: H03V2V2-F or H05BB-F which withstands a temperature of 90 °C or higher.
- To replace the damaged mains cable, use the cable: H03V2V2-F or H05BB-F which withstands a temperature of 90 °C or higher. Contact an Authorised Service Centre. The connection cable may only be replaced by a qualified electrician.

4. PRODUCT DESCRIPTION

4.1 Cooking surface layout

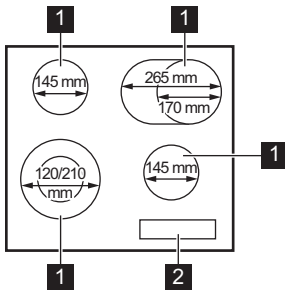

- 1** Cooking zone
- 2** Control panel

4.2 Symbols on the control panel and the display

Symbol / indicator	
	On / Off

Symbol / indicator	
	Lock / Child Safety Device
	Pause
	To set a heat setting.
	Timer
	Double zone
	Oval zone
	Automatic Heat Up operates.
	Lock / Child Safety Device operates.
	Pause operates.
	Residual heat indicator
	Automatic Switch Off operates.
	There is a malfunction.

5. DAILY USE

5.1 Using the hob

Press and hold  to activate or deactivate the hob. Put the cookware in the centre of the cooking zone. Set a heat setting using  and . To deactivate the cooking zone, press  and  at the same time.

5.2 Cookware

The base of the cookware should be as thick and flat as possible. Clean and dry it before placing cookware on the hob. Do not slide or rub the cookware on the edges and corners of the glass to avoid chipping or damaging the surface. Do not place hot cookware on the control panel to avoid damage to the electronic parts.

For optimal heat transfer use cookware no larger than the diameter of the cooking zone.

Cookware material

- **correct:** aluminium, cast iron, steel, enamelled steel, stainless steel, copper.
- **incorrect:** stone, glass, ceramic, porcelain.

 Enamelled steel cookware with aluminium or copper bases can cause discolouration of the glass ceramic surface.

5.3 Automatic Switch Off

As a safety measure, the hob switches off automatically in certain conditions (e.g. when all cooking zones are deactivated, when no heat setting is selected after activation, or when cookware boils dry).

5.4 Residual heat indicator

The indicator signals that a cooking zone is still hot. As long as the indicator is visible, there is a risk of burns from residual heat. The indicator disappears when the cooking zone has cooled down.

5.5 Activating/deactivating the outer rings

You can manually adjust the size of the cooking zone to the dimensions of the cookware.

Set a heat setting for the cooking zone with an outer ring available. Press:   to activate.

To deactivate the outer ring, press the symbol until the indicator disappears.

5.6 Automatic Heat Up

The function speeds up the heating of the cooking zone to reach the selected heat setting faster. The cooking zone must be cold.

Press  to choose a heat setting.

After 3 sec  appears.

To deactivate the function, press .

5.7 Timer

To specify how long a cooking zone should operate: set a heat setting on the

cooking zone and press  until the corresponding cooking zone indicator appears. Set the time using  /  of the timer.

To see the remaining time press  until the corresponding cooking zone indicator appears. The display shows the remaining time.

When the set time runs out, the cooking zone deactivates. To stop the sound touch . To cancel the timer press  until the corresponding cooking zone indicator appears, then press  until 00 appears on the display.

To use the function as a Minute Minder:

when the hob is on but none of the cooking zones operate, press  and set the time using  / .

5.8 Pause

The function sets all active cooking zones to the lowest heat setting.

The function does not stop any active timers.

To activate/deactivate, press .

5.9 Lock/Child Safety Device

To lock/unlock the control panel as needed.

To lock the control panel briefly while

cooking: press  once. Press again to unlock.

To prevent accidental operation of the

hob: press and hold  for 4 sec while all the zones are deactivated, then switch off the hob. The function stays active when you de-

activate the hob. To deactivate the function, switch on the hob, press and hold  for 4 sec, and switch off the hob.

To override the function for only one cooking session: switch on the hob, press and hold  for 4 sec and set the heat setting within 10 sec. You can use the hob. When you switch off the hob the function is active again.

5.10 Energy saving tips

- When you heat up water, use only the amount you need.

- Put cookware in the centre of a cooking zone before you activate it.
- The bottom of the cookware should have the same diameter as the cooking zone.
- Put smaller cookware on the smaller cooking zones.
- Always put lids on the cookware, if possible.
- Use the residual heat to keep food warm or to melt it.

For more information refer to "Energy efficiency".

6. COOKING GUIDE

The data in the table is for guidance only.

Setting	Use to:	Time (min)
 - 1	Keep cooked food warm. Put a lid on the cookware.	as necessary
1 - 2.	Make hollandaise sauce; melt butter, chocolate, gelatine. Mix from time to time.	5 - 25
2.	Solidify fluffy omelettes, baked eggs. Cook with a lid on.	10 - 40
2. - 3.	Simmer rice and milk-based dishes, heat up ready-made meals. Add at least twice as much liquid as rice, mix milk dishes halfway through.	25 - 50
3. - 4.	Stew vegetables, fish, meat. Add a few tablespoons of water. Check the water amount during cooking.	20 - 45
4. - 5.	Steam potatoes and other vegetables. Fill the pot with 1-2 cm of water. Check the water level during cooking. Keep the lid on.	20 - 60
4. - 5.	Cook larger quantities of food, stews, and soups. Up to 3 l of liquid plus ingredients.	60 - 150
5. - 7	Gently fry escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts. Turn over when needed.	as necessary
7 - 8	Deep-fry hash browns, loin steaks, steaks. Turn over when needed.	5 - 15
9	Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips.	

7. CARE AND CLEANING

7.1 Cleaning the hob

- Clean the hob after each use.
- Always use cookware with a clean base.
- Do not let cookware boil dry or reach excessively high temperatures.
- Scratches or dark stains on the glass surface do not affect the performance of the hob.
- Do not use knives or any other sharp, metal tools to clean the glass surface.
- Use a recommended scraper only as an additional tool after standard cleaning.

- Wait until the hob cools down and clean the surface with a moist cloth and a non-abrasive detergent. After cleaning, wipe the surface dry with a soft cloth.
- **Remove immediately:** melted plastic, plastic foil, salt, sugar, and food with sugar. Use a scraper and take care to avoid burns.
- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, burnt food remains, shiny metallic discolouration. Clean the surface as described above. To remove shiny

metallic discolouration use a soft cloth and a solution of water and vinegar.

8. TROUBLESHOOTING

❗ If you cannot find a solution to the problem below, contact an Authorised Service Centre.

You cannot activate/operate the hob.

- Make sure the hob is correctly connected to the electrical supply.
- Make sure that the fuse is the cause of the malfunction. If the fuse blows repeatedly or if you can hear a constant beep noise, contact a qualified electrician to inspect the installation.
- Make sure the control panel is clean and unobstructed by cookware/foreign objects.

The hob switches off by itself after some time.

- This is not a malfunction. In certain situations the hob switches off automatically to maintain safety. Refer to "Automatic Switch Off".

Automatic Heat Up does not work.

- Make sure the highest heat setting is not activated.
- Let the cooking zone cool down.

⚠ and a digit appear.

- Switch off the hob, wait a few minutes, then switch it back on. If the problem continues, contact an Authorised Service Centre.

9. TECHNICAL DATA

9.1 Rating plate

Model NRN84A06XB
Typ 60 HBD 47 AO
Radiant heater
Serial number
AEG

PNC 949 598 748 00
220 - 240 V / 400 V 2N, 50 Hz
Made in: Germany
7.0 kW



9.2 Cooking zones specification

Cooking zone	Nominal Power (Max heat setting) [W]	Cooking zone diameter [mm]
Left front	750 / 2200	120 / 210
Left rear	1200	145
Right front	1200	145
Right rear	1500 / 2400	170 / 265

10. ENERGY EFFICIENCY

10.1 Product Information according to (EU) No 66/2014

Model identification	NRN84A06XB
Type of hob	Built-In Hob
Number of cooking zones	4

Heating technology		Radiant Heater
Diameter of circular cooking zones (Ø)	Left front	21.0 cm
	Left rear	14.5 cm
	Right front	14.5 cm
Length (L) and width (W) of non circular cooking zone	Right rear	L 26.5 cm
		W 17.0 cm
Energy consumption per cooking zone (EC electric cooking)	Left front	194.9 Wh/kg
	Left rear	188.0 Wh/kg
	Right front	188.0 Wh/kg
	Right rear	191.6 Wh/kg
Energy consumption of the hob (EC electric hob)		190.6 Wh/kg

Appliance tested according to: EN IEC 60350-2.

10.2 Information requirements according to (EU) No 2023/826

Power consumption in off mode	0.3 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	2 min

Appliance tested according to: EN 50564.

11. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of ap-

pliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.

