


AEG



aeg.com/register

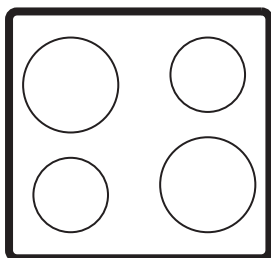

SO84IA0BIT

INSTALLATION



YouTube

www.youtube.com/electrolux
www.youtube.com/aeg



How to install your AEG/Electrolux
Induction Hob - Worktop installation




YouTube


www.youtube.com/electrolux
www.youtube.com/aeg

How to install your AEG/Electrolux
induction hob flush installation

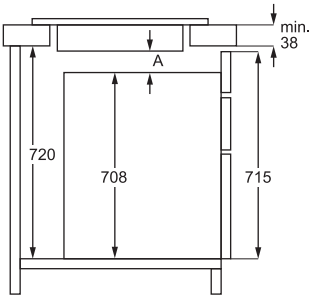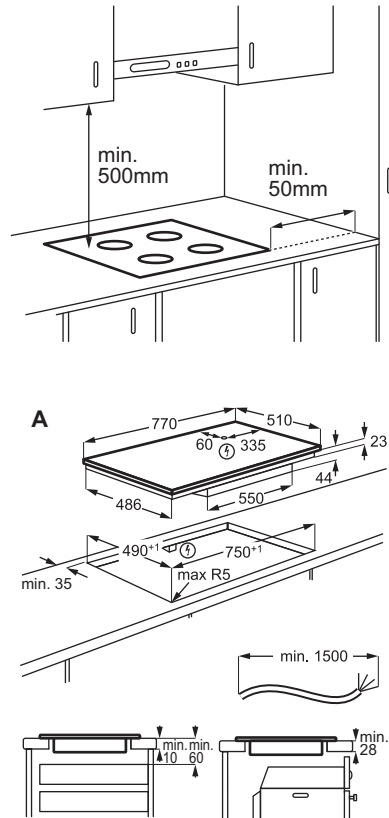

Combination with double oven		
Brand	AEG/Electrolux/Zanussi	Other
A	min. 6 mm	min. 12 mm

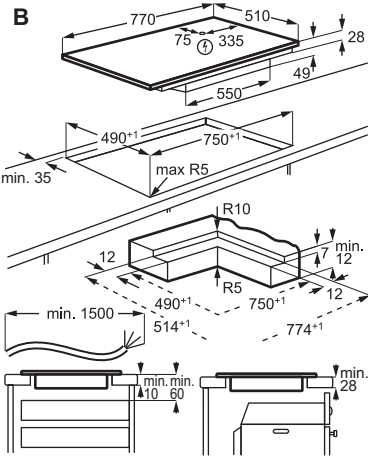

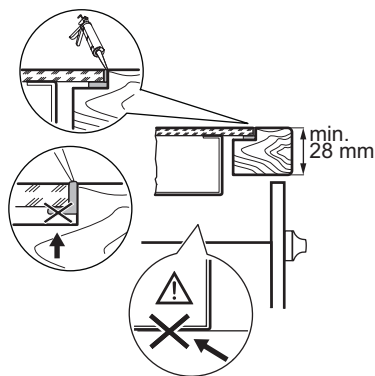

1. SAFETY INFORMATION.....	3
2. SAFETY INSTRUCTIONS.....	5
3. ASSEMBLY.....	7
4. PRODUCT DESCRIPTION.....	8
5. DAILY USE.....	9
6. COOKING GUIDE.....	11

7. CARE AND CLEANING.....	11
8. TROUBLESHOOTING.....	12
9. TECHNICAL DATA.....	12
10. ENERGY EFFICIENCY.....	13
11. ENVIRONMENTAL CONCERNS.....	13

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance read the supplied instructions carefully. The manufacturer is not responsible for any injuries or damage that result from incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep packaging away from children and dispose of it properly.

- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away during use and cooling.
- Activate the child safety device, if available.
- Children must not clean or maintain the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses, and other similar accommodation where such use does not exceed average domestic usage levels.
- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.
- **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching the heating elements.
- Smoke indicates overheating. Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or a lid.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.
- Do not use water spray and steam to clean the appliance.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- **WARNING:** If the surface is cracked, switch off the ap-

pliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.

- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons

to avoid an electrical hazard.

- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance, or those indicated by the manufacturer of the appliance in the instructions for use as suitable, or hob guards that are incorporated in the appliance. The use of inappropriate guards can cause accidents.

2. SAFETY INSTRUCTIONS

2.1 Installation

WARNING!

Only a qualified technician must install this appliance.

WARNING!

Risk of injury or damage to the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Refer to the installation booklet for detailed assembly instructions.
- Keep the minimum distance from other appliances and units.
- Be careful when moving the appliance, as it is heavy. Use safety gloves and enclosed footwear.
- Seal the cut surfaces of the cabinet with a sealant to prevent moisture swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance next to a door or under a window to prevent hot cookware from falling from the appliance when the door or the window is opened.
- Each appliance has cooling fans on the bottom.

- If the appliance is installed above a drawer:
 - Do not store small items or paper that could damage the cooling fans or impair the cooling system.
 - Keep a minimum 2 cm distance between the appliance bottom and drawer contents.
- Remove any separator panels installed in the cabinet below the appliance.

2.2 Electrical Connection

WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Disconnect the appliance from the power supply before any operation.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Loose or incorrect mains cables or plugs may lead to overheating of the terminal.
- Use the correct mains cable.
- Do not let the mains cable tangle.
- Ensure shock protection is installed.

- Use the strain relief clamp on the mains cable.
- Ensure the mains cable or plug (if applicable) do not touch hot surfaces.
- Do not use multi-plug adapters and extension cables.
- Avoid damaging the mains plug and cable. If replacement is needed, it must be done by our Authorised Service Centre or a qualified electrician.
- Shock protection of live and insulated parts must be fastened securely and should not be removable without tools.
- Connect the mains plug to the socket only at the end of installation. Ensure access to the mains plug after installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not disconnect the appliance by pulling on the mains cable. Always pull on the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device that disconnects the appliance from the mains at all poles, with a contact opening width of at least 3 mm.

2.3 Use

WARNING!

Risk of injury, burns and electric shock.

- Do not change the specification of the appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.
- Ensure ventilation openings are not blocked.
- Do not leave the appliance unattended during operation.
- Turn off the cooking zone after each use.
- Do not place cutlery or saucepan lids on cooking zones, as they can become hot.
- Do not operate the appliance with wet hands or when it comes in contact with water.
- Do not use the appliance as a work surface or as a storage surface.
- If the surface of the appliance is cracked, immediately disconnect the appliance from the power supply to prevent the electric shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the

induction cooking zones when the appliance is in use.

- Place food into hot oil carefully as it may splash.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.

WARNING!

Risk of fire and explosion.

- Heated fats and oils can release flammable vapors. Keep flames and heated objects away.
- Hot oil vapors can cause spontaneous combustion.
- Used oil with food remnants can ignite at lower temperatures.
- Do not place flammable products near the appliance.

WARNING!

Risk of damage to the appliance.

- Do not place hot cookware on the control panel to avoid the risk of burns.
- Do not put a hot pan cover on the glass surface of the appliance.
- Do not let cookware boil dry.
- Prevent objects or cookware from falling onto the appliance to avoid the surface damage.
- Do not activate the cooking zones with empty cookware or without cookware.
- Cookware made of cast iron or with a damaged bottom can cause scratches on the glass / glass ceramic. Always lift cookware up when you have to move it on the cooking surface.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.
- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.

2.4 Care and cleaning

- Clean the appliance regularly to prevent surface deterioration.
- Switch off the appliance and let it cool down before cleaning.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects, unless otherwise specified.

2.5 Disposal

WARNING!

Risk of injury or suffocation.

- Contact your local authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply, then cut off and dispose of the electrical cable.

3. ASSEMBLY

3.1 Before the installation

For future reference, find the rating plate located on the bottom of the hob and write down the serial number

3.2 Assembling the hob

 For installation dimensions and visual guidance, refer to the installation diagrams located on the first pages of the user manual.
For on-top installation refer to diagram **A**.
For integrated installation refer to diagram **B**.

If you install the hob under a hood, see the installation instructions of the hood for the minimum distance between the appliances.

If the appliance is installed above a drawer, the hob ventilation can warm up the items stored in the drawer during the cooking process.

3.3 Attaching the seal

On-top installation

1. Clean the worktop around the cut out area.
2. Attach the supplied 2x6 mm seal stripe to the lower edge of the hob, along the outer edge of the glass ceramic. Do not stretch it. Make sure that the ends of the seal stripe are located in the middle of one side of the hob.
3. Add some millimetres to the length when you cut the seal stripe. Join the two ends of the seal stripe together.

Integrated installation

1. Clean the rabbets in the worktop.

2. Cut the supplied 3x10 mm seal stripe into four stripes matching the length of the rabbets.
3. Cut the ends of the stripes at an angle of 45°. They should fit in the corners of the rabbets accurately.
4. Attach the stripes to the rabbets. Do not stretch the stripes. Do not bond the ends of the stripes one over the other.

After you assemble the hob, seal the remaining gap between the glass ceramic and the worktop with silicone. Make sure the silicone does not get under the glass ceramic.

3.4 Connection cable

WARNING!

All electrical connections must be made by a qualified electrician.

- To replace the damaged mains cable, use the cable type: H03V2V2-F or H05BB-F which withstands a temperature of 90 °C or higher. A single wire must have a minimal cross section in accordance with the table below. Speak to your local Service Centre. The connection cable may only be replaced by a qualified electrician.
- Connections via contact plugs, drilling or soldering the wire ends, and connecting the cable without cable end sleeve are forbidden.

Two-phase connection: 400 V2N~ (5x1,5 mm ² or 4x2,5 mm ²)	One-phase connection: 220 - 240 V~ (5x1,5 mm ² or 3x4 mm ²)
 Green - yellow	Green - yellow 
N Blue and blue	Blue and blue N

Two-phase connection: 400 V2N~ (5x1,5 mm² or 4x2,5 mm²)	One-phase connection: 220 - 240 V~ (5x1,5 mm² or 3x4 mm²)
--	--

L1	Black	Black and brown	L
L2	Brown		

3.5 Power limitation

Power limitation defines how much power is used by the hob in total, within the limits of the house installation fuses. The hob is set to its highest possible power level by default. Make sure that the selected power fits the house installation fuses.

To decrease or increase the power level:


1. Deactivate the hob.
2. Press and hold  for 3 sec. The display flashes briefly.
3. Press and hold  for 3 sec.  or  appears.
4. Press . P72 appears.
5. Press  /  of the timer to set the power level.

Power levels:

P72 — 7200 W, P15 — 1500 W, P20 — 2000 W, P25 — 2500 W, P30 — 3000 W, P35 — 3500 W, P40 — 4000 W, P45 — 4500 W, P50 — 5000 W, 60 — 6000 W

4. PRODUCT DESCRIPTION

4.1 Cooking surface layout

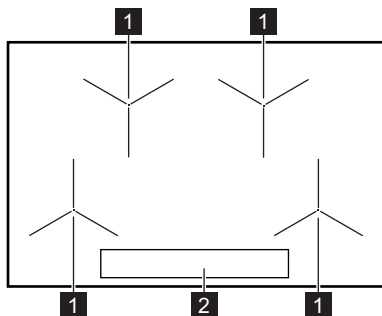

- 1** Induction cooking zone
- 2** Control panel

4.2 Symbols on the control panel and the display

Symbol / indicator

	On / Off
	Lock / Child Safety Device

Symbol / indicator

	Pause
 ,  , 	Timer
	Hob ² Hood
P	PowerBoost
	PowerBoost operates.
	Automatic Heat Up operates.
	Lock / Child Safety Device operates.
	Pause operates.
 ,  , 	OptiHeat Control
	Automatic Switch Off operates.
 + digit	There is a malfunction.
	There is a problem with the cookware.

5. DAILY USE

5.1 Using the hob

Press and hold  to activate or deactivate the hob. Put the cookware in the centre of the cooking zone. To set or change the heat setting touch the control bar at the correct heat setting or move your finger along the control bar.

Eco Timer

To save energy, the cooking zone deactivates shortly before the timer stops.

5.2 Cookware

The base of the cookware should be as thick and flat as possible. Clean and dry it before placing cookware on the hob. Do not slide or rub the cookware on the edges and corners of the glass to avoid chipping or damaging the surface. Do not place hot cookware on the control panel to avoid damage to the electronic parts.

Ensure that the cookware is induction compatible (i.e. a magnet sticks to its base). For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone. Cookware with a smaller diameter might heat up slower, while one with a larger diameter might overheat and damage the control panel.

Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from the manufacturer).
- **incorrect:** aluminium, copper, brass, glass, ceramic, porcelain.

Noises during operation

Noises may vary depending on the cookware material and the current heat setting. They are normal and do not indicate any malfunction.

- cracking noise: cookware is made of different materials (a sandwich construction).
- whistling sound: a high heat setting is activated and the cookware is made of different materials (a sandwich construction).
- humming: a high heat setting is activated.
- clicking: electric switching occurs.
- hissing, buzzing: the cooling fan operates.
- rhythmic sound: cookware is detected.

5.3 Automatic Switch Off

As a safety measure, the hob switches off automatically in certain conditions (e.g. when all cooking zones are deactivated, when no heat setting is selected after activation, or when cookware boils dry).

5.4 OptiHeat Control (3 step Residual heat indicator)

The indicator signals that a cooking zone is still hot. As long as the indicator is visible, there is a risk of burns from residual heat. The indicator disappears when the cooking zone has cooled down.

5.5 Power management

If the hob reaches the limit of maximum available power, the power of the cooking zones will be automatically reduced in order to protect the fuses of the house installation. For cooking zones that have a reduced power, the control bar blinks and shows the maximum possible heat settings.

5.6 P PowerBoost

To activate the maximum heat setting for a limited time. You can use it to boil water faster.

Press **P** to activate. Once the time runs out the cooking zone returns to the highest heat setting. To deactivate the function, change the heat setting.

5.7 Automatic Heat Up

The function speeds up the heating of the cooking zone to reach the selected heat setting faster.

1. Press **P** to activate.
2. Select a heat setting as soon as  appears on the display.

After a few seconds  appears.

To deactivate the function change the heat setting.

5.8 Timer

To specify how long a cooking zone should operate: set a heat setting on the cooking zone and press  until the corre-

sponding cooking zone indicator appears. Set the time using **+** of the timer.

To see the remaining time press **⏸** until the corresponding cooking zone indicator appears. The display shows the remaining time. You can adjust the time by pressing **+** / **-**. When the set time runs out, the cooking zone deactivates. To stop the sound touch **⏸**. To cancel the timer press **⏸** until the corresponding cooking zone indicator appears, then press **—** until 00 appears on the display.

To use the function as a Minute Minder: when the hob is on but none of the cooking zones operate, press **⏸** and set the time using **+** / **-**.

To monitor how long the cooking zone operates: set a heat setting on the cooking zone and press **⏸** until the corresponding cooking zone indicator appears, then touch **—** of the timer. **UP** appears. The display switches between **UP** and the counted time. To check the counted time, touch **⏸** until the corresponding cooking zone indicator appears. To deactivate the function touch **⏸** and then touch **+** or **-**.

5.9 || Pause

The function sets all active cooking zones to the lowest heat setting.

The function does not stop any active timers.

To activate/deactivate, press **||**.

5.10 **🔒** Lock/Child Safety Device

To lock/unlock the control panel as needed.

To lock the control panel briefly while

cooking: press **🔒** once. Press again to unlock.

To prevent accidental operation of the

hob: press and hold **🔒** for 4 sec while all the zones are deactivated, then switch off the hob. The function stays active when you deactivate the hob. To deactivate the function, switch on the hob, press and hold **🔒** for 4 sec, and switch off the hob.

To override the function for only one cooking session: switch on the hob, press and hold **🔒** for 4 sec and set the heat setting within 10

sec. You can use the hob. When you switch off the hob the function is active again.

5.11 **≡** Hob²Hood

The function connects the hob with the hood via an infrared signal communicator. The hood adjusts the fan speed based on the temperature of the cooking zone. You can also operate the hood fan manually.

ⓘ For most hoods the function is activated by default. For more information refer to the user manual for the hood.

Automatic mode

The automatic mode offers several speed options (H0 - off to H6 - intense). To change the default option (H5) enter the user settings.

1. Switch off the hob.
2. Press and hold **⏸** for 3 sec. The display flashes briefly.
3. Press and hold **🔒** for 3 sec.
4. Press **⏸** repeatedly until **H** appears.
5. Press **+** next to the timer to select an automatic mode.

For options H1 – H6 the hood light activates automatically when you switch on the hob, and deactivates 2 min after you switch off the hob.

When you switch off the hob, the hood fan may still operate for a certain period of time to remove any lingering smells after cooking. After that time the fan deactivates automatically.

Manual mode

Switch on the hob and press **≡**. The automatic mode deactivates. Change the fan speed by pressing **≡** repeatedly.

To activate the automatic mode, switch off the hob and switch it on again.

Hints and tips

- Do not interrupt the signal between the hob and the hood (e.g. by covering the hob control panel).
- Protect the hood panel from direct sunlight and halogen light.
- Do not use other remotely controlled appliances while the function operates as they may block the signal.

5.12 OffSound Control

To deactivate or activate the sounds.

Switch off the hob. Press and hold  for 3 sec. The display flashes on and off. Press and hold  for 3 sec. Press  of the timer to choose  (sounds off) or  (sounds on). To confirm, wait until the hob switches off automatically.

With the sounds deactivated you can still hear signals when you press , when the Timer stops, or when you put something on the control panel.

5.13 Energy saving tips

- When you heat up water, use only the amount you need.
- Always put lids on the cookware, if possible.
- Use the residual heat to keep food warm or to melt it.

For more information refer to "Energy efficiency".

6. COOKING GUIDE

The data in the table is for guidance only.

Setting	Use to:	Time (min)
 - 1	Keep cooked food warm. Put a lid on the cookware.	as necessary
1 - 3	Make hollandaise sauce; melt butter, chocolate, gelatine. Mix from time to time.	5 - 25
2 - 3	Solidify fluffy omelettes, baked eggs. Cook with a lid on.	10 - 40
3 - 5	Simmer rice and milk-based dishes, heat up ready-made meals. Add at least twice as much liquid as rice, mix milk dishes halfway through.	25 - 50
5 - 7	Stew vegetables, fish, meat. Add a few tablespoons of water. Check the water amount during cooking.	20 - 45
7 - 9	Steam potatoes and other vegetables. Fill the pot with 1-2 cm of water. Check the water level during cooking. Keep the lid on.	20 - 60
7 - 9	Cook larger quantities of food, stews, and soups. Up to 3 l of liquid plus ingredients.	60 - 150
9 - 12	Gently fry escalopes, veal cordon bleu, cutlets, rissoles, sausages, liver, roux, eggs, pancakes, doughnuts. Turn over when needed.	as necessary
12 - 13	Deep-fry hash browns, loin steaks, steaks. Turn over when needed.	5 - 15
14	Boil water, cook pasta, sear meat (goulash, pot roast), deep-fry chips.	
P	Boil large quantities of water. PowerBoost is activated.	

7. CARE AND CLEANING

7.1 Cleaning the glass surface of the hob

- Clean the hob after each use.
- Always use cookware with a clean base.
- Do not let cookware boil dry or reach excessively high temperatures.
- Do not use cookware made of induction-incompatible materials. Such materials may damage the hob surface or make it harder to clean.

- Scratches or dark stains on the glass surface do not affect the performance of the hob.
- Do not use knives or any other sharp, metal tools to clean the glass surface.
- Use a recommended scraper only as an additional tool after standard cleaning.
- Wait until the hob cools down and clean the surface with a soft cloth and a dishwashing detergent with warm water. Clean with circular movements and

moderate pressure. Wipe the surface dry with a microfibre cloth.

- Do not use the classic yellow and green sponge as the aluminium particles on its hard layer may damage and discolour the glass surface.
- Using tools other than the recommended ones will be ineffective and may damage or discolour the glass surface.
- **Remove immediately:** melted plastic, plastic foil, salt, sugar, and food with sugar. Use a scraper and take care to avoid burns.
- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, burnt food remains, shiny metallic discolouration. Clean the surface as

described above. To remove shiny metallic discolouration use a soft cloth and a solution of water and vinegar.

- **Remove persistent marks and stains:** for best results, use MATT CARE hob cleaner, dedicated to this type of surface, or any other mildly abrasive cleaning milk (e.g. Cif®, Viss®, Jif®, Vim®). Do not use standard hob cleaners for glossy surfaces (e.g. VitroCare®). Apply the cleaning agent to the stained surface and let it soak in for 5 min. Gently scrub the surface with a common non-scratch sponge with a (usually blue) scouring pad. Repeat until the stains are no longer visible. Remove any residual detergent from the surface and wipe it dry with a microfibre cloth.

8. TROUBLESHOOTING

❗ If you cannot find a solution to the problem below, contact an Authorised Service Centre.

You cannot activate/operate the hob.

- Make sure the hob is correctly connected to the electrical supply.
- Make sure that the fuse is the cause of the malfunction. If the fuse blows repeatedly or if you can hear a constant beep noise, contact a qualified electrician to inspect the installation.
- Make sure the control panel is clean and unobstructed by cookware/foreign objects.

The hob switches off by itself after some time.

- This is not a malfunction. In certain situations the hob switches off automatically to maintain safety. Refer to "Automatic Switch Off".

The maximum heat setting for one of the cooking zones is not available or it keeps changing between two levels.

- This is not a malfunction. Refer to "Power management".

- Reduce the heat setting of the other cooking zones connected to the same phase.

Automatic Heat Up does not work.

- Make sure the highest heat setting is not activated.
- Let the cooking zone cool down.

Hob²Hood does not work.

- Make sure nothing covers the control panel or blocks the signal.
- Move the cookware to a different cooking zone or switch the hood to manual mode.

E and a digit appear.

- Switch off the hob, wait a few minutes, then switch it back on. If the problem continues, contact an Authorised Service Centre.

F appears.

- Use cookware with bottom diameter similar to the size of the cooking zone.
- Make sure the cookware is induction-compatible.

9. TECHNICAL DATA

9.1 Rating plate

Model SO84IA0BIT
Typ 62 D4A 01 AA
Induction

PNC 949 598 725 00
220 - 240 V / 400 V 2N, 50 - 60 Hz
Made in: Germany

Serial number
AEG

7.2 kW
CE UK 

9.2 Cooking zones specification

The power of the cooking zones might slightly differ from the data below, depending on the material and the dimensions of the cookware.

Cooking zone	Nominal power (maximum heat setting) [W]	PowerBoost [W]	PowerBoost maximum duration [min]	Cookware diameter [mm]
Left front	2300	3200	10	125 - 210
Left rear	2300	3200	10	125 - 210
Right front	2300	3200	10	125 - 210
Right rear	2300	3200	10	125 - 210

10. ENERGY EFFICIENCY

10.1 Product Information according to (EU) No 66/2014

Model identification	SO84IA0BIT	
Type of hob	Built-In Hob	
Number of cooking zones	4	
Heating technology	Induction	
Diameter of circular cooking zones (Ø)	Left front Left rear Right front Right rear	21.0 cm 21.0 cm 21.0 cm 21.0 cm
Energy consumption per cooking zone (EC electric cooking)	Left front Left rear Right front Right rear	179.6 Wh/kg 177.0 Wh/kg 188.8 Wh/kg 177.0 Wh/kg
Energy consumption of the hob (EC electric hob)	180.6 Wh/kg	

Appliance tested according to: EN IEC 60350-2.

10.2 Information requirements according to (EU) No 2023/826

Power consumption in off mode	0.3 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	2 min

Appliance tested according to: EN 50564.

11. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human

health by recycling waste of electrical and electronic appliances. Do not dispose of appliances marked with the symbol  with the

household waste. Return the product to your local recycling facility or contact your municipal office.



701137980-A-162026