

NCU84F43AB

EN User Manual | **Hob**



Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:
www.aeg.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION.....	2
2. SAFETY INSTRUCTIONS.....	5
3. INSTALLATION.....	8
4. PRODUCT DESCRIPTION.....	10
5. BEFORE FIRST USE.....	13
6. DAILY USE.....	15
7. FLEXIBLE INDUCTION COOKING AREA.....	24
8. HINTS AND TIPS.....	25
9. CARE AND CLEANING.....	26
10. TROUBLESHOOTING.....	29
11. TECHNICAL DATA.....	34
12. ENERGY EFFICIENCY.....	35
13. ENVIRONMENTAL CONCERNS.....	37

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance and mobile devices with the dedicated app.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in fire.
- Smoke is an indication of overheating. Never use water to extinguish the cooking fire. Switch off the appliance and cover flames with e.g. a fire blanket or lid.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- **CAUTION:** The cooking process has to be supervised (even the automatic cooking functions). A short term cooking process has to be supervised continuously.

- **WARNING:** Danger of fire: Do not store items on the cooking surfaces.
- Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.
- Do not use the appliance before installing it in the built-in structure.
- Do not use water spray and steam to clean the appliance.
- After use, switch off the hob element by its control and do not rely on the pan detector.
- **WARNING:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. In case the appliance is connected to the mains directly using junction box, remove the fuse to disconnect the appliance from power supply. In either case contact the Authorised Service Centre.
- Ensure good air ventilation in the room where the appliance is installed to avoid the backflow of gases into the room from appliances burning gas or other fuels, including open fires.
- Make sure that the ventilation openings are not blocked and the air collected by the appliance is not conveyed into a duct used to exhaust smoke and steam from other appliances (central heating systems, thermosiphons, water-heaters, etc.).
- When the appliance operates with other appliances the maximum vacuum generated in the room should not exceed 0.04 mbar.
- Clean the hood filter regularly and remove grease deposits from the appliance to prevent the risk of fire.
- If the supply cord is damaged, it must be replaced by the manufacturer, an authorized Service or similarly qualified persons in order to avoid a hazard.
- If the appliance is connected directly to the power supply, the electrical installation must be equipped with an isolating device that allows to disconnect the appliance from the

mains at all poles. Complete disconnection must comply with conditions specified in the overvoltage category III. The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

- **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.



WARNING!

Risk of injury or damage to the appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions supplied with the appliance.
- Keep the minimum distance from other appliances and units.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Seal the cut surfaces of the cabinet with a sealant to prevent moisture from causing swelling.
- Protect the bottom of the appliance from steam and moisture.
- Do not install the appliance next to a door or under a window. This prevents hot cookware from falling from the appliance when the door or the window is opened.
- Do not install in a manner that exhausts air into a wall cavity, unless the cavity is designed for that purpose.
- For ductless installation, the fan outlet must be positioned directly against the wall or must be separated by an additional

cabinet wall, in order to prevent access to the fan blades.

- Each appliance has cooling fans on the bottom.
- If the appliance is installed above a drawer:
 - Do not store any small pieces or sheets of paper that could be pulled in, as they can damage the cooling fans or impair the cooling system.
 - Keep a distance of minimum 2 cm between the bottom of the appliance and parts stored in the drawer.
- Remove any separator panels installed in the cabinet below the appliance.

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician according to the connection diagram or installation booklet.
- In case of exhaust installation, and where the accessories are present or mandatory (wall valve, window switch and/or window opener) electrical connections should be made by a qualified electrician, according to the connection diagram or installation booklet.
- The appliance must be earthed.
- Before carrying out any operation make sure that the appliance is disconnected from the power supply.

- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Make sure the appliance is installed correctly. Loose and incorrect electricity mains cable or plug (if applicable) can make the terminal become too hot.
- Use the correct electricity mains cable.
- Do not let the electricity mains cable tangle.
- Make sure that a shock protection is installed.
- Use the strain relief clamp on the cable.
- Make sure the mains cable or plug (if applicable) does not touch the hot appliance or hot cookware, when you connect the appliance to a socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug (if applicable) or to the mains cable. Contact our Authorised Service Centre or an electrician to change a damaged mains cable.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.
- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- If the E3 code appears on the screen, immediately disconnect the hob and check if the electrical connection and the mains voltage are correct.

2.3 Use



WARNING!

Risk of injury, burns and electric shock.

- Do not change the specification of this appliance.
- Remove all the packaging, labelling and protective film (if applicable) before first use.
- Make sure that the ventilation openings are not blocked. The ventilation must be checked periodically by a qualified person.
- Do not let the appliance stay unattended during operation.
- Set the cooking zone to "off" after each use.
- Do not put cutlery or saucepan lids on the cooking zones. They can become hot.
- Do not operate the appliance with wet hands or when it comes in contact with water.
- Do not use the appliance as work surface and do not place food in direct contact with it.
- If the surface of the appliance is cracked, disconnect immediately the appliance from the power supply to prevent the electric shock.
- Users with a pacemaker must keep a distance of minimum 30 cm from the induction cooking zones when the appliance is in operation.
- When you place food into hot oil, it may splash.
- Never use an open flame when the integrated hood operates.
- Do not use aluminum foil or other materials between the cooking surface and the cookware, unless otherwise specified by the manufacturer of this appliance.
- Use only accessories recommended for this appliance by the manufacturer.



WARNING!

Risk of fire and explosion.

- Fats and oils when heated can release flammable vapours. Keep flames or heated objects away from fats and oils when you cook with them.

- The vapours that hot oil releases can cause spontaneous combustion.
- Used oil, that can contain food remnants, can cause fire at a lower temperature than oil used for the first time.
- Do not put flammable products or items moistened with flammable products in, near or on the appliance.



WARNING!

Risk of damage to the appliance.

- Do not keep hot cookware on the control panel to avoid the risk of burns.
- Do not put a hot pan cover on the glass surface of the hob.
- Do not let cookware boil dry.
- Be careful not to let objects or cookware fall on the appliance. The surface can be damaged.
- Do not activate the cooking zones with empty cookware or without cookware.
- Never remove the grid or the hood filter when the integrated hood or the appliance operates.
- Never use the integrated hood without the hood filter.
- Do not cover the inlet of the integrated hood with cookware.
- Do not open the bottom lid when the integrated hood or the appliance operates.
- Do not place small or light objects near the integrated hood to avoid the risk of being trapped.
- Cookware made of cast iron or with a damaged bottom can cause scratches on the glass / glass ceramic. Always lift these objects up when you have to move them on the cooking surface.

2.4 Food sensor



WARNING!

Risk of injury and burns.

- Use the Food sensor according to its purpose. Do not use it to open or lift anything.
- Use only the Food sensor recommended for the hob, one at a time.
- Do not use it when it is malfunctioning or damaged.

- Do not use the Food sensor in the oven or microwave.
- Make sure that the Food sensor is always inside the food or liquid, up to the minimum level mark.
- Clean the Food sensor before and after each use. Be careful, the tip of the Food sensor is pointed.
- Use only neutral detergents. Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects. Do not wash the Food sensor in the dishwasher. The silicone handle may discolour, which has no effect on how the Food sensor operates.
- Use the original packaging to store and charge the Food sensor.
- Make sure that the Food sensor is cool, clean, and dry before placing it into the charger.
- Store the Food sensor in a safe, dry place out of the reach of children.

2.5 Care and cleaning

- Clean the appliance regularly to prevent the deterioration of the surface material.
- Switch off the appliance and let it cool down before cleaning.
- Clean the appliance with warm water and a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects, unless otherwise specified.

2.6 Service

- To repair the appliance contact the Authorised Service Centre. Use original spare parts only.
- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

2.7 Disposal

⚠ WARNING!

Risk of injury or suffocation.

- Contact your local authority for information on how to dispose of the appliance.

- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

3. INSTALLATION

⚠ WARNING!

Refer to Safety chapters.

3.1 Before the installation

Before you install the hob, write down the information below from the rating plate. The rating plate is on the bottom of the hob.

Serial number

3.2 Built-in hobs

Only use the built-in hobs after you assemble the hob into correct built-in units and work surfaces that align to the standards.

3.3 Assembly

Refer to the installation booklet for detailed information on how to assemble your hob.


Handle the appliance carefully during installation to avoid bending or damaging the frame.

Follow the hob connection diagram and the window switch connection diagram (if applicable) presented in the installation booklet and / or the labels under the hob.





Only for selected countries

In case of exhaust installation a window switch might be required (consult an authorised technician). You need to buy it separately as it is not supplied with the hob. The window switch has to be installed by an authorised technician. Refer to the installation booklet.

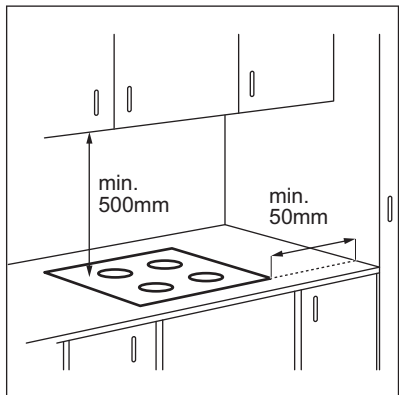

If the appliance is installed above a drawer, the hob ventilation can warm up the items stored in the drawer during the cooking process.

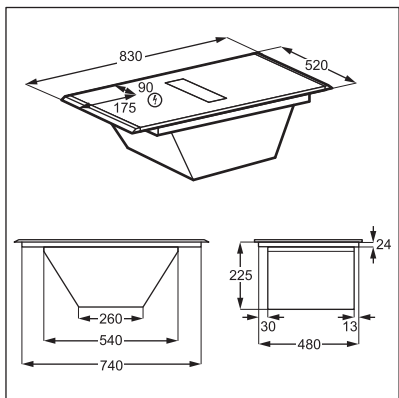

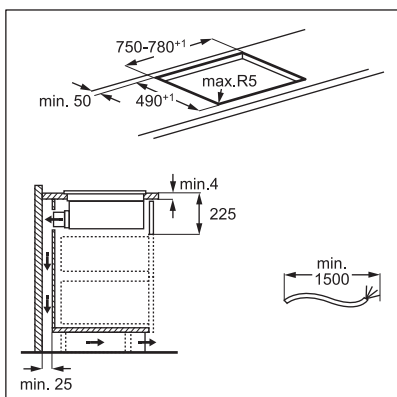

Find the video tutorial "How to install your AEG induction extractor hob" by typing out the full name indicated in the graphic below.



www.youtube.com/electrolux
www.youtube.com/aeg

How to install your AEG
induction extractor hob



Filter housing assembly

The appliance must be used at all times with all the filters included in the scope of delivery.

Before the first use make sure to insert the long life carbon filters inside the housing with the handles facing inwards. Refer to "Cleaning the hood filters". Once the filter housing is assembled, put it inside the hood system and place the grid on the hood.

3.4 Connection cable

- The hob is supplied with a connection cable.
- To replace the damaged mains cable, use the cable type which withstands a temperature of 125 °C or higher.
- Speak to your local Service Centre. The connection cable may only be replaced by a qualified electrician.

⚠ WARNING!

All electrical connections must be made by a qualified electrician.

⚠ CAUTION!

Connections via contact plugs are forbidden.

⚠ CAUTION!


Do not drill or solder the wire ends. It is forbidden.

⚠ CAUTION!

Do not connect the cable without cable end sleeve.

Two-phase connection

1. Remove the cable end sleeve from black and brown wires.
2. Remove a part of the insulation of black and brown cable ends.
3. Apply a new end wire sleeve on each wire's end (special tool required).

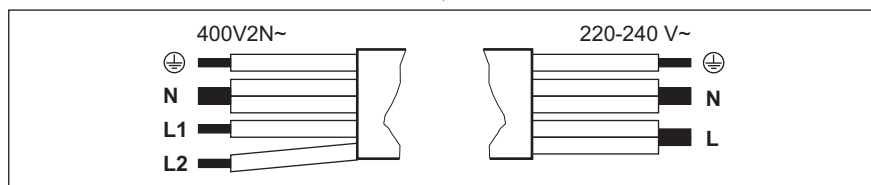

Two-phase connection: 400 V2N~

5x1,5 mm² or 4x2,5 mm²



Green - yellow

N

Blue and blue

One-phase connection: 220 - 240 V~

5x1,5 mm² or 3x4 mm²

Green - yellow




Blue and blue

N


Two-phase connection: 400 V2N~		One-phase connection: 220 - 240 V~	
5x1,5 mm ² or 4x2,5 mm ²		5x1,5 mm ² or 3x4 mm ²	
L1	Black	Black and brown	L
L2	Brown		

4. PRODUCT DESCRIPTION

4.1 Product overview

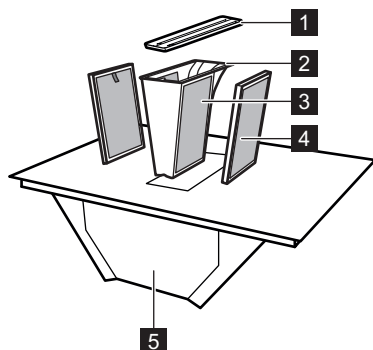


- 1** Grid
- 2** Grease filter housing
- 3** Grease filter (non-removable)
- 4** Long life carbon filter
- 5** Drip tray (under the hood system)

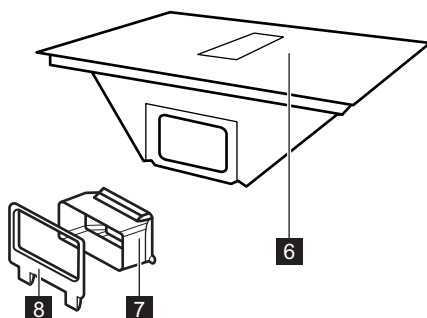

- 6** Hob
- 7** Air duct adapter
- 8** Air duct fitting for the back wall

4.2 Cooking surface layout

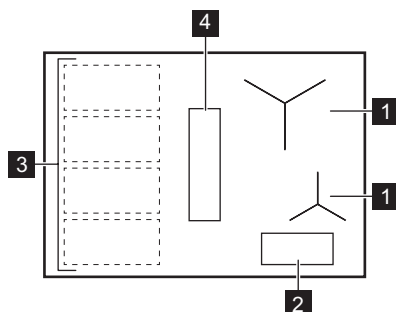


- 1** Induction cooking zone
- 2** Control panel
- 3** Flexible induction cooking area consisting of four sections
- 4** Hood



For detailed information on the sizes of the cooking zones refer to "Technical data".


4.3 Control panel layout

Main view

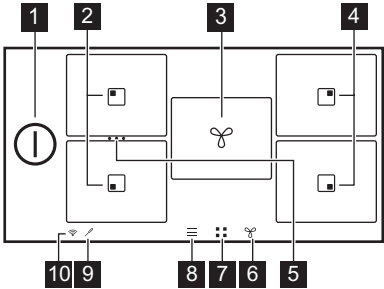

Symbol	Description
1	To activate and deactivate the hob.
2	Zone with Pan-frying and Boiling functions.
3	To set the hood functions.
4	Zone with Boiling function.
5	A shortcut for Flex Bridge. To switch between the three available modes: Standard / Big Bridge / Max Bridge. The function combines two cooking zones into segments.
6	Hood functions shortcut.
7	To open the zone overview.
8	To open the Menu.
9	The Food sensor indicator.
10	The WiFi indicator.

Expanded view

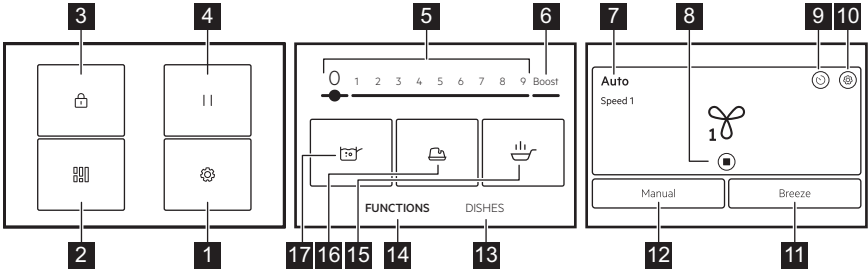


The list of functions may vary depending on the software version.

Symbol	Description
1 	Settings. To open the settings of the hob.
2 	Flex Bridge. To switch between the three available modes: Standard / Big Bridge / Max Bridge. The function combines two cooking zones into segments.
3 	Lock. To lock / unlock the control panel.
4 	Pause. To set all cooking zones that operate to the lowest heat setting.
5 1 - 9	To set a heat setting.
6 Boost	To activate the maximum heat setting.
7 Manual / Auto	To show the current setting of the hood fan.
8 	To stop / restart the hood.
9 	Hood timer. To set the timer for the hood.
10 	Hood settings. To open the settings of the hood.
11 Breeze	To turn the Breeze function.
12 Manual	To open the manual hood settings.
13 Dishes	To select preset automatic programs for different types of food.
14 FUNCTIONS	To select automatic programs for different methods of cooking.
15 	Pan-frying. To fry with automatically controlled heat levels, dedicated to various types of food.
16 	Melting. To melt different products, e.g. chocolate or butter.
17 	Boiling. To automatically adjust the temperature of water so that it does not boil over once it reaches the boiling point.


Display navigation

Symbol	Description
OK	To confirm the selection or setting.
X	To close the pop-up window.
^ v	To collapse / expand the instructions on the display.
	To activate / deactivate the option.
< >	To go back / forward one level in the Menu.

4.4 Food sensor

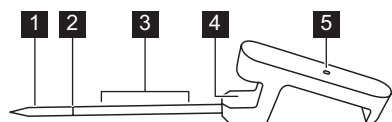

- 1** Measurement point
- 2** Minimum level mark
- 3** Recommended immersion range (for liquids)
- 4** Hook for placing the Food sensor on the rim
- 5** Control light

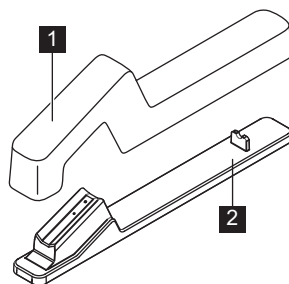

- 1** Cover
- 2** Charging station


5. BEFORE FIRST USE



WARNING!

Refer to Safety chapters.

5.1 Navigating the display

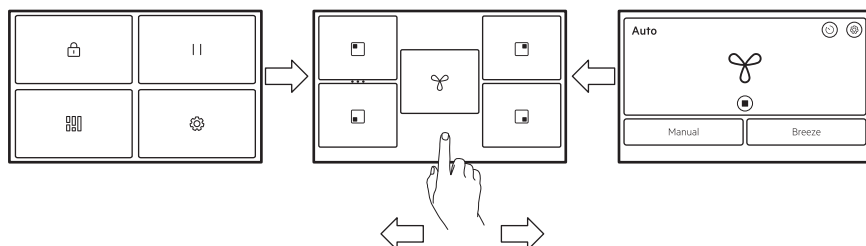

To navigate between the screens, tap on the symbols on the bottom of the display. You can also swipe to the left to manage the settings for the hood or to the right to reach the Menu.



If the display does not immediately react, make sure you are touching the centre of the chosen symbol / option or try to press it a bit longer.

5.2 First connection to the mains

When you connect the hob to the mains you have to set Language, Brightness, Volume and Key tones.

You can change the setting in Menu > Settings > Setup. Refer to "Daily use".

5.3 FlexPower

FlexPower defines how much power is used by the hob in total, within the limits of the house installation fuses.

Originally the appliance works at the highest possible power level. You can change the maximum power if the installation does not support the full power.



If the power level is lower than 2000 W, you cannot activate any automatic programs (Dishes or FUNCTIONS).

1. Switch on the hob.
2. Make sure that all cooking zones are deactivated.
3. Touch  on the display to open the Menu.
4. Select Settings > Setup > FlexPower and choose the appropriate power level.
5. Touch  or . Follow the instructions on the display to confirm your selection.



CAUTION!

Make sure that the selected power fits the house installation fuses.

5.4 Wireless / app connection

In order to use the app the hob has to be connected to the wireless network. WiFi is on by default.

1. Touch .
2. Select Settings > Connections > WiFi.
3. Touch  to activate WiFi.
The hob is now ready to connect to the wireless network and with the app.
4. Touch CONNECT.
5. Download the app. Scan the QR code located on the back cover of the user manual or download the app directly from the app store.
6. Open the app and register to get an account.
7. Add a new appliance.
8. Follow the instructions in the app to complete the connection process.

Changing / deactivating the network connection

To disconnect the hob from your home network:

1. Touch .
2. Select Settings > Connections > WiFi:
 - To disconnect from your wireless network touch DISCONNECT.
 - To deactivate WiFi touch .

To connect the hob to the new wireless network refer to "Wireless / app connection" above.

5.5 Food sensor pairing and calibrating

Your hob is not paired with the Food sensor upon delivery. Pair it before the first use or when you replace it with a new one.

To ensure accurate temperatures, always calibrate the Food sensor after pairing.

1. Touch .
2. Select Settings > Connections > Bluetooth.
3. Touch  to activate Bluetooth.
The hob automatically finds the available accessories. If your Food sensor does not appear in the list, make sure it is charged. Then shake or double tap it until the light stars blinking.
4. Choose the Food sensor from the list and follow the instructions on the display to complete the pairing process.
After pairing, the display automatically shows the calibration screen.
5. Touch START and follow the instructions on the display to complete the calibration process.
If you do not calibrate the Food sensor in this step you can do it later. Enter Bluetooth settings again and select your Food sensor to continue setup.
To use all functions of the Food sensor, calibrate it first.

Food sensor reset / removing

At any point, you can reset the Food sensor or disconnect it from the hob.

1. Touch .
2. Select Settings > Connections > Bluetooth.

The display shows the connected Food sensor.

3. Touch the Food sensor.
 - To calibrate the Food sensor again touch RESET.
 - To remove the Food sensor from the hob touch .

To connect the Food sensor again or add a new one refer to "Food sensor pairing and calibrating".

6. DAILY USE

WARNING!

Refer to Safety chapters.

6.1 Activating and deactivating

Touch  for 1 second to activate or deactivate the hob.

6.2 Automatic Switch Off

The function deactivates the hob automatically if:

- all cooking zones are deactivated.
- you do not set the heat setting after you activate the hob.
- you spill or put something on the control panel for more than 10 seconds (a pan, a cloth, etc.). An acoustic signal sounds and the hob deactivates. Remove the object or clean the control panel.
- the hob gets too hot (e.g. when a saucepan boils dry). Let the cooking zone cool down before you use the hob again.
- you use incorrect cookware or there is no cookware on a given zone. The induction cooking zone deactivates automatically after 50 seconds.
- you do not deactivate a cooking zone or change the heat setting. After some time a message comes on and the hob deactivates.

The relation between the heat setting and the time after which the hob deactivates:

Heat setting	The hob deactivates after
1 - 2	6 hours
3 - 5	5 hours
6	4 hours
7 - 9	1.5 hour



When you use Pan-frying the hob deactivates after 1.5 hours. For Melting the hob deactivates after 6 hours.

6.3 Pot detection

This feature detects if pots were placed on the cooking zones and deactivates the cooking zones if the cookware is no longer detectable.

- If you put cookware on a cooking zone first and then activate the hob, a grey bar appears on the overview of the corresponding cooking zone.
- The bar will not appear if there is no cookware on the cooking zone or the cookware cannot be detected due to its incorrect placement or unsuitable material.
- If you remove the cookware from an activated cooking zone and set it aside temporarily, the corresponding cooking zone overview will start blinking. If you do not place the cookware back on the activated cooking zone within 120 seconds, the cooking zone will automatically deactivate. To resume cooking, make sure to put the cookware back on the cooking zones before the indicated timeout.

6.4 Using the cooking zones

Induction cooking zones adapt to the dimensions of the bottom of the cookware automatically.



For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification"). Make sure that the cookware is suitable for induction hobs. For more information on cookware types refer to "Hints and tips".


To activate the cooking zone place the cookware in the centre of the cooking zone and touch the relevant zone symbol. The available programs appear on the display. Set the heat level or select one of the automatic functions. To get back to the main view touch **X** in the top right corner.

When other cooking zones are active the heat setting for the zone you want to use may be limited. Refer to "Power management".

6.5 Heat setting

1. Activate the hob.
2. Place the pot on the selected cooking zone and touch the relevant zone symbol.
3. Touch or slide your finger to set the heat setting.

The power level icons 1-9 become bigger and the bar below turns red to indicate the current power setting. When the power level is selected the screen changes to the expanded screen view.

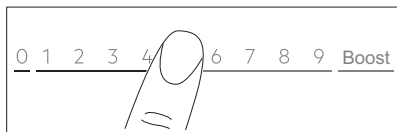

You can also change the heat setting on the zone overview screen. To go to the zone overview screen, touch the centre of the expanded screen view. To change the heat level touch **—** or **+**. To open the expanded screen view, touch the power level.

6.6 Boost

This function makes more power available to the induction cooking zones. The function can be activated for the cooking zone only for a

limited time. After this time the cooking zone automatically goes back to the highest heat setting.

1. Select the cooking zone.
2. Touch Boost to activate the function. The function deactivates automatically. To deactivate the function manually select the zone and change its heat setting to 0.



Boost does not work when:

- Flex Bridge operates in Standard and Max Bridge modes,
- the power within one phase is insufficient (refer to "Power management").



For maximum duration values, refer to "Technical data".

6.7 OptiHeat Control (3 step Residual heat indicator)



WARNING!

As long as the indicator **|||** / **||** / **|** is on, there is a risk of burns from residual heat.

The induction cooking zones produce the heat necessary for the cooking process directly in the bottom of the cookware. The glass ceramic is heated by the heat of the cookware.

The indicators appear when a cooking zone is hot. They show the level of the residual heat for the cooking zones you are currently using:

||| - continue cooking,

|| - keep warm,

| - residual heat.

The indicator may also appear:

- for the neighbouring cooking zones even if you are not using them,
- when hot cookware is placed on a cold cooking zone,
- when the hob is deactivated but the cooking zone is still hot.

The indicator disappears when the cooking zone has cooled down.

6.8 Keep Warm mode

This function keeps food warm with the low temperature setting.

Keep Warm mode is available only when the cooking zone is still warm after the finished cooking process (with a visible residual heat icon) and the cookware remains on the zone. The function does not work with a cold cooking zone.

1. Touch  to activate the Keep Warm mode.

The Keep Warm mode operates until turned off.

2. To stop the function touch  in the upper left corner of the display.

You can set a timer, if needed. Refer to "Timer options".

6.9 Timer options

ECO Timer

Use this function to specify how long a cooking zone should operate during a single cooking session.

To save energy, the heater of the cooking zone deactivates before the ECO Timer sounds. The difference in the operation time depends on the heat setting level and the length of the cooking operation.

You can use this function when the cooking zone is activated. You can set the function for each cooking zone separately.

1. Set the heat setting for the appropriate cooking zone first and then set the function.
2. Touch the zone symbol.
3. Touch .

The timer menu window appears on the display.

4. Tick the Stop zone box to activate the function.
5. Set the time.
6. Touch OK to confirm.

You can also choose **X** to cancel your selection.

You can change the ECO Timer settings during cooking: touch  with the timer value, then touch EDIT.

When the timer runs out, a signal sounds and a pop-up window appears. Touch OK to stop the signal.

To deactivate the function, set the heat setting to 0. Alternatively, touch  with the timer value, touch **X** and confirm your choice when a pop-up window appears.

Timer

You can use this function when the cooking zone is activated.

The function has no effect on any other function operating concurrently.

1. Select any cooking zone.
The relevant slider appears on the display.
2. Touch .

The timer menu window appears on the display.

3. Untick the Stop zone box to activate the function.
4. Set the time.
5. Touch OK to confirm.

You can also choose **X** to cancel your selection.

You can change the Timer settings during cooking: touch  with the timer value, then touch EDIT.

When the timer runs out, a signal sounds and a pop-up window appears. Touch OK to stop the signal.

To deactivate the function touch  with the timer value, touch **X** and confirm your choice when a pop-up window appears.

6.10 || Pause

This function sets all cooking zones that operate to the lowest heat setting.

You cannot activate the function if any automatic program (Dishes or FUNCTIONS) is running.

When the function operates only ① and RESUME can be used. All other symbols on the control panel are locked.

The function does not stop the timer functions. When the timer function ends, tap anywhere on the screen to stop the acoustic signal.

1. Touch  to open the Menu.
2. Touch  to activate the function.

The heat setting is lowered to  (Keep Warm mode) and the fan speed level in Manual mode is lowered to 1.

To deactivate the function touch RESUME.

The previous heat settings will be restored.

6.11 Lock

You can lock the control panel while the hob operates. It prevents an accidental change of the heat setting / fan speed setting.

1. Set the heat setting.
2. Touch  to open the Menu.
3. Touch  to activate the function.
To deactivate the function, press and hold UNLOCK for 4 seconds.



When you deactivate the hob, you also deactivate this function.

6.12 Child lock

This function prevents an accidental operation of the hob and the hood.

1. Touch  to open the Menu.
2. Select Settings > Options > Child lock.
3. Turn the switch on and touch the letters E-U-O in the alphabetical order to activate the function.

To deactivate the function turn the switch off.

It may take some time for the function to work after activation.

6.13 Food sensor general info

The Food sensor is a wireless temperature probe. You can use it to adjust cooking parameters to different types of food and maintain them throughout the cooking process. The Food sensor works also as a thermometer, which helps you monitor the temperature of the food or liquid while cooking. You can activate Food sensor for Dishes and FUNCTIONS, as well as manual cooking.

The Food sensor connects to the hob via Bluetooth and is rechargeable. According to the norm: EN 60335 the Food sensor should be charged using only the charging station and power adapter included in the package. One minute of charging provides up to 8 hours of operation.

The colour of the light indicates the Food sensor behaviour:

- Red - charging
- Red blinking - alarm / low battery
- Green - fully charged
- Blue - connecting

The measurement point is located halfway between the tip and the minimum level mark. Insert the Food sensor in the food at least up to the minimum level mark. Place the Food sensor on the rim of the pot or pan by the hook. Only the metal part of the food sensor can contact food and liquid. If it falls into a liquid, carefully remove it using a suitable tool.

Tips for liquids

- Immerse the Food sensor in the liquid 2-5 cm above the minimum level mark to get the best cooking results.
- Use a lid to save time and energy. Tick the Use lid box.

Tips for solid foods

- Follow the instructions on the display to correctly place the Food sensor in the food for the best cooking results.
- Insert the Food sensor in the thickest part of the food.
- Make sure the Food sensor is firmly inserted in the food.

- For meat / fish with a thickness of 2 - 3 cm, the tip of the Food sensor should reach the bottom of the pan.
- Remove the Food sensor before turning the piece of food over, if necessary, then put it back in.
- When using a plancha, make sure the handle of the Food sensor stays outside of its surface.

6.14 Cooking with Food sensor

Make sure the Food sensor is connected, calibrated, and charged before you start cooking. Refer to "Before first use".

When using automatic programs such as "FUNCTIONS" or "Dishes", use the Food sensor as an additional aid to measure, set, and adjust the target temperature of the cooking zone specified for each dish or cooking method. Refer to "FUNCTIONS" and "Dishes".

1. Choose the function or type of food from the Menu.
2. Touch  in the top right corner of the display to set or adjust the target temperature.
 - You can touch OK on top of the pop-up window to use the default settings. To deactivate the pop-up window permanently, check ☐ before you activate the function.
 - For some functions there are sustainable tips available on the display.
 - For Pan-frying, you can change the default heat level. For some dishes you can check the core temperature of the food if you use the Food sensor.
 - Some of the options start with preheating. You can trace the progress on the control bar.
 - For most of the options, e.g. SousVide and Poach, you can change the default temperature.
 - You can change the default cooking time or set your own. Only for SousVide the minimum cooking time is pre-defined.
3. Follow the instructions in the pop-up windows.

4. Once the set time is up and / or the target temperature has been reached, an acoustic signal sounds and a notification appears. To close the window, touch OK.

Thermometer

When cooking manually, you can use the Food sensor as a thermometer to measure the temperature of the dish and to notify you when the target temperature has been reached.

1. Open the slider for the cooking zone and set the heat setting.
2. Touch  in the top right corner of the display.

Follow the instructions on the display.

3. Set the target temperature of the dish. The current temperature as measured by Food sensor is now visible in the right corner of the display. Tap again to adjust the target temperature, if needed.
4. Once the cooking zone reaches the target temperature, an acoustic signal sounds and a notification appears.

6.15 FUNCTIONS: Pan-frying

This function lets you set an appropriate heat setting level to fry your food. The hob adjusts the temperature to different types of food and maintains it throughout cooking. Once the heat setting level is set, no manual temperature adjustment is necessary.

CAUTION!

Use only cold cookware.
Do not leave the hob unattended while the function is operating.

1. Place a pan without oil / fat on one of the cooking zones on the left side. You can combine the four sections into two cooking zones with different sizes, or into one large cooking area using Flex Bridge.
 2. Select FUNCTIONS > Pan-frying.
 3. Connect the Food sensor, if needed.
- Touch  to adjust the temperature.
4. Choose a frying level. Preheating starts.
 5. Set a timer function, if needed. The timer starts immediately.

Once the pan reaches the intended temperature an acoustic signal sounds and a pop-up window appears. You can put oil and food inside the pan now. To close the window and start frying touch OK. To stop the function manually touch 0 on the control bar.


Hints and tips:

- Follow the instructions on the display for when to flip the food over or to adjust the heat level.
- You can change the default heat level, if needed.
- For thick pieces of food or raw potatoes use a lid during the first 10 min of frying.
- Heavy pans may take longer to heat-up.
- Use laminated pans with low heat level to prevent overheating and damage of the cookware.
- Do not use thin enamelled cookware. It can be overheated and damaged.


Correct pans for Pan-frying function

Use only pans with flat bottoms. To check if the pan is correct:


1. Put your pan upside down.
2. Put a ruler on the bottom of the pan.
3. Try to put a coin of 1, 2, or 5 Euro Cent (or any coin with similar thickness, approx. 1.7 mm) between the ruler and the bottom of the pan.

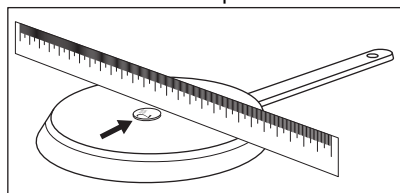

- a. The pan is incorrect if you can put the coin between the ruler and the pan.

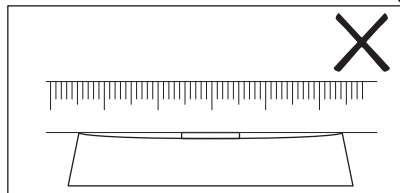

- b. The pan is correct if you cannot put the coin between the ruler and the pan.

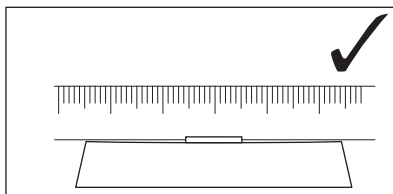

6.16 FUNCTIONS: Boiling

This function adjusts the heat setting level automatically so that water does not boil over once it reaches the boiling point.

Boiling function requires the Food sensor to work.

CAUTION!

Do not use the function with empty cookware. Do not leave the hob unattended while the function is operating.


1. Place a pot filled with water on the cooking zone. The liquid has to fully cover the minimum level mark on the Food sensor.
2. Select FUNCTIONS > Boiling.
3. Connect the Food sensor.
4. Set a timer function, if needed. The timer starts immediately.
5. To stop the function manually touch  in the upper left corner of the display.

Once the boiling point has been reached, the hob automatically reduces the heat setting level.

Hints and tips:

- The function is best suited for boiling water and cooking potatoes.
- Charge the Food sensor before cooking.
- Calibrate the Food sensor before use to determine the exact boiling point.
- Fill the pot with cold or room-temperature water. The minimum liquid level must fully cover the minimum level mark on the Food sensor. The maximum liquid level leaves at

least 4 cm of space below the pot rim.

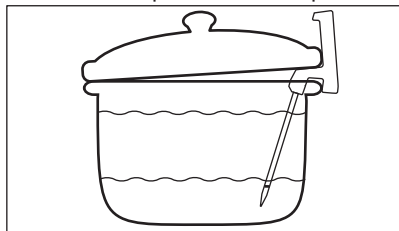

- Add salt once the boiling point has been reached if needed.
- Use a lid to save energy. Be careful when you remove it.

6.17 FUNCTIONS: Melting

You can use this function to melt products, e.g. chocolate or butter.

CAUTION!

Do not leave the hob unattended while the function is operating.

1. Place cookware on the cooking zone.
2. Select FUNCTIONS > Melting.
3. Set a timer function, if needed.
4. Touch OK.

To stop the function manually touch  in the upper left corner of the display.

6.18 Dishes

This function helps you prepare different foods using preset programs dedicated to specific food categories. The availability of programs depends on the cooking zone.

CAUTION!

Do not leave the hob unattended while the function is operating.

1. Place cookware on the cooking zone.
You can combine the four sections into two cooking zones with different sizes, or into one large cooking area using Flex Bridge.
2. Select Dishes.
3. Select the food type.
4. Connect the Food sensor, if needed.

Touch  to adjust the temperature.

5. Set a timer function, if needed.
6. Follow the instructions on the display.

Depending on the food type and the selected program you can set and modify details, e.g. level of doneness, level of heat for frying, etc.

Hints and tips:

- The most often cooked dishes are automatically added to the list of Most cooked.
- You can manually add programs to the list of Favourites .
- You can hide certain programs by touching . To restore the programs, go to Settings > Setup > Dishes.

6.19 Language

1. Touch  to open the Menu.
2. Select Settings > Setup > Language.
3. Choose the language from the list.

To save the selection touch  or . Then choose YES in the pop-up window.

If you chose the wrong language, touch  >

. A list appears. Select the first option from the top on the left, then the first option from the top on the right (alternatively, the second option from the top on the right, depending on the software version). Scroll down to choose the correct language from the list. When the pop-up window appears, choose the option on the right.

6.20 Key tones / Volume

You can choose the type of sound your hob emits or turn the sounds off entirely. You can choose between the click (default) or beep.

You can also choose the volume level.

1. Touch  on the display to open the Menu.
2. Select Settings > Setup > Key tones / Volume.
3. Choose the appropriate option.
The setting is saved automatically.

6.21 Brightness

You can change the brightness of the display.

There are 5 brightness levels, 1 is the lowest and 5 is the highest.

1. Touch  to open the Menu.


2. Select Settings > Setup > Brightness.
 3. Choose the appropriate level.
- The setting is saved automatically.

6.22 Power management

If multiple zones are active and the consumed power exceeds the limitation of the power supply, this function divides the available power between all cooking zones (connected to the same phase). The hob controls heat settings to protect the fuses of the house installation.

- If the hob reaches the limit of maximum available power (refer to the rating plate), the power of the cooking zones will be automatically reduced.
- The heat setting of the cooking zone selected first (or a cooking zone using FUNCTIONS or Dishes) is always prioritised. The remaining power will be divided between the other cooking zones according to the order of selection.
- The colour of the control bar shows the available heat setting options:
 - red - the current heat setting,
 - white - the maximum available heat setting,
 - light grey - the unavailable heat setting (Power management operates).
- If a higher heat setting is not available reduce it for the other cooking zones first.

If total power of the hob is limited (1500 W - 6000 W) the function distributes the available power between all cooking zones. Refer to chapter "Before first use" > "FlexPower".

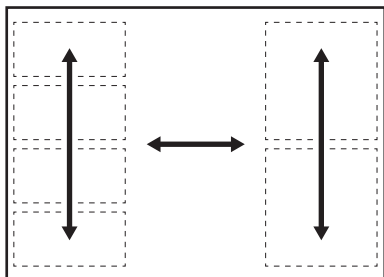

6.23 Hood functions



WARNING!

Refer to Safety chapters.

Manual mode

The hood can operate alongside the hob during the cooking session, as well as while the hob is switched off.

1. Touch  to open the hood options.
2. Touch or slide your finger to set the fan speed level.
3. To deactivate the hood, touch 0.

Auto

The function automatically adjusts the fan speed level based on the temperature of the cooking zone. The function is usually activated by default.

Auto mode has several fan modes available.

To change the setup select  >  > Auto fan.

You can activate the function while the hob is on and none of the cooking zones are active, or at any point during the cooking session.



If you activate the function while the hob is off, none of the cooking zones operate and there is no residual heat visible on the control panel, the function will switch off by itself after a few seconds.

1. Press and hold  to activate the hob.
2. Touch .
3. If the function is not on by default, press Auto to activate it.
4. Place cookware on the hob and select a heat setting level. Increase or decrease the heat setting level as needed.

The hood will react to the temperature of the cooking zone, increasing or decreasing the fan speed level accordingly. The fan icon with the number corresponding to the fan speed appear.

5. Touch  on an activated cooking zone to deactivate the cooking zone or  to deactivate the hob.

Auto will run for some time depending on the set mode. If the remaining heat is low, Breeze might start operating as well. The hood fan will continue operating for as long as the residual heat indicator is visible.



The fan speed can be adjusted manually during cooking by touching > Manual.

To deactivate the function, touch > .

If you deactivate the hob while Auto is running, the function will be remembered for the next cooking session.

Hood timer

Use the function to specify how long the hood should operate.

It is not possible to set the hood timer while the hood is deactivated.

1. Touch > .

2. Set the time.

3. Touch OK to start the timer.

The timer begins to count down.

- Once the timer finishes counting down, the hood stops operating.
- It is possible to set the hood timer while Auto is on. If Auto deactivates the hood before the set time runs out, the timer will be reset.
- If the timer deactivates the hood before Auto, the function will be switched off.
- In both cases Auto will be activated next time you switch on the hob.

Boost

This function activates the hood fan at its maximum speed.

1. Touch to open the hood options.
2. Touch or slide your finger to Boost to activate the function.

A signal sounds.

3. Touch to open the hood options, if needed.

Touch or slide your finger to the 0 position to deactivate the function, if needed.

The function can operate for up to 8 minutes. After that, the fan speed changes to 3 automatically. You can activate the function again if needed.

Breeze

The function sets the hood fan to an extra low speed. The fan runs at a minimum noise level immediately after activation. Use this function after cooking to remove lingering smells.

To activate the function when the hob is off and residual heat / / is visible:

1. Touch > Breeze.

2. Touch OK to start the function.

A signal sounds. appears on the display.

3. To set the timer, if needed, touch then .

4. Set the time.

Default time is set for 60 minutes.

When the timer finishes, the hood turns off automatically.

Self-dry

The function automatically sets the hood fan to continue running after you finish cooking and switch off the hob. The fan runs at a minimum speed level for 20 minutes. The function removes any lingering smells after cooking.

When you use the hob for the first time, the function is activated by default.

When the function operates, the symbol appears on the zone overview screen. The remaining runtime is visible on the hood timer display. It is not possible to adjust the set time. Once the cycle is over, the fan switches off automatically.

To stop the function while it is running:

1. Touch .

2. Touch .

The hood fan deactivates.

To disable the function completely:

1. Touch > > Self-dry.

2. Touch the slider to deactivate the function.



It is recommended not to disable the function and to let it run uninterrupted for the full cycle.

7. FLEXIBLE INDUCTION COOKING AREA

WARNING!

Refer to Safety chapters.

7.1 / ...Flex Bridge

The flexible induction cooking area consists of four sections. The sections can be combined into two cooking zones with different sizes, or into one large cooking area. You can choose the combination of the sections by selecting the mode applicable to the size of the cookware you want to use. There are three modes available: Standard, Big Bridge, and Max Bridge.

1. Place the cookware on the cooking zones.
2. Touch  > Flex Bridge. You can also use the shortcut ... visible in the zone overview.
3. Select the mode that best fits the size of your cookware.
4. Set a heat setting.




You can set different heat settings for each separate area created by a given mode.


7.2 Flex Bridge standard mode

This mode combines the sections into two cooking areas of the same size. The two areas operate like independent cooking zones.

Correct cookware position:

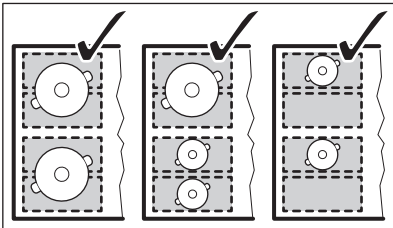


Incorrect cookware position:

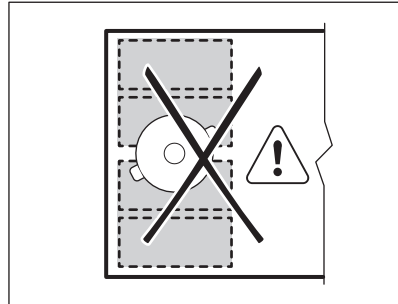


7.3 Flex Bridge Big Bridge mode

This mode combines the three rear sections into one cooking area. The single front section operates like an independent cooking zone.

Correct cookware position:

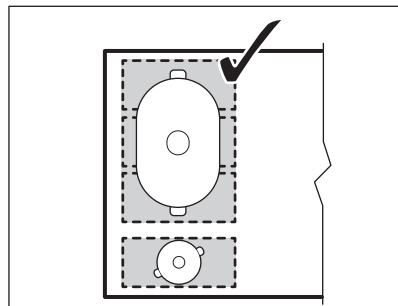


Incorrect cookware position:

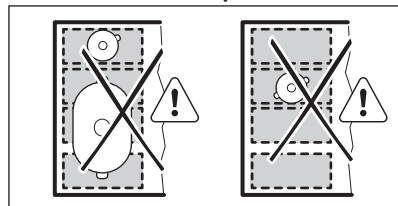


7.4 Flex Bridge Max Bridge mode

This mode combines all sections to form one large cooking area. You can use it to cook with a large pan or a plancha.

Correct cookware position:

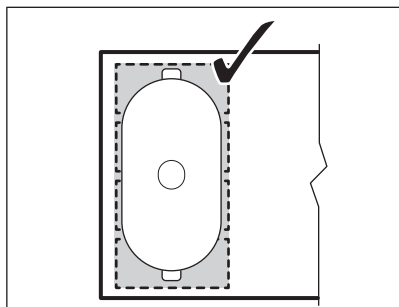

Incorrect cookware position:

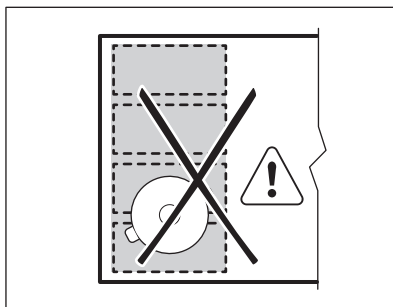

8. HINTS AND TIPS

WARNING!

Refer to Safety chapters.

8.1 Cookware



For induction cooking zones a strong electro-magnetic field creates the heat in the cookware very quickly.

Use the induction cooking zones with suitable cookware.

- To prevent overheating and improve the performance of the zones, the cookware must be as thick and flat as possible.
- For Pan-frying function only use pans with flat bottom.
- Ensure cookware bases are clean and dry before placing on the hob surface.
- Always be careful not to slide or rub the cookware on the edges and corners of the glass as it may chip or damage the glass surface.

Cookware material

- **correct:** cast iron, steel, enamelled steel, stainless steel, multi-layer bottom (with a correct marking from a manufacturer).
- **not correct:** aluminium, copper, brass, glass, ceramic, porcelain.

Cookware is suitable for an induction hob if:

- water boils very quickly on a zone set to the highest heat setting.

- a magnet pulls on to the bottom of the cookware.

Cookware dimensions


- Induction cooking zones adapt to the dimension of the bottom of the cookware automatically. Refer to "Technical data" > "Cooking zones specification" for correct cookware dimensions. Place the cookware in the centre of the selected cooking zone.
- The efficiency of a cooking zone is related to the diameter of the cookware. For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").
 - Cookware with a diameter smaller than the size of a given cooking zone receives only part of the power generated by the cooking zone which results in slower heating.
 - For both safety reasons and optimal cooking results, do not use cookware larger than indicated in "Cooking zones specification". Avoid keeping cookware close to the control panel during the cooking session. This might impact the functioning of the control panel or accidentally activate hob functions.



Refer to "Technical data".

Steam Vented Lids

To further optimize the cooking sessions alongside the hood you can use the special Steam Vented Lids with your cookware. The lids are designed to direct the steam produced inside the pot towards the hood, minimizing unwanted cooking smells and excessive humidity in the kitchen. The lids are available to buy separately in several sizes to fit most common cookware types. For more information visit our website.

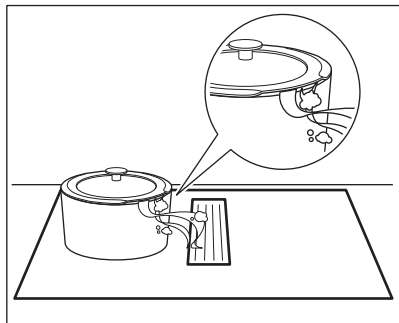

8.2 Noises during operation



The noises are normal and do not indicate any malfunction. Cookware noises may vary depending on the cookware material and the power level.

Cookware-related noises:

- cracking noise: cookware is made of different materials (a sandwich construction).
- whistling sound: you use a cooking zone with a high power level and the cookware is made of different materials (a sandwich construction).
- humming: you use a high power level.

Hob-related noises:

- clicking: electric switching occurs, cookware is detected after you place it on the hob.
- hissing, buzzing: the fan operates.
- rhythmic sound: cookware is detected.

8.3 Hints and Tips for the hood

- You can put pots on the grid while the hood is not operating. It will not cause any damage.
- When Auto mode operates, the fan starts at a low speed at the beginning of each cooking session. The speed increases gradually. You can also adjust the speed manually, if needed.

9. CARE AND CLEANING



WARNING!

Refer to Safety chapters.

9.1 General information

- Clean the hob after each use.
- Always use cookware with a clean base.
- Scratches or dark stains on the surface have no effect on how the hob operates.
- Use a special cleaning agent suitable for the surface of the hob.
- Always use a scraper recommended for hobs with a glass surface. Use the scraper only as an additional tool for cleaning the glass after the standard cleaning procedure.



WARNING!

Do not use knives or any other sharp, metal tools to clean the glass surface.



The printing on the flexible induction cooking area may become dirty or change its colour as an effect of moving the cookware. You can clean the area in the described way.

9.2 Cleaning the hob

- **Remove immediately:** melted plastic, plastic foil, salt, sugar and food with sugar, otherwise, the dirt can cause damage to

the hob. Take care to avoid burns. Use a special hob scraper on the glass surface at an acute angle and move the blade on the surface.

- **Remove when the hob is sufficiently cool:** limescale rings, water rings, fat stains, shiny metallic discoloration. Clean the hob with a moist cloth and a non-abrasive detergent. After cleaning, wipe the hob dry with a soft cloth.
- **Remove shiny metallic discoloration:** use a solution of water with vinegar and clean the glass surface with a cloth.

9.3 Cleaning the hood

Grid


The grid guides the air into the hood. Additionally, it protects the hood system and prevents foreign objects from falling inside by accident. The grid is made of . You can wash the grid manually or in a dishwasher. Wipe the grid with a soft cloth.

Drip tray


There is a drip tray located under the hood. It collects the condensation created during each cooking process. At any time water might be dripping from the hood system into the drip tray. Remember to empty the tray regularly. The drip tray is visible from above once you remove the grid and the filter housing along with the filters.

Before you access the drip tray, make sure to protect the contents of the drawer or cabinet under the hob from accidental spillage.

1. To access the drip tray, first unlock the center latch located at the back. Slide the latch in the opposite direction. Take hold of the drip tray with both hands and slide it carefully to the right.

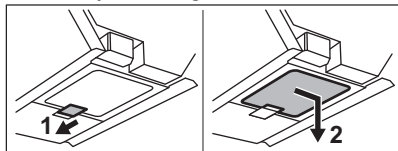

2. Move the drip tray vertically downwards. Be careful not to spill the water.

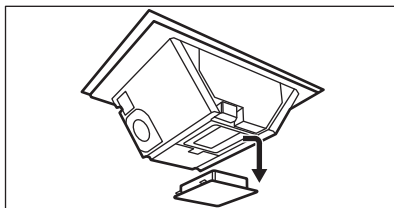

3. Dispose of the water and rinse the drip tray out. You can wash the tray manually (using warm water, soap, and a soft cloth / sponge) or in a dishwasher (standard cycle).

WARNING!

Make sure no liquid gets inside the hood.

If water or other liquids spill inside the hood system:


1. Switch off the hood.
2. Lift the grid and clean the hood area carefully with warm water, a moist cloth or sponge and a mild cleaning agent.
3. Wipe away the excess liquid gathered on the bottom of the hood cavity using a sponge or a dry cloth.
4. Clean the filter, if needed (refer to "Cleaning the hood filter").
5. Empty the drip tray, if needed.
6. Switch on the hood, set the fan speed level to 2 or higher and let it run for some time to get rid of the remaining moisture.

9.4 Cleaning and regenerating the hood filters

The filtering unit consists of the following elements: grease filters combined with the grease filter housing **A** and the removable long life carbon filters **B**.



The appliance must be used at all times with all the filters included in the scope of delivery.

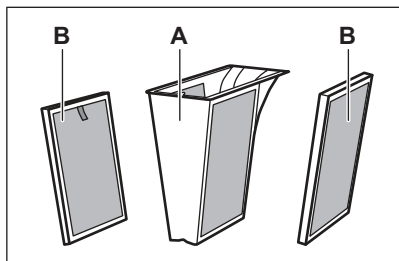

The grease filters **A** collect grease, oil, and food remains and prevent them from getting into the hood system. The long life carbon filters **B**, containing active carbon foam, neutralise smoke and cooking smells.

Clean the filters regularly and regenerate them periodically:

- Clean the grease filters **A** as soon as the built-up grease is visible. The cleaning frequency depends on the amount of fat and oil used in cooking. It is recommended to clean the filters once a month, or more frequently, if needed.
- Clean the long life carbon filters **B** only when the built-up grease is visible.
- Regenerate the long life carbon filters **B** only when the notification is on. The notification appears in the main view of the display in the form of a yellow dot indicator. The maximum number of regeneration cycles is 7. After that time, the filters need to be replaced with new ones.
- Additionally, the hob has a built-in counter with a notification that reminds you about cleaning the grease filters and regenerating the long life carbon filters. The counter for the notification starts automatically when you turn on the hood for the first time. After 140 hours of use a pop-up window and the dot next to the hood symbol appears to signal that it is time to clean the grease filters **A** and regenerate the long life carbon filters **B**. The dot appears only when the fan is off and remains visible until you reset the notification or replace the filter.


WARNING!

Oversaturated filters can pose a risk of fire.


Disassembling / reassembling the filters

The filters and the grease filter housing are located right under the grid in the centre of the hob. Remove them carefully as they might be slippery due to accumulated grease.


1. Remove the grid.

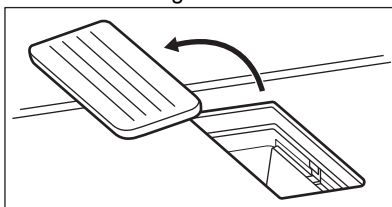

2. Take out the grease filter housing by grabbing the protruding handle.

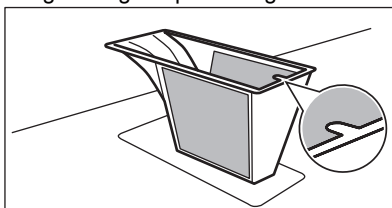

3. Take out the long life carbon filters by grabbing the handle.

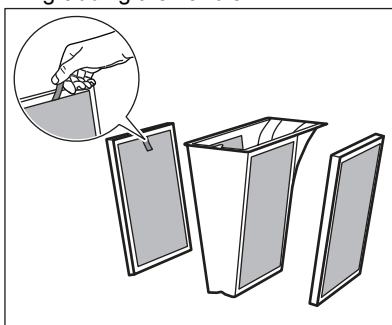

4. Reassemble the filtering unit after cleaning:

- Slide the long life carbon filters into the hood system along the built-in runners.

- b. Place the grease filter housing back inside.
- c. Place the grid back on.

Cleaning the grease filters and the grease filter housing

1. Wash the grease filter housing with the grease filters carefully in warm water using a mild cleaning agent, then rinse it with warm water. You can use a soft sponge, a soft cloth, or a non-abrasive cleaning brush to remove food remains, if necessary.
You can wash the grease filters and the grease filter housing in the dishwasher on a standard cycle with other dishes in the same load.



Depending on the detergent type and the number of dishwasher cycles, some mild discolouration on the mesh may naturally occur. This does not affect the performance of the grease filter.

It is not recommended to use paper towels while cleaning / drying the filtering components.

2. Leave it for some time to dry at room temperature.
3. Put the grease filter housing with the grease filters back inside.
4. Select > > Filters. Choose the filter and touch RESET.

The counter restarts.

Cleaning the long life carbon filters

1. Wash the filters carefully in warm water without any cleaning agents. Detergents

can damage the carbon filtration. You can use a soft sponge, a soft cloth, or a non-abrasive cleaning brush to remove food remains, if necessary. Alternatively, after removing heavier dirt from the filters, you can also wash the filters in a dishwasher at 65-70 °C (using a program longer than 90 min), without detergents and without dishes in the same load.

2. Leave the filters to dry for at least 24h at room temperature. The filters need to be fully dried before reassembly.
3. Reassemble the filtering unit and put it back inside.

Regenerating the long life carbon filters

1. Clean the filters first, as described above.
2. Put the filters in the oven set to 100 °C for 120 min. Place the filters on the middle wire shelf. Use a non-fan oven function.
3. Reassemble the filtering unit and put it back inside.
4. Select > > Filters. Choose the filter and touch RESET.

The counter restarts.

9.5 Cleaning the Food sensor

- Clean the Food sensor before first use.
- Use only neutral detergents.
- Do not use any abrasive products, abrasive cleaning pads, solvents or metal objects.
- Do not wash the Food sensor in the dishwasher.
- The plastic handle may discolour, which has no effect on how the Food sensor operates.

10. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

10.1 What to do if...

Problem	Possible cause	Remedy
You cannot activate or operate the hob.	The hob is not connected to an electrical supply or it is connected incorrectly.	Check if the hob is correctly connected to the electrical supply. Refer to the connection diagram.
	The fuse is blown.	Make sure that the fuse is the cause of the malfunction. If the fuse is blown again and again, contact a qualified electrician.
	You did not set the heat setting for 60 seconds.	Activate the hob again and set the heat setting in less than 60 seconds.
	You touched 2 or more sensor fields at the same time.	Touch only one sensor field.
	Pause operates.	Refer to "Daily use".
The display does not react to the touch.	Part of the display is covered or the pots are placed too near to the display. There is some liquid or an object on the display.	Remove the objects. Move the pots away from the display. Clean the display, wait until the appliance is cold. Disconnect the hob from the electrical supply. After 1 min, connect the hob again.
An acoustic signal sounds and the hob deactivates. An acoustic signal sounds when the hob is deactivated.	You put something on one or more sensor fields.	Remove the object from the sensor fields.
The hob deactivates.	You put something on the sensor field ①.	Remove the object from the sensor field.
Residual heat indicator does not come on.	The zone is not hot because it operated only for a short time or the sensor under the hob surface is damaged.	If the zone operated sufficiently long to be hot, speak to an Authorised Service Centre.
After you activate automatic programs (Dishes or FUNCTIONS), the hob starts heating up, stops, and then starts again.	This is a safety check to ensure that the Food sensor is in a pot for which automatic programs (Dishes or FUNCTIONS) was activated.	It is a normal procedure, it does not indicate any malfunction.
You cannot activate the highest heat setting.	Another zone is already set to the highest heat setting.	First reduce the power of the other zone.
	The FlexPower level is too low.	Change the maximum power in the Menu. Refer to "Before first use".
The sensor fields become hot.	The cookware is too large or you put it too near to the controls.	Put large cookware on the rear zones, if possible.
The Food sensor is no responding or the display shows that the Food sensor is not found.	The Food sensor is discharged or the Bluetooth is not set.	Charge the Food sensor. Connect the Food sensor with the hob via the Bluetooth. Refer to "Food sensor pairing and calibrating".
The display shows the temperature of water is higher than 100°C.	You did not calibrate the Food sensor or you did it incorrectly.	Calibrate the Food sensor again. Refer to "Food sensor pairing and calibrating".

Problem	Possible cause	Remedy
	You put too much salt in the water.	Do not salt boiling water.
	Other appliances work at the same frequency and disturb the connection.	Remove any appliances that may disturb the connection. Refer to "Technical Data".
Temperature of the food is different than expected.	The Food sensor is inserted incorrectly.	Make sure the measurement point is situated in the thickest part of the food. Refer to "Daily use".
The red light on the Food sensor blinking.	The Food sensor is discharged or damaged.	Charge the Food sensor. If the problem persists, contact the Authorised Service Centre.
The hob detects significant temperature jumps.	You added some water or changed the pot while cooking.	Avoid adding water or changing the pot after a function starts.
	The heat in the pot did not spread evenly, especially for thick liquids.	Stir the food frequently.
The pot gets too hot or the food is overdone too quickly.	You used a pot which is too small.	Use pots whose sizes are appropriate for a given cooking zone. Refer to "Technical data".
You cannot activate a function.	Another function is running on the same cooking zone, which prevents the activation.	Stop the function before you activate another.
Automatic programs (Dishes or FUNCTIONS) or SousVide stops.	At the beginning of a cooking session the temperature of the liquid inside the pot is higher than 40 °C. The cookware in use is hot.	Use only cold liquids. Do not preheat the cookware.
There is no sound when you touch the panel sensor fields.	The sounds are deactivated.	Activate the sounds. Refer to "Daily use".
Wrong language was set.	You changed the language by mistake.	Follow the instruction in "Daily use", "Language" to change the wrong language.
The flexible induction cooking area does not heat up the cookware.	The cookware is in a wrong position on the flexible induction cooking area.	Place the cookware in the correct position on the flexible induction cooking area. The position of the cookware depends on the activated function or function mode. Refer to "Flexible induction cooking area".
	The diameter of the bottom of the cookware is incorrect for the activated function or function mode.	Use cookware with a diameter applicable to the activated function or function mode. Use cookware with a diameter smaller than 160 mm on a single section of the flexible induction cooking area. Refer to "Flexible induction cooking area".
A cooking zone deactivates.	Automatic Switch Off deactivates the cooking zone.	Deactivate the hob and activate it again. Refer to "Daily use".
 and a message come on.	Lock operates.	Refer to "Daily use".

Problem	Possible cause	Remedy
E - U - O appears.	Child lock operates.	Refer to "Daily use".
The power level bar blinks.	There is no cookware on the zone.	Put cookware on the zone.
	The cookware is unsuitable.	Use suitable cookware. Refer to "Hints and tips".
	The diameter of the bottom of the cookware is too small for the zone.	Use cookware with correct dimensions. Refer to "Technical data".
	Flex Bridge operates. One or more sections of the function mode which operates are not covered by the cookware.	Place the cookware on the correct number of sections of the function mode which operates or change the function mode. Refer to "Flexible induction cooking area".
E3 comes on.	The electrical connection is faulty.	Disconnect the hob from the mains and check the connection. Refer to "Installation".
E4 comes on.	The zone temperature sensor detects a too high or too low temperature.	Let the cooking zone cool down or raise the ambient temperature above 15°C. If the problem persists, contact the Authorised Service Centre.
E7 comes on.	The cooling fan is blocked.	Make sure that nothing is blocking the fan. If the fan is not blocked by anything and the problem persists, contact the Authorised Service Centre.
You can hear a constant beep noise.	The electrical connection is incorrect.	Disconnect the hob from the electrical supply. Ask a qualified electrician to check the installation.
Cookware heats up longer than 5 min.	The bottom of the cookware is not induction compatible.	Use cookware with a suitable bottom (flat, magnetic). Refer to "Hints and tips".
Heating up takes a long time.	Cookware is too small and receives only a part of the power generated by the cooking zone.	For optimal heat transfer use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in "Technical data" > "Cooking zones specification").
Hob cannot connect to the wireless network.	The router blocks new WLAN participants.	Make sure that the router allows new participants. Restart the router, if needed.
	The wireless connection in the hob is not activated.	Activate the WiFi. Refer to "Before first use", Wireless / app connection.
	The frequency of the router is set to 5 GHz.	Change the settings of the router to 2,4 GHz or 2,4+5 GHz. If the router supports only 5 GHz frequency, the hob cannot be connected.
	The wireless network signal is weak.	Move the router closer to the hob. Use a WiFi repeater to boost the signal, if needed.

Problem	Possible cause	Remedy
You cannot find the hob in the WLAN network list in the app settings.	The hob is already linked to the network but might not be visible.	Disconnect the hob from the network. Refer to "Before first use", Wireless / app connection.
The control bar for hood blinks and the hood does not start or turns off.	The fan may turn off by itself in certain conditions, e.g. when the room is not properly ventilated.	Open the window. You may need to install the window switch. Refer to "Assembly". If the window switch is already present, make sure it was correctly installed. Refer to the installation booklet. Press any symbol. The hood operates again.
The hood fan does not work properly when the hood functions are activated.	The ambient temperature surrounding the hood is too high. There is insufficient air circulation inside and around the hood.	Deactivate the hob and unplug it from the main power supply. Wait at least 10 seconds, then plug it in again. Other suggestions: Try to cool down the temperature of the surrounding area. Take out the hood filter and remove the residual moisture from the inside of the hood. Refer to "Care and cleaning". Leave the hood system to dry for one day, then activate the hood again.
The steam produced during cooking is not sufficiently absorbed by the hood.	The lids on the cookware are not properly placed.	If your cookware does not have vented lids, make sure to tilt the lids so that the released steam is directed towards the hood. Refer to "Hints and Tips" for information on the special Steam Vented Lids recommended to be used with the integrated hood.
A yellow dot indicator appears in the main view of the display.	The hood filter is oversaturated.	Clean and regenerate the hood filter and reset the notification. Refer to "Care and cleaning".
A higher heat setting is not available.	Power management operates and reduces the maximum power.	Refer to "Daily use", Power management.
Boiling function does not start.	The laser mark on the Food sensor tip is not fully submerged in liquid. The water is too warm. The Food sensor is not charged.	Add more water to the pot. Use room-temperature water. Charge the Food sensor before starting the cooking process.
Boiling function operates incorrectly.	The temperature reading is inaccurate because the Food sensor is not calibrated.	Calibrate the Food sensor before the first cooking process.
Heating up with Pan-frying function takes a long time.	Cookware is too small, too heavy or the bottom is uneven.	Refer to "Hints and tips".

10.2 If you cannot find a solution...

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre. Give the data from the rating

plate. Make sure, you operated the hob correctly. If not the servicing by a service technician or dealer will not be free of charge, also during the warranty period. The information about guarantee period and

Authorised Service Centres are in the service book.

11. TECHNICAL DATA

11.1 Rating plate

Model NCU84F43AB
 Typ 67 D4A 05 FD
 Induction 7.35 kW
 Ser.Nr.
 AEG

PNC 949 598 232 00
 220 - 240 V / 400 V 2N, 50 Hz
 Made in: Germany
 7.35 kW



11.2 WiFi connection

WiFi frequency	2400 - 2483,5 MHz
----------------	-------------------

EIRP max	20 dBm / 100 mW
----------	-----------------

11.3 Cooking zones specification

Cooking zone	Nominal power (maximum heat setting) [W]	Boost [W]	Boost maximum duration [min]	Cookware diameter [mm]
Right front	1400	2500	4	125 - 145
Right rear	1800	2800	10	145 - 180
Flexible induction cooking area	2300	3200	10	minimum 105

The power of the cooking zones can be different in some small range from the data in the table. It changes with the material and dimensions of the cookware.

For optimal heat transfer and cooking results use cookware with bottom diameter similar to the size of the cooking zone (i.e. the maximum cookware diameter value in the table). Do not use cookware larger than the diameter of the cooking zone.

11.4 Food sensor technical specifications

Food sensor is approved for use in contact with food.

Working frequency	2400 - 2483,5 MHz
Maximum transmit power	7 dBm
Temperature range	0 - 200°C
Measurement cycle	2 sec

12. ENERGY EFFICIENCY

12.1 Product Information according to EU and UK Ecodesign Regulations for Hob

Model identification	NCU84F43AB	
Type of hob	Built-In Hob	
Number of cooking zones	2	
Number of cooking areas	1	
Heating technology	Induction	
Diameter of circular cooking zones (Ø)	Right front	14.5 cm
	Right rear	18.0 cm
Length (L) and width (W) of the cooking area	Left	L 45.8 cm W 21.4 cm
Energy consumption per cooking zone (EC electric cooking)	Right front	181.7 Wh/kg
	Right rear	174.5 Wh/kg
Energy consumption of the cooking area (EC electric cooking)	Left	191.1 Wh/kg
Energy consumption of the hob (EC electric hob)	185.9 Wh/kg	

IEC / EN 60350-2, BS EN 60350-2 - Household electric cooking appliances - Part 2: Hobs - Methods for measuring performance.

12.2 Hob - Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you heat up water, use only the amount you need.
- If it is possible, always put the lids on the cookware.
- Put the cookware directly in the centre of the cooking zone.
- Use the residual heat to keep the food warm or to melt it.

12.3 Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in off mode	0.5 W
Power consumption in network standby	2.0 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	2 min

For guidance on how to activate and deactivate the wireless network connection, refer to "Before first use" chapter.

12.4 Product Information Sheet and Product Information according to EU and UK Energy Labelling and Ecodesign Regulations for Hood

Product Information Sheet	
Supplier's name or trade mark	AEG

Model identifier	NCU84F43AB	
Annual Energy Consumption - AEChood	32.7	kWh/a
Energy Efficiency Class	A+	
Fluid Dynamic Efficiency - FDEhood	32.0	
Fluid Dynamic Efficiency class	A	
Lighting Efficiency - LEhood	-	lux/W
Lighting Efficiency Class	-	
Grease Filtering Efficiency - GFEhood	85.1	%
Grease Filtering Efficiency class	B	
Minimum Air Flow in normal use	270.0	m³/h
Maximum Air Flow in normal use	550.0	m³/h
Air Flow at intensive/boost setting	650.0	m³/h
A-weighted Sound Power Emissions at minimum speed	50	db(A) re 1 pW
A-weighted Sound Power Emissions at maximum speed	66	db(A) re 1 pW
A-weighted Sound Power Emissions at intensive or boost speed	69	db(A) re 1 pW
Measured power consumption off mode - Po	0.49	W
Measured power consumption in standby mode - Ps	-	W
Additional Information		
Time increase factor - f	0.8	
Energy Efficiency Index - EEIhood	42.6	
Measured air flow rate at best efficiency point - QBEP	286.7	m³/h
Measured air pressure at best efficiency point - PBEP	449	Pa
Maximum air flow - Qmax	650.0	m³/h
Measured electric power input at best efficiency point - WBEP	111.9	W
Nominal power of the lighting system - WL	-	W
Average illumination of the lighting system on the cooking surface - Emiddle	-	lux

Appliance tested according to: IEC / EN 61591, BS EN 61591, IEC / EN 60704-1, BS EN 60704-1, IEC / EN 60704-2-13, BS EN 60704-2-13, IEC / EN 50564, BS EN 50564.

12.5 Hood - Energy saving

You can save energy during everyday cooking if you follow the hints below.

- When you start cooking, set the hood fan at a low speed level. Once the cooking is finished, keep the hood running for a few minutes.

- Increase the fan speed only to get rid of large amounts of steam or smoke. It is recommended to use the Boost function only in extreme situations.
- Clean the hood filter regularly and replace it when necessary to maintain its efficiency.
- Use the maximum diameter of the ducting system to optimize efficiency and minimize noise.

13. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.





