

OK8NW00MB

EN User Manual | **Microwave combi-oven**



Welcome to AEG! Thank you for choosing our appliance.



Get usage advice, brochures, troubleshooting, service and repair information:
www.aeg.com/support

Subject to change without notice.

CONTENTS

1. SAFETY INFORMATION.....	2
2. SAFETY INSTRUCTIONS.....	5
3. INSTALLATION.....	7
4. PRODUCT DESCRIPTION.....	9
5. BEFORE FIRST USE.....	9
6. DAILY USE.....	10
7. ADDITIONAL FUNCTIONS.....	12
8. USING THE ACCESSORIES.....	12
9. HINTS AND TIPS.....	13
10. CARE AND CLEANING.....	15
11. TROUBLESHOOTING.....	16
12. TECHNICAL DATA.....	16
13. ENERGY EFFICIENCY.....	17
14. ENVIRONMENTAL CONCERNS.....	17

1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

1.1 Children and vulnerable people safety

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children of less than 8 years of age and persons with very extensive and complex disabilities shall be kept away from the appliance unless continuously supervised.

- Children should be supervised to ensure that they do not play with the appliance.
- Keep all packaging away from children and dispose of it appropriately.
- **WARNING:** The appliance and its accessible parts become hot during use. Keep children and pets away from the appliance when in use and when cooling down.
- If the appliance has a child safety device, it should be activated.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

1.2 General Safety

- This appliance is for cooking purposes only.
- This appliance is designed for single household domestic use in an indoor environment.
- This appliance may be used in offices, hotel guest rooms, bed & breakfast guest rooms, farm guest houses and other similar accommodation where such use does not exceed (average) domestic usage levels.
- Only a qualified person must install this appliance and replace the cable.
- Do not use the appliance before installing it in the built-in structure.
- Disconnect the appliance from the power supply before carrying out any maintenance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Authorised Service Centre or similarly qualified persons to avoid an electrical hazard.
- **WARNING:** Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.
- **WARNING:** The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements or the surface of the appliance cavity.
- Always use oven gloves to remove or insert accessories or ovenware.

- Do not activate the microwave function when the appliance is empty. Metal parts inside the cavity can create electric arcing.
- Metallic containers for food and beverages are not allowed during microwave cooking. This requirement is not applicable if the manufacturer specifies size and shape of metallic containers suitable for microwave cooking.
- **WARNING:** If the door or door seals are damaged, the appliance must not be operated until it has been repaired by a qualified person.
- **WARNING:** Only a qualified person can carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.
- **WARNING:** Do not heat liquids and other foods in sealed containers. They are liable to explode.
- Use only utensils that are suitable for use in microwave ovens.
- When heating food in plastic or paper containers, observe the appliance due to the possibility of ignition.
- The appliance is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
- Microwave heating of beverages can result in delayed eruptive boiling. Care must be taken when handling the container.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.
- Eggs in their shell and whole hard-boiled eggs should not be heated in the appliance since they may explode, even after microwave heating has ended.

- To remove the shelf supports first pull the front of the shelf support and then the rear end away from the side walls. Install the shelf supports in the opposite sequence.
- The appliance should be cleaned regularly and any food deposits removed.
- Do not use a steam cleaner to clean the appliance.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the glass door since they can scratch the surface, which may result in shattering of the glass.
- Failure to maintain the appliance in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

2. SAFETY INSTRUCTIONS

2.1 Installation



WARNING!

Only a qualified person must install this appliance.

- Remove all the packaging.
- Do not install or use a damaged appliance.
- Follow the installation instructions available on our website.
- Always take care when moving the appliance as it is heavy. Always use safety gloves and enclosed footwear.
- Do not pull the appliance by the handle.
- Install the appliance in a safe and suitable place that meets installation requirements.
- Keep the minimum distance from other appliances and units.
- Before mounting the appliance, check if the appliance door opens without restraint.
- The appliance is equipped with an electric cooling system. It must be operated with the electric power supply.

2.2 Electrical connection



WARNING!

Risk of fire and electric shock.

- All electrical connections should be made by a qualified electrician.
- The appliance must be earthed.
- Make sure that the parameters on the rating plate are compatible with the electrical ratings of the mains power supply.
- Always use a correctly installed shockproof socket.
- Do not use multi-plug adapters and extension cables.
- Make sure not to cause damage to the mains plug and to the mains cable. Should the mains cable need to be replaced, this must be carried out by our Authorised Service Centre.
- Do not let mains cables touch or come near the appliance door or the niche below the appliance, especially when it operates or the door is hot.
- The shock protection of live and insulated parts must be fastened in such a way that it cannot be removed without tools.
- Connect the mains plug to the mains socket only at the end of the installation. Make sure that there is access to the mains plug after the installation.
- If the mains socket is loose, do not connect the mains plug.
- Do not pull the mains cable to disconnect the appliance. Always pull the mains plug.

- Use only correct isolation devices: line protecting cut-outs, fuses (screw type fuses removed from the holder), earth leakage trips and contactors.
- The electrical installation must have an isolation device which lets you disconnect the appliance from the mains at all poles. The isolation device must have a contact opening width of minimum 3 mm.
- This appliance is supplied with a main plug and a main cable.

2.3 Use

WARNING!

Risk of injury, burns and electric shock or explosion.

- Do not change the specification of this appliance.
- Make sure that the ventilation openings are not blocked.
- Do not let the appliance stay unattended during operation.
- Deactivate the appliance after each use.
- Be careful when you open the appliance door while the appliance is in operation. Hot air can release.
- Do not operate the appliance with wet hands or when it has contact with water.
- Do not apply pressure on the open door.
- Do not use the appliance as a work surface or as a storage surface.
- Open the appliance door carefully. The use of ingredients with alcohol can cause a mixture of alcohol and air.
- Do not let sparks or open flames to come in contact with the appliance when you open the door.
- Do not put flammable products or items that are wet with flammable products in, near or on the appliance.
- Do not use microwave function to preheat the appliance.
- Users with a pacemaker or insulin pump must stay at least 10 cm away from the control panel.

WARNING!

Risk of damage to the appliance.

- To prevent damage or discolouration to the enamel:

- do not put aluminium foil directly on the bottom of cavity of the appliance.
- do not put water directly into the hot appliance.
- do not keep moist dishes and food in the appliance after you finish the cooking.
- be careful when you remove or install the accessories.
- Discoloration of the enamel or stainless steel has no effect on the performance of the appliance.
- Use a deep pan for moist cakes. Fruit juices cause stains that can be permanent.
- Use only accessories supplied with this appliance or recommended by the manufacturer.
- Always cook with the appliance door closed.
- If the appliance is installed behind a furniture panel (e.g. a door) make sure the door is never closed when the appliance operates. Heat and moisture can build up behind a closed furniture panel and cause subsequent damage to the appliance, the housing unit or the floor. Do not close the furniture panel until the appliance has cooled down completely after use.

2.4 Care and cleaning

WARNING!

Risk of injury, fire, or damage to the appliance.

- Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- Make sure the appliance is cold. There is the risk that the glass panels can break.
- Replace immediately the door glass panels when they are damaged. Contact the Authorised Service Centre.
- Make sure the cavity and the door are wiped dry after each use. Steam produced during the operation of the appliance condensates on cavity walls and can cause corrosion.
- Clean regularly the appliance to prevent the deterioration of the surface material.

- Fat and food remaining in the appliance can cause fire and electric arcing when the microwave function operates.
- Clean the appliance with a moist soft cloth. Use only neutral detergents. Do not use abrasive products, abrasive cleaning pads, solvents or metal objects.
- If you use an oven spray, follow the safety instructions on its packaging.

2.5 Internal lighting

WARNING!

Risk of electric shock.

- Concerning the lamp(s) inside this product and spare part lamps sold separately: These lamps are intended to withstand extreme physical conditions in household appliances, such as temperature, vibration, humidity, or are intended to signal information about the operational status of the appliance. They are not intended to be used in other applications and are not suitable for household room illumination.

- This product contains a light source of energy efficiency class G.
- Use only lamps with the same specifications.

2.6 Service

- To repair the appliance contact the Authorised Service Centre.
- Use original spare parts only.

2.7 Disposal

WARNING!

Risk of injury or suffocation.

- Contact your municipal authority for information on how to dispose of the appliance.
- Disconnect the appliance from the mains supply.
- Cut off the mains electrical cable close to the appliance and dispose of it.

3. INSTALLATION

WARNING!

Refer to Safety chapters.

3.1 General Information

CAUTION!

Do not connect the appliance to adapters or extension leads. This can cause overloading and risk of fire.

- The appliance is for built-in use only. It must be placed on a stable and flat surface.
- Put the appliance far away from steam, hot air and water splashes.



3.2 Electrical installation

This appliance is supplied with a main cable and main plug.


The cable has an earth wire with an earthing plug. The plug must be plugged into an outlet that is properly installed and earthed. In the event of an electrical short circuit, earthing reduces the risk of electric shock.

3.3 Installing the appliance

1. Check if the dimensions of the furniture meet the installation distances.

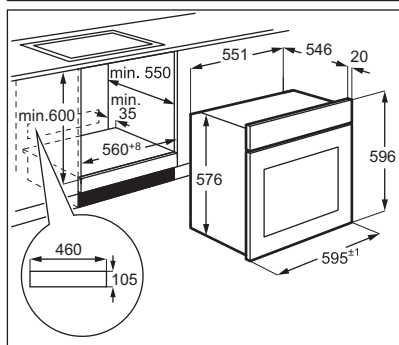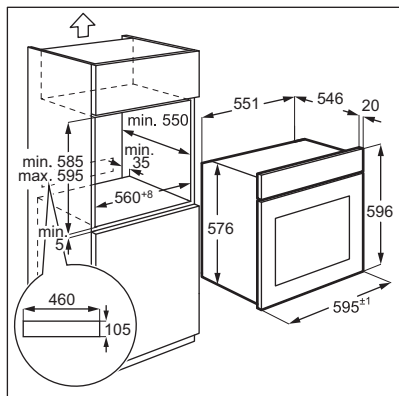


2. Instal the appliance and fix it to the cabinet with a screw.

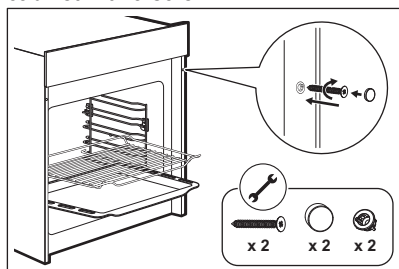

Do not over-tighten the screws. To avoid damage to the appliance use only a screwdriver.

3.4 Installing the shelf supports


1. Push the shelf supports into the rear catch.
2. Push the shelf supports towards the front catch on the cavity side wall.
3. Push the shelf supports down.

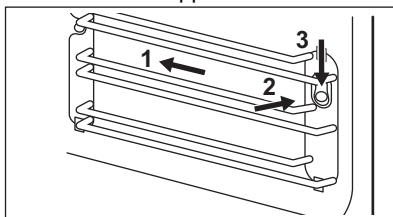

Be careful when you remove or install the shelf supports. Do not remove the white blocking elements. In case they fall down, put them back.

4. PRODUCT DESCRIPTION

4.1 General overview

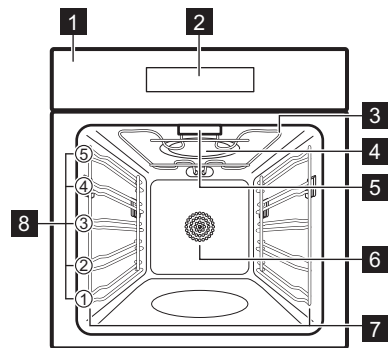

- 1 Control panel
- 2 Display
- 3 Heating element
- 4 Microwave generator
- 5 Lamp
- 6 Fan
- 7 Shelf support, removable
- 8 Shelf positions



This Product fulfils the requirements of the European standard EN55011. In conformity to this standard, this product is classified as group 2 class B equipment. Group 2 means that the equipment intentionally generates radio-frequency energy in the form of electromagnetic radiation for the heat treatment of food. Class B equipment means that the equipment is suitable to be used in domestic establishments.

4.2 Control panel

Control panel overview

	To return to the standby mode.
	To set the microwave functions.
	Press once to use the timer function. Press three times to use the Child lock function.
	To set the end time of cooking.
	To set the Quick preheat.
	To select functions.
	Control bar. To adjust values.
	To select Auto cooking programs.
	To set clock/time/temperature.
	To set the weight.
	To turn the appliance lamp on and off.
	To start or pause cooking.
	To adjust values.

4.3 Accessories

- **Wire shelf**
For cookware, cake tins, grilling, roasting.
- **Baking tray**
For cakes and biscuits.

5. BEFORE FIRST USE



WARNING!

Refer to Safety chapters.

5.1 Setting the time



Set the time before you use the appliance.



When you connect the appliance to the electrical supply or after a power cut, the display shows 0:00 and an acoustic signal sounds.



You can set the time in a 24 hour clock system.

1. Press , then use $+$, $-$ or the control bar to set hours.
2. Press , then use $+$, $-$ or the control bar to set minutes.
3. Press to confirm.

5.2 Initial preheating and cleaning

Preheat the empty appliance before the first use and contact with food. The appliance can emit unpleasant smell and smoke. Ventilate the room during preheating.

1. Press and set the function . Set the maximum temperature. Let the appliance operate for 3 h.
2. Turn off the appliance and wait until it is cold.
3. Clean the appliance and the accessories only with a microfibre cloth, warm water and a mild detergent.

6. DAILY USE



WARNING!

Refer to Safety chapters.

6.1 Heating functions

Standard heating functions



Conventional Cooking

To bake and roast food on one shelf position.
30-250°C



True Fan Cooking

To bake and roast food with the same cooking temperature on more than one shelf position, without flavour transference.
50-250°C



Fan Cooking

To bake and roast food with the same cooking temperature on more than one shelf position. The fan distributes the heat evenly in the cavity.
50-250°C



Grill

To grill or brown thin pieces of food and to toast bread.
150-250°C



Turbo Grilling

To grill or brown thin pieces of food. The fan distributes the heat evenly in the cavity.
50-250°C



Fast Grilling

To grill or brown thin pieces of food.
150-250°C



Pizza Function

To bake pizza and other dishes that require more heat from below.
50-250°C



Bottom Heat

To make browning and crispy bottom. Use the lowest shelf position.
30-220°C



Defrost

To defrost food.



Dough Proving

To prove yeast dough, ferment sourdough, and culture yogurt.
30-45°C

Microwave functions and Microwave combi functions

	Power	Temperature
	Microwave 800 W	-

 	Microwave + True Fan Cooking	320 W	160 °C ¹⁾
 	Microwave + Turbo Grilling	320 W	180 °C ¹⁾
 	Microwave + Pizza	320 W	180 °C ¹⁾

1) You can change the temperature from 50 to 250 °C.



True Fan Cooking, Fast Grilling and Pizza Function can be combined with Microwave. When you select a different function a signal sounds two times and it will not work.

For general energy saving recommendations refer to "Energy Efficiency" > "Energy saving tips".

6.2 Setting: Heating functions

1. Press  to select a heating function.
2. Use $+$, $-$ or the control bar to set the cooking temperature.
3. Press  to set the duration.
4. Use $+$, $-$ or the control bar to set the time.

To cancel the cooking press .



You can change the settings during cooking. After the change, the appliance activates in 6 sec. The settings cannot be changed while cooking with Auto cooking.

6.3 Setting: Microwave functions

1. Insert the food into the appliance.
2. Press  to start with default settings. The default time is 1 min and the default power is 800 W.
3. To adjust the power press , then use $+$, $-$ or the control bar. The range is 80 - 800 W.

4. To adjust the time press  hold 3s, then use $+$, $-$ or the control bar.

To cancel the function press  for 3 sec.

You can pause the cooking by pressing  .

6.4 Auto cooking

Use this function to easily cook favourite food. The appliance automatically sets the optimum settings.

Press  to select desired menu.



Do not use the baking tray while cooking with the following programs: d01, d02, d03, A01, A02.

	Menu	Default time	Weight
d01	Defrost - Meat	08:00 min	200 g
d02	Defrost - Poultry	04:48 min	200 g
d03	Defrost - Fish	04:00 min	200 g
A01	Popcorn	03:05 min	100 g
A02	Potato cheese gratin	35:00 min	500 g
A03	Cheese cake	76:00 min	-
A04	Quiche Lor-aïne	40:00 min ¹⁾	1000 g
A05	Meatloaf	75:00 min	1000 g
		30:00 min	500 g
A06	Marmor cake	80:00 min	-
A07	Flat bread	35:00 min ²⁾	-
A08	Apple Pie	60:00 min ³⁾	-
A09	Pizza	35:00 min ²⁾	-
A10	Apple cake with crumbles	60:00 min	-

1) Preheat the appliance for 10 min.

2) Preheat the appliance for 8 min.

3) Preheat the appliance for 7 min.

7. ADDITIONAL FUNCTIONS

7.1 Quick Preheat

You can use the function to shorten the preheat time.

Press . The symbol appears on the display.

The function does not work for Auto cooking, Defrost and Dough proving. If the function cannot be used acoustic signal sounds.

7.2 Kitchen Timer

You can set a maximum 23:59 h.



When the Kitchen Timer function is active no other programme can be set.

1. Press . Time appears on the display and acoustic signal sounds.
2. Press  then use $+$, $-$ or the control bar to set hours.
3. Press  then use $+$, $-$ or the control bar to set minutes.
4. Press  to confirm.

When the set time is reached, an acoustic signal sounds.

7.3 End Time

You can set the end time of the cooking.

1. Press $\rightarrow$ |, then use $+$, $-$ or the control bar to set hours.
2. Press $\rightarrow$ |, then use $+$, $-$ or the control bar to set minutes.
3. Press $\rightarrow$ | to confirm.
4. Select the function. Refer to "Heating functions".

The function does not work for the Auto cooking, Defrost, Dough proving and Microwave functions.

7.4 Child Safety Lock

The Child Safety Lock prevents an accidental operation of the appliance.

Press and hold  for 3 seconds.

To deactivate the Child Safety Lock press and hold  for 3 seconds.

7.5 Cooling fan

When the appliance operates, the cooling fan turns on automatically to keep the surfaces of the appliance cool. If you turn off the appliance, the cooling fan can continue to operate until the appliance cools down.

8. USING THE ACCESSORIES



WARNING!

Refer to Safety chapters.



Do not use the baking tray for the microwave functions.



Locking Function increases safety and provides tilt protection. The accessories can be pulled out approximately halfway until they lock in place.

The accessories may deform when they become hot. This does not affect their function. Once they have cooled down, they regain their original shape.

The cavity has 5 shelf positions, counting from the bottom of the appliance. While


cooking with the microwave functions use the second level for the best cooking results.

8.1 Inserting the accessories

Wire shelf:

Put the shelf between the guide bars of the shelf support.


Make sure that the shelf touches the back of the cavity and the feet point down.

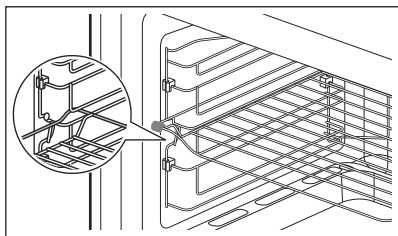

Blocking element on the left side of the wire shelf prevents wrong installation.

Tray:

Push the tray or deep pan between the guide bars of the shelf support.

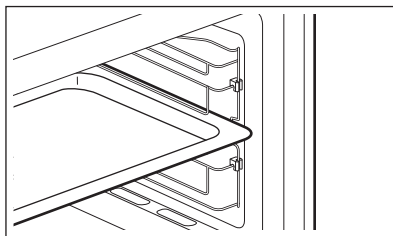

9. HINTS AND TIPS

9.1 General information about using the appliance

- After you deactivate the appliance, leave the food for several minutes.
- Remove the aluminium foil packaging, metal containers, etc. before you prepare the food.

Cooking

- Cook food covered with a material suitable for use in the microwave. Cook food without a cover only if you want to keep it crusty.
- Do not overcook the dishes by choosing too high power settings and too long cooking time. The food can dry out, burn or cause fire.
- Do not use the appliance to cook eggs or snails in their shells as they may explode. With fried eggs, pierce the yolks first.
- Pierce the skin or peel of potatoes, tomatoes, sausages and similar types of food with a fork several times before cooking so that the food does not burst.
- For chilled or frozen food, set a longer cooking time.
- Dishes with sauce must be stirred from time to time.

- Vegetables that have a firm structure, such as carrots, peas or cauliflower, must be cooked in water.
- Turn larger pieces of food halfway through the cooking process.
- If possible, cut vegetables into similar-sized pieces.
- Use flat, wide dishes.
- Do not use cookware made of porcelain, ceramic or earthenware with unglazed bottoms or small openings, for example, on handles. Moisture may get into these openings causing the cookware to crack when heated up.

Defrosting meat, poultry, fish

- Put frozen, unwrapped food on a small angled plate with a container below so that the defrosting liquid collects in the container.
- Turn the food halfway through the defrosting time. If possible, separate and then remove the pieces that started to defrost.

Defrosting butter, portions of gâteau, quark

- Do not fully defrost the food in the appliance, but let it defrost at room temperature. It gives a more even result.

Remove all metal or aluminium packaging before defrosting.

Defrosting fruit, vegetables

- If fruit and vegetables should remain raw, do not defrost them fully in the appliance. Let them defrost at room temperature.
- To cook fruit and vegetables without defrosting them first use a higher microwave power.

Ready meals

- You can prepare ready meals in the appliance only if their packaging is suitable for microwave use.
- You must follow the manufacturer's instructions printed on the packaging (e.g. remove the metal cover and pierce the plastic film).

Suitable cookware and materials

Cookware / Material	Microwave			Grilling / Convection
	Defrosting	Heating	Cooking	
Ovenproof glass and porcelain with no metal components, e. g. Pyrex, heat-proof glass	✓	✓	✓	✓
Non-ovenproof glass and porcelain ¹⁾	✓	x	x	x
Glass and glass ceramic made of ovenproof/frost-proof material (e. g. Arcoflam), grill shelf	✓	✓	✓	✓
Ceramic ²⁾ , earthenware ²⁾	✓	✓	✓	x
Heat-resistant plastic up to 200 °C ³⁾	✓	✓	✓	x
Cardboard, paper	✓	x	x	x
Clingfilm	✓	x	x	x
Roasting film with microwave safe closure ³⁾	✓	✓	✓	x
Roasting dishes made of metal, e. g. enamel, cast iron	x	x	x	✓
Baking tins, black lacquer or silicon-coated ³⁾	x	x	x	✓
Baking tray	x	x	x	✓
Browning cookware, e. g. crisp pan or crunch plate	x	✓	✓	x
Ready meals in packaging ³⁾	✓	✓	✓	✓

¹⁾ With no silver, gold, platinum or metal plating / decorations

²⁾ Without quartz or metal components, or glazes which contain metals

³⁾ You must follow the manufacturer's instructions about the maximum temperatures.

✓ suitable

x not suitable

9.2 Information for test institutes

Food	Function	Accessories	Temperature	Time	Shelf position
Sponge cake ¹⁾		Springform Ø26 cm	170 °C	30 - 35 min	1
Small cake ¹⁾		Baking tray	150°C	30 - 40 min	2
Apple pie		Springform Ø20 cm	160 °C	70 - 80 min	1
Bread ¹⁾		Baking tray	210 °C	30 - 35 min	2
Toast ¹⁾		Wire shelf	MAX	6 - 8 min	5
Chicken ¹⁾		Wire shelf and baking tray	180 °C	75 - 80 min	Wire shelf 2 Baking tray 1

¹⁾ Preheat the oven.

10. CARE AND CLEANING



WARNING!

Refer to Safety chapters.

10.1 Notes on cleaning

Cleaning Agents

- Clean the front of the appliance only with a microfibre cloth with warm water and a mild detergent.
- Use a cleaning solution to clean metal surfaces.
- Clean stains with a mild detergent.

Everyday Use

- Clean the interior of the appliance after each use. Fat accumulation or other residue may cause fire.
- Clean the appliance ceiling carefully from residue and fat.
- Do not store food in the appliance for longer than 20 minutes. Dry the interior of the appliance only with a microfibre cloth after each use.

Accessories


- Clean all accessories after each use and let them dry. Use only a microfibre cloth with warm water and a mild detergent. Do not clean the accessories in a dishwasher.

- Do not clean the non-stick accessories using abrasive cleaner or sharp-edged objects.

10.2 Removing the shelf supports

Turn off the appliance and wait until it is cold.

1. Carefully pull the shelf supports up and out of the front catch.
2. Pull the front end of the shelf support away from the side wall.
3. Pull the supports out of the rear catch.

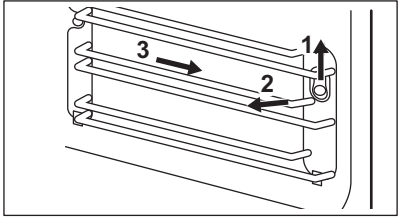

10.3 Replacing the lamp



WARNING!

Risk of burns, the glass cover may be hot. Use protective glove when touching the lamp.

Only service is allowed to replace the lamp.
Contact your Authorised Service Centre.

11. TROUBLESHOOTING



WARNING!

Refer to Safety chapters.

11.1 What to do if...

Problem	Possible cause	Remedy
The appliance does not operate.	The appliance is not plugged in.	Plug in the appliance.
The appliance does not operate.	Lack of Electrical Power Supply.	Check the fuse or the main switch. If the fuse or the switch continue to break the circuit, contact a qualified electrician.
The appliance does not operate.	The door is not closed properly.	Make sure that nothing blocks the door.
The lamp does not operate.	The lamp is defective.	The lamp has to be replaced.
It takes too long to cook the dishes or they cook too quickly.	The temperature is too low or too high.	Adjust the temperature if necessary. Follow the advice in the user manual.
The appliance stops operating without a clear reason.	There is a malfunction.	If this situation repeats itself, call the Authorised Service Centre.

11.2 Service data

If you cannot find a solution to the problem yourself, contact your dealer or an Authorised Service Centre.

The necessary data for the service centre is on the rating plate. The rating plate is on the appliance. Do not remove the rating plate from the appliance.

We recommend that you write the data here:

Model (MOD.)	
Product number (PNC)	
Serial number (S.N.)	

12. TECHNICAL DATA

12.1 Technical data

Voltage	230 V
Frequency	50 Hz
Volume	72 l

Heat source	Electric
Cavities	1

13. ENERGY EFFICIENCY

13.1 Product Information for power consumption and maximum time to reach applicable low power mode

Power consumption in standby	0.8 W
Maximum time needed for the equipment to automatically reach the applicable low power mode	20 min

13.2 Energy saving tips

Following tips below will help you save energy when using your appliance.

Make sure that the appliance door is closed when the appliance operates. Do not open the appliance door too often during cooking. Keep the door gasket clean and make sure it is well fixed in its position.

Use metal cookware and dark, non-reflective tins and containers to improve energy saving (only when you use a non-microwave function).

Do not preheat the appliance before cooking unless specifically recommended.

Keep breaks between baking as short as possible when you prepare a few dishes at one time.

Cooking with fan

When possible, use the cooking functions with fan to save energy.

14. ENVIRONMENTAL CONCERNS

Recycle materials with the symbol . Put the packaging in relevant containers to recycle it. Help protect the environment and human health by recycling waste of electrical and electronic appliances. Do not dispose of

appliances marked with the symbol  with the household waste. Return the product to your local recycling facility or contact your municipal office.





