



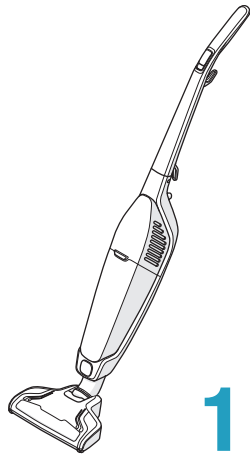


Electrolux

Dynamica
Dynamica Pro
Dynamica Pro Plus



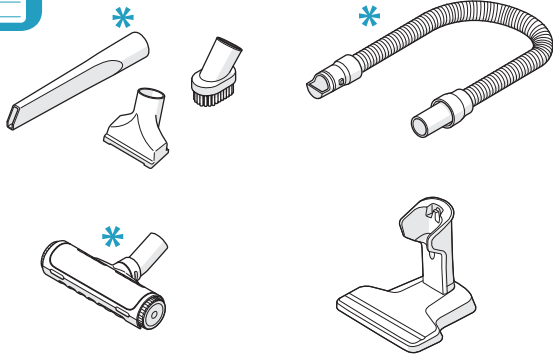


1




* Applies to certain models only | 僅適用於特定型號 | 仅适用于特定型号 | Berkenaan dengan model tertentu saja | Chỉ áp dụng cho một số kiểu máy | ใช้กับเครื่องใช้ไฟฟ้าบางรุ่นเท่านั้น | 특정 모델에만 적용

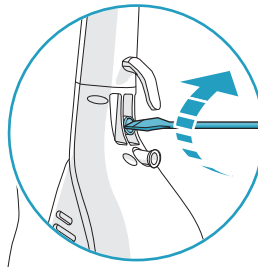



2

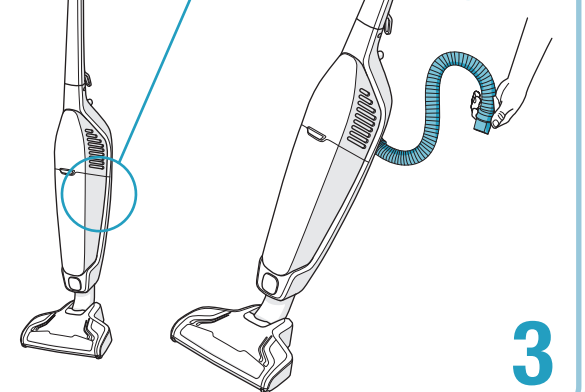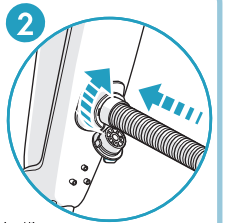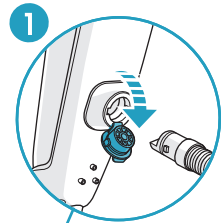

3

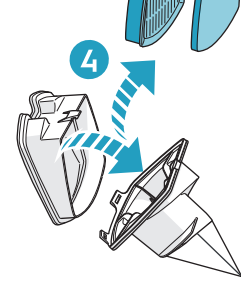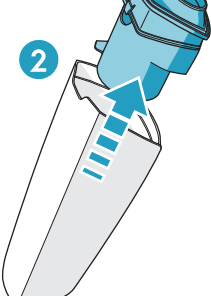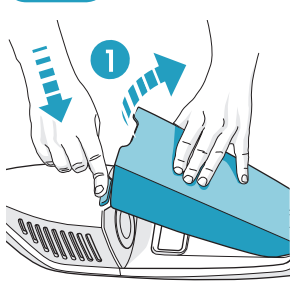

4

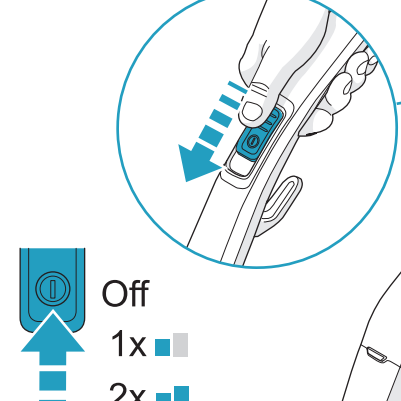
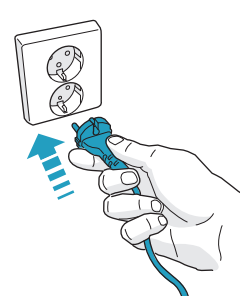


Off
1x
2x

5





R


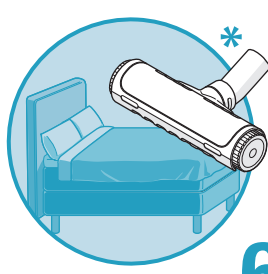
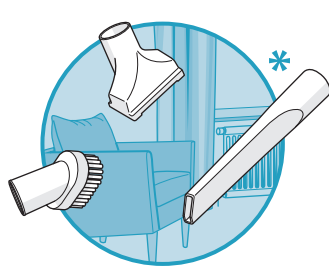


6

R Recommended nozzle | 推薦噴頭 | 推荐喷嘴 | Nosel yang disarankan | đầu hút được khuyến nghị | พัสดุพื้นแนะนำ | 권장 노즐

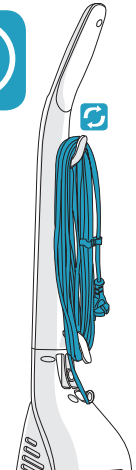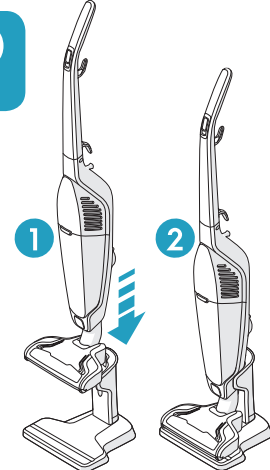




7

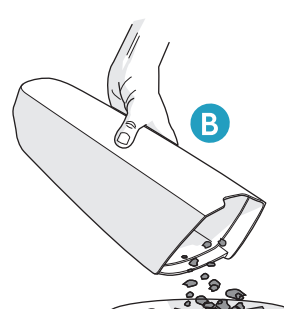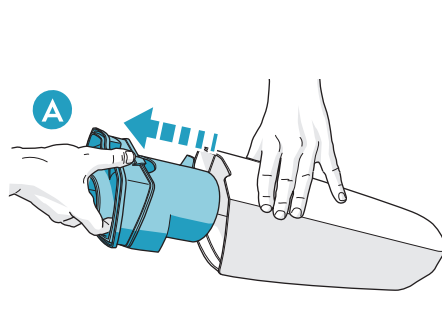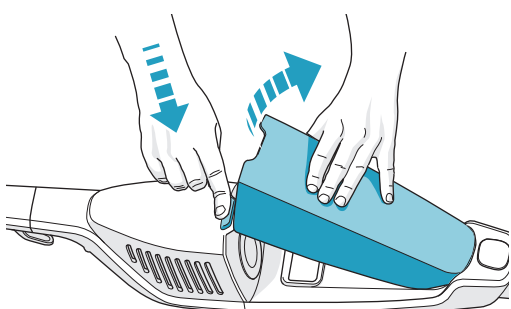

8






www.electrolux.com/shop

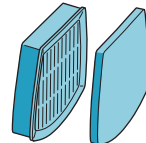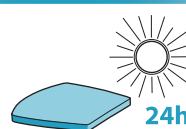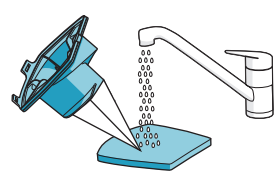

ref: EF 153

9

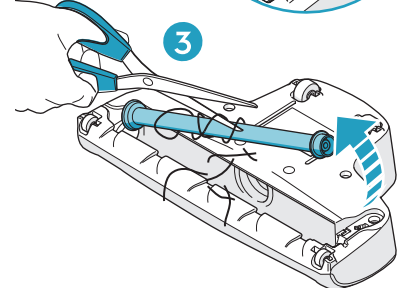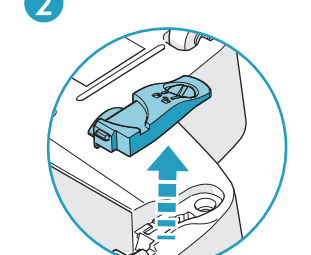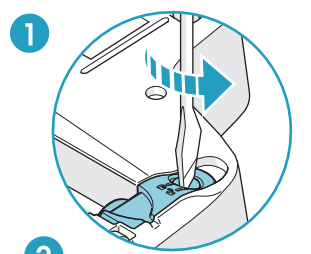

10

www.electrolux.com

A24625601

